Thank you very much for purchasing a new Jetour vehicle.

To know how to correctly operate and maintain your vehicle, please take the time to read this manual carefully.

After you read this manual, please leave it in the vehicle for future reference. Please leave this manual in the vehicle at the same time of resale, as the new owner will also need to read the information in it.

All the information and specifications in this manual are current at the time of printing. Chery Commercial Vehicle Co., Ltd. reserves the right to make changes in design and specifications at any time without notice.

Jetour service station is exclusively authorized by Chery Commercial Vehicle Co., Ltd. and will provide you with professional high-quality services. Remember that Jetour service station knows your vehicle best and has factory trained technicians and OEM parts which will guarantee your satisfaction. Do not use non-OEM parts or accessories to modify your vehicle. Modifying vehicle will affect the vehicle maneuverability, safety or durability.

Depending on specification of equipment and features of your vehicle, some descriptions and illustrations may differ from that on your vehicle.

All data, descriptions and illustrations provided in this manual cannot serve as the basis for lodging a claim.

All rights reserved. This document should not be reproduced or copied, in whole or in part, without the written permission of Chery Commercial Vehicle Co., Ltd.

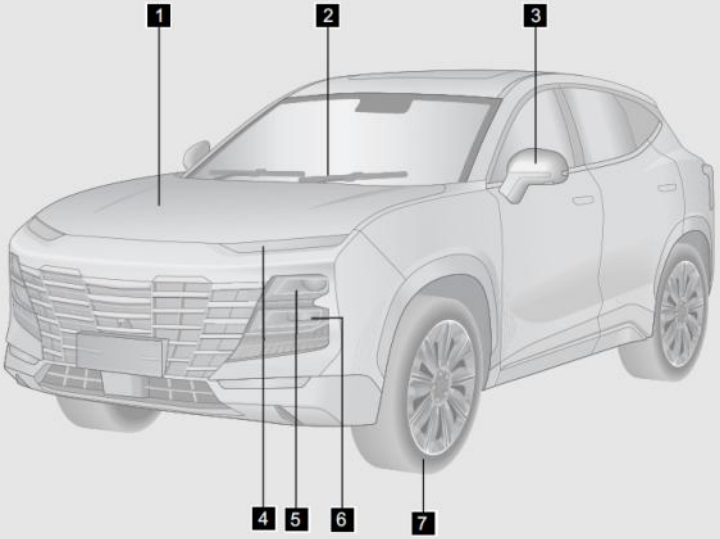

1 Hood P.100
2 Front Wiper Blade P.41
3 Outside Rear View Mirror P.37
4 Daytime Running Light / Turn Signal Light / Position Light P.44
5 Integrated High and Low Beams P.43
6 Cornering Light P.45
7 Tire P.176

Note: For all equipment, please refer to the actual vehicle.

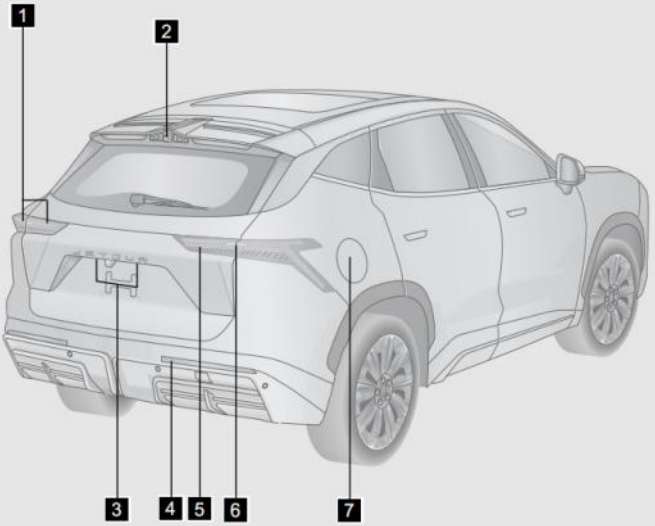

1 Turn Signal Light / Position Light P.44
2 High Mounted Brake Light P.44
3 License Plate Light P.43
4 Fog Light P.44
5 Back-up Light P.44
6 Brake light P.44
7 Fuel Tank Cap P.104

Note: For all equipment, please refer to the actual vehicle.

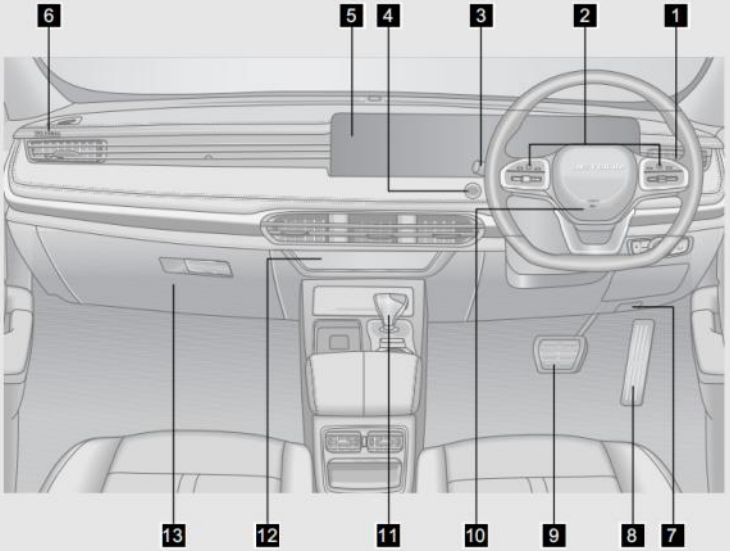

1 Headlight Combination Switch P.43
2 Steering Wheel Buttons P.34
3 Wiper Combination Switch..... P.39
4 ENGINE START STOP Switch..... P.108
5 Instrument Cluster..... P.24
Multimedia Display P.83
6 Front Passenger Airbag P.129
7 Hood Release Lever..... P.100
8 Accelerator Pedal
9 Brake Pedal
10 Driver Frontal Airbag P.129
11 Shift Lever P.113
12 Air Conditioning Panel P.89
13 Glove Box..... P.96

Note: For all equipment, please refer to the actual vehicle.

1. INTRODUCTION

1-1. How to Read This Manual

How to Read This Manual....2
Table of Contents 2
Pictorial Index.....2
Index 2

1-2. Symbols in the Manual

Symbols in the Manual 3

1-3. New Vehicle Inspection

User Registration Certificate.....4
Jetour Delivery Card 5

1-4. "Person-to-Person" Consultative Service Card

"Person-to-Person" Consultative Service Card.....7

1-5. New Vehicle Inspection

New Vehicle Inspection 11
Delivery Inspection Certificate..... 11

1-6. New Vehicle Break-in

New Vehicle Break-in..... 12

1-7. How to Save Fuel and Extend Life of Vehicle

How to Save Fuel and Extend Life of Vehicle..... 13

1-8. Precautions Before Driving Vehicle

Safety Check 14
Before Starting Engine 14
After Starting Engine..... 15
When Driving..... 15
Parking Operations..... 15
Parking on Slope..... 16
Check the Exhaust System 17

1-9. Off-road Driving Precautions

Off-road Driving..... 18

1-10. Precautions When Driving in the Rain

When Driving on Slippery Road Surfaces..... 18
Driving Through Water 19

1-11. Winter Driving Precautions

Winter Driving Tips 20
Driving on Road Covered with Ice and Snow..... 21
Tire Chains..... 21

2. PREPARATION FOR DRIVING

2-1. Instrument Cluster

Instrument Cluster Overview..... 24
Operation/Malfunction Indicator..... 30

2-2. Steering Wheel

Horn..... 34
Steering Wheel Buttons (If Equipped)..... 34
Adjusting Steering Wheel..... 35

2-3. Rear View Mirror

Inside Rear View Mirror..... 36
Outside Rear View Mirror..... 37

2-4. Wiper System

Wiper Operation..... 39
Replacing Wiper Blade..... 41

2-5. Lighting System

Exterior Lighting 43

Interior Lighting 45
Fogging Instructions for Light 46

2-6. Seat

Correct Sitting Posture 47
Head Restraint 48
Front Seat 49
Second Row Seat 50

2-7. Seat Belt

Seat Belt 51
Seat Belt Pretensioner (If Equipped) 55

2-8. Child Restraint System

Child Restraint System 56
Installation of Child Restraint System (ISOFIX) 59

3. INTERIOR FUNCTION

3-1. Key Information

Smart Key 64
Replacing Smart Key Battery 65
Vehicle Locating Mode 67
Remote Start/Stop 67
Effective Range 68
Keyless Entry 68
Welcome Function 69
Vehicle Arming 70
Immobilizer System 71

3-2. Doors

Door Lock Switch 72
Unlocking Doors with Inside Handle 73
Door Mechanical Switch 73
Child Lock 75

3-3. Windows

Window Setting 76
Window Remote Control Function 77
Window Jam Protection Function 77

3-4. Panoramic Moon Roof (If Equipped)

Opening/Closing Moon Roof 79
Opening/Closing Sunshade 80

3-5. Multimedia Display

Multimedia View 83
Vehicle Setting 85
Phone-link (If Equipped) 87

3-6. Air Conditioning System

Air Conditioning System 89
Function Definition 90
Refrigeration Function of Armrest Box on Auxiliary Fascia Console 93

3-7. Wireless Charging (If Equipped)

Wireless Charging 93

3-8. Storage Space

Storage Space 95

3-9. Power Outlet

Power Outlet 98

3-10. USB Port

Front 98
Rear 99

3-11. Sun Visors and Vanity Mirrors

Sun Visors and Vanity Mirrors 99

3-12. Hood

Opening/Closing Hood 100

3-13. Back Door

Power Back Door (If Equipped) 101
Back Door Emergency Opening..... 103

3-14. Fuel Tank Cap

Opening/Closing Fuel Tank Cap 104

4. DRIVING VEHICLE

4-1. Vehicle Power Mode

ENGINE START STOP Switch 108

4-2. Starting and Driving

Starting Vehicle..... 108
Driving Vehicle..... 109
Turning Off Vehicle 111
Adaptive Engine Control System 111

4-3. Gasoline Particulate Filter (GPF) (If Equipped)

Particulate Filter..... 112

4-4. Transmission

Automatic Transmission..... 113
Shift Paddle (If Equipped) 116
Driving mode 116

4-5. Steering System

Electric Power Steering System (EPS)..... 117

4-6. Brake System

Pedal..... 118
Electric Parking Brake (EPB) System..... 118
Automatic Parking System (AUTO HOLD).... 120
Foot Brake 122

4-7. Anti-lock Brake System (ABS)

Anti-lock Brake System (ABS) 124

4-8. Integrated Vehicle Body Dynamic Electronic Stability Program System

Vehicle Body Dynamic Electronic Stability Program System 126
Extended Function 127

4-9. Airbag (SRS)

Introduction of Airbag (SRS) 129
Airbag Position..... 129
Using Airbag Correctly 130

5. DRIVING ASSISTANCE

5-1. Cruise System

Cruise Control System (CCS) (If Equipped) 140

5-2. Hill Descent Control (HDC) System

Hill Descent Control (HDC) System 142

5-3. Blind Spot Detection System (BSD)

Blind Spot Detection System (BSD) (If Equipped) 142
Door Open Warning System (DOW) (If Equipped) 144
Rear Cross Traffic Alert System (RCTA) (If Equipped) 144

5-4. Tire Pressure Monitoring System (TPMS)

Tire Pressure Monitoring System (TPMS) 145

5-5. Parking Assist System

Parking View Monitor System (If Equipped) 146
Panoramic View Monitor System (If Equipped) 148
Parking Radar System 151

6. IN CASE OF AN EMERGENCY

6-1. Basic Knowledge of Vehicle Emergency

Hazard Light 154
Reflective Vest 154
Warning Triangle 154
Spare Tools 155

6-2. Vehicle Emergency Handling

Tire Change Operation 155
If Engine Coolant Temperature is High..... 159
If Battery is Depleted..... 160
If Your Vehicle Cannot Start Normally..... 162

6-3. Towing

Towing Vehicle 163
Emergency Towing Vehicle..... 164
Installing Towing Eyelet ... 165

6-4. Fuse

Fuse Box 166
Checking Fuse..... 167
Replacing Fuse..... 167

7. MAINTENANCE

7-1. Repair and Maintenance

Repair and Maintenance..... 170
Jetour Authorized Service Station Provides Service for You 170

7-2. Normal Maintenance

Normal Maintenance..... 170
Checking Oil Level..... 171
Checking Brake Fluid Level 173
Checking Coolant Level 174
Checking Windshield Washer 174
Checking Radiator and Condenser 175
Checking Battery..... 175
Checking Drive Belt 175
Checking Tires..... 176
Tire Rotation..... 178
Checking Air Conditioning Filter 178
Checking Wiper Blades ... 178

7-3. Regular Maintenance

First Maintenance Card ... 181
Maintenance Schedule.... 183
Technical Data 188
Safety Protection System Record 188

8. SPECIFICATION

8-1. Label Location

Vehicle Identification Number (VIN) 192
Manufacturer Name Plate..... 192
Engine Number..... 193
Microwave Window..... 193

8-2. Vehicle Specifications

Vehicle Dimensions 194
Vehicle Type 195
Vehicle Performance 195
Fuel System 196
Vehicle Weight 197
Engine 198
Transmission 199
Wheel Alignment 199
Wheel and Tire 200
Brake System 201
Suspension System 201
Steering System 201
Battery 201
Measurement Range of Vehicle Overall Size Excluding Following Components 201

ALPHABETICAL INDEX

INTRODUCTION

1-1. How to Read This Manual
How to Read This Manual 2
Table of Contents 2
Pictorial Index.....2
Index.....2

1-2. Symbols in the Manual
Symbols in the Manual.....3

1-3. New Vehicle Inspection
User Registration Certificate 4
Jetour Delivery Card.....5

1-4. "Person-to-Person" Consultative Service Card
"Person-to-Person" Consultative Service Card 7

1-5. New Vehicle Inspection
New Vehicle Inspection 11
Delivery Inspection Certificate 11

1-6. New Vehicle Break-in
New Vehicle Break-in..... 12

1-7. How to Save Fuel and Extend Life of Vehicle
How to Save Fuel and Extend Life of Vehicle 13

1-8. Precautions Before Driving Vehicle
Safety Check..... 14
Before Starting Engine 14
After Starting Engine..... 15
When Driving..... 15
Parking Operations..... 15
Parking on Slope..... 16
Check the Exhaust System 17

1-9. Off-road Driving Precautions
Off-road Driving 18

1-10. Precautions When Driving in the Rain
When Driving on Slippery Road Surfaces..... 18
Driving Through Water 19

1-11. Winter Driving Precautions
Winter Driving Tips 20
Driving on Road Covered with Ice and Snow 21
Tire Chains..... 21

1-1. How to Read This Manual

How to Read This Manual

There are three methods available for you to find the information you need in this manual. Here is a brief introduction of each method.

Table of Contents

Consult the general Table of Contents to determine which chapter of the Owner's Manual contains the information you need and the Chapter Contents to determine its accurate location.

Pictorial Index

The Pictorial Index is a helpful assistant to find the required information quickly, especially when you are not familiar with the component name.

Index

This is the fastest method for you to find the information you need. The index contains a complete listing of all the important vehicle terminologies.

1-2. Symbols in the Manual

Symbols in the Manual

The following symbols are used in this manual to draw your attention to the information of particular importance. In order to minimize the risks as much as possible, please read the instructions on these symbols carefully before driving, and make sure to follow them.

⚠ WARNING
Indicate a potentially hazardous situation which, if not avoided, may result in damage to your property, personal injury or even death.

⚠ CAUTION
Indicate a potentially hazardous situation which, if not avoided, may result in damage to your vehicle and its equipment, reducing the vehicle's life span.

ENVIRONMENTAL PROTECTION
Indicate that the waste must be handled or disposed according to the local environmental protection regulations, otherwise, the environment will be contaminated.

READ
Indicate that the relevant chapter in this manual must be read before any operation.

WARNING and CAUTION relating to personal safety and vehicle safety in this manual are very important. Make sure everyone in the vehicle follows these instructions carefully. So that, not only you can enjoy driving pleasure but also vehicle can be kept in good condition.

1-3. New Vehicle Inspection

Prior to your purchase, Jetour authorized service station has inspected your vehicle according to the regulations of Chery Commercial Vehicle Co., Ltd. The service station will record the delivery date and affix its official seal to the User Registration Certificate. Before you sign the User Registration Certificate, the authorized dealer will provide you with instructions regarding your vehicle's overall performance and some basic knowledge about its features and regular operation according to the Vehicle Delivery Card.

User Registration Certificate

Model Code	
Vehicle Identification Number (VIN)	
Engine Number or Transmission Number	
Vehicle Registration Number	
Seal of Dealer:	
Signature of Dealer:	
Delivery Date	
User	
Address	
E-mail	
Telephone	
Have provided and explained the following items for me: • VEHICLE • OWNER'S MANUAL • PRE-DELIVERY INSPECTION	
Signature of User:	
Signature of Dealer:	

Jetour Delivery Card

Category	No.	Items	Whether Pass Inspection and Explain Clearly	
Vehicle Performan-ce	1	Engine	YES ☐	NO ☐
	2	Engine oil, brake fluid, power steering fluid (if equipped), coolant, windshield washer fluid	YES ☐	NO ☐
	3	VIN code, engine number and nameplate etc.	YES ☐	NO ☐
	4	Whole set of vehicle keys	YES ☐	NO ☐
	5	All lights of vehicle	YES ☐	NO ☐
	6	Windshield and painted surfaces	YES ☐	NO ☐
	7	Speedometer, tachometer and instrument cluster LCD display	YES ☐	NO ☐
	8	Tires, spare tires, spare tools and Owner's Manual	YES ☐	NO ☐
	9	Seats, seat belts, A/C switches and outlets, glove box and sun visors	YES ☐	NO ☐
	10	Windows, rear view mirrors, windshield wipers, windshield washers, battery, reversing radar system, horns, moon roof (if equipped), audio device and antenna	YES ☐	NO ☐

Category	No.	Items	Whether Pass Inspection and Explain Clearly	
Basic Knowledge About Operation	1*	Unleaded gasoline with an octane number of 91 or higher	YES ☐	NO ☐
		Unleaded gasoline with an octane number of 92 or higher	YES ☐	NO ☐
		Unleaded gasoline with an octane number of 95 or higher	YES ☐	NO ☐
		E22-E100	YES ☐	NO ☐
	2	Normal operation during the break-in period	YES ☐	NO ☐
	3	Operation of all the vehicle lights	YES ☐	NO ☐
	4	Understanding warning lights and indicator lights	YES ☐	NO ☐
	5	Correct time/mileage of the maintenance schedule	YES ☐	NO ☐
	6	Vehicle maintenance in winter/summer	YES ☐	NO ☐
	7	Thorough understanding of the cooling system and normal usage of the coolant	YES ☐	NO ☐
	8	Correct operation of air conditioning	YES ☐	NO ☐
	9	Precautions during starting the vehicle	YES ☐	NO ☐
	10	Correct operation of audio system	YES ☐	NO ☐
	11	Correct usage of moon roof (if equipped)	YES ☐	NO ☐
Signature of Sales Clerk: Date:				
Signature of User: Date:				

*: Please use the fuel recommended by Jetour authorized dealers.

1-4. "Person-to-Person" Consultative Service Card

"Person-to-Person" Consultative Service Card

Jetour authorized service station will provide a dedicated service consultant when you purchase your vehicle. If you have any questions concerning your vehicle, please consult the advisor.

Sheet One (for User)

Name of User:	Date of Purchase:
Dealer of Sales & Service:	Model:
Vehicle Identification Number (VIN):	
The following items should be confirmed by the user:	
1. Vehicle Delivery and Inspection (Mark a " √ " for " Yes " and a " × " for Other Conditions):	
☐	Have introduced the basic operation of the vehicle to the user and performed the delivery inspection.
☐	Have explained the warranty policies to the user.
☐	Have explained the precautions of driving to the user.
☐	Have explained the importance of regular maintenance and the maintenance interval time/mileage to the user.
☐	Have explained the importance of having regular maintenance/vehicle repair performed at Jetour authorized service station to the user.
☐	Have delivered the Owner's Manual to the user and reminded him/her to read it.
☐	Have informed Jetour service hotline function and how to use it.
2. "Person-to-Person" Consultative Service Mode Introduction (Mark a " √ " for " Yes " and a " × " for Other Conditions):	
☐	If you have questions and demands, consult a service consultant.
☐	The service consultant is the only person authorized by the dealer to answer the user's questions.
☐	Have assigned a dedicated service consultant to each user for "Person to- Person" service.
☐	If the user is not fully satisfied with the service consultant, the user can select another service consultant.
The following items should be confirmed by the user:	
3. Main Work Introduction on Service Consultant (Mark a " √ " for " Yes " and a " × " for Other Conditions):	

☐	Service reception during service and maintenance.
☐	Regular maintenance reminding.
☐	Answer the service/maintenance consultation.
☐	Service/maintenance reservation acceptance.
☐	Annual inspection reminding/acceptance.
☐	Regular greeting revisit, service activity reminded revisit and important holiday greeting.
☐	Other demands from the user.
4. "Person-to-Person" Consultative Service Relationship Establishment:	
Service consultant business card	
Signature of User/Date:	
Signature of Service Consultant/Date:	

Sheet Two (for Dealer of Sales & Service)

Name of User:	Date of Purchase:
Dealer of Sales & Service:	Model:
Vehicle Identification Number (VIN):	
The following items should be confirmed by the user:	
1. Vehicle Delivery and Inspection (Mark a " √ " for " Yes " and a " × " for Other Conditions):	
☐	Have introduced the basic operation of the vehicle to the user and performed the delivery inspection.
☐	Have explained the warranty policies to the user.
☐	Have explained the precautions of driving to the user.
☐	Have explained the importance of regular maintenance and the maintenance interval time/mileage to the user.
☐	Have explained the importance of having regular maintenance/vehicle repair performed at Jetour authorized service station to the user.
☐	Have delivered the Owner's Manual to the user and reminded him/her to read it.
☐	Have informed Jetour service hotline function and how to use it.
2. "Person-to-Person" Consultative Service Mode Introduction (Mark a " √ " for " Yes " and a " × " for Other Conditions):	
☐	If you have questions and demands, consult a service consultant.
☐	The service consultant is the only person authorized by the dealer to answer the user's questions.
☐	Have assigned a dedicated service consultant to each user for "-Personto- Person" service.
☐	If the user is not fully satisfied with the service consultant, the user can select another service consultant.
The following items should be confirmed by the user:	
3. Main Work Introduction on Service Consultant (Mark a " √ " for " Yes " and a " × " for Other Conditions):	
☐	Service reception during service and maintenance.
☐	Regular maintenance reminding.
☐	Answer the service/maintenance consultation.
☐	Service/maintenance reservation acceptance.
☐	Annual inspection reminding/acceptance.

☐	Regular greeting revisit, service activity reminded revisit and important holiday greeting.
☐	Other demands from the user.
4. "Person-to-Person" Consultative Service Relationship Establishment:	
Service consultant business card	
Signature of User/Date:	
Signature of Service Consultant/Date:	

1-5. New Vehicle Inspection

New Vehicle Inspection

The dealer of sales & service has inspected your vehicle according to the regulations of Jetour before delivering the vehicle to you. The dealer of sales & service of Jetour Auto should fill the delivery date in the inspection certificate and affix the official seal of dealer unit.

Dealer unit will verify the vehicle to you in accordance with "Jetour Delivery Card", and introduce the knowledge of vehicle, which will be signed by salesman and user.

Delivery Inspection Certificate

In witness whereof, this vehicle has passed delivery inspection as regulated by Jetour Automobile Co., Ltd. and quality meets technical specification of Jetour.

Vehicle Model	
Vehicle Identification Number (VIN)	
Engine Number or Transmission Number	
Vehicle Registration Number	
Official Seal of Dealer of Sales & Service:	
Signature of Dealer of Sales & Service:	
Delivery Date	
User	
Address	
E-mail	
Telephone	
Have provided and explained the following items for me: • VEHICLE • OWNER'S MANUAL • PRE-DELIVERY INSPECTION	
Signature of User:	
Signature of Dealer of Sales & Service:	

1-6. New Vehicle Break-in

New Vehicle Break-in

Since the frictional resistance between the moving parts of new vehicle is much larger in the initial use than normal conditions. The break-in effect of initial use will have a great impact on the vehicle's life, operation reliability and economy, so the use of new vehicle must strictly enforce the regulations. The break-in period is 3,000 kilometers in general.

■ Driving regulations of new vehicle break-in period

Within the first 1,000 km:

- Prohibit driving at full speed;
- Driving speed should not be more than 100 km/h;
- Avoid driving at maximum speed in each gear.

Within the first 1,000 - 1,500 km:

- Driving speed can be gradually increased to the highest speed;
- Engine speed can be gradually increased to the maximum allowable speed.

■ Driving recommendations after break-in period

- When driving a vehicle, the maximum speed which engine allows to run in short time is 6,000 r/min. When shifting manually, shift to nearby high gear while the tachometer pointer reaches the red indicator zone.
- Engine speed should not be too low while driving, it is necessary to shift to the appropriate gear. When the engine is cold, do not run the engine at its maximum speed whether in neutral or in other driving gears.

■ Tire and wheel break-in recommendations:

When starting to use new tires, the best adhesion is not available. Therefore, new tires also need break-in, so the vehicle should be driven slowly and especially carefully within the first 100 km of driving.

■ Braking system break-in recommendations:

New brake lining also needs break-in. Because the brakes cannot provide the ideal brake friction during the first 200 km. If the braking efficiency is slightly worse at this stage, increasing depression force on the pedal appropriately. This condition also applies to the each replacement of braking lining later.

ENVIRONMENTAL PROTECTION
Avoid running engine at unnecessary high speed. Switching to a high gear in time is helpful to save fuel, reduce operation noise and reduce environmental pollution.

1-7. How to Save Fuel and Extend Life of Vehicle

How to Save Fuel and Extend Life of Vehicle

Saving fuel is largely determined by vehicle conditions and driving habit. Do not overuse the vehicle, which also helps to extend vehicle's life.

The followings are specific tips for fuel saving:

1. Make sure to maintain proper tire inflation pressure. Insufficient tire inflation pressure will lead to tire wear and fuel waste.
2. The vehicle should not be loaded with unnecessary weight. Heavy load increases engine load, resulting in high fuel consumption.
3. Avoid warm-up idling for a long time. The vehicle can be driven once the engine runs smoothly. The warm-up time in cold winter will be longer than other seasons.
4. Accelerate slowly and smoothly. Avoid sudden starting.
5. Avoid engine idling for a long time. If you need to park vehicle and wait for a long time, you should turn off the engine and turn it on again later.
6. Avoid engine out of gear or overspeed. Select proper gears according to driving road conditions.
7. Avoid continuous acceleration and deceleration. Stop-and-go driving will waste the fuel.
8. Avoid unnecessary stopping and braking. You should keep a stable speed. Obey the traffic lights while driving to minimize parking times, or take full advantage of road without traffic lights to drive vehicle. Maintain a proper driving distance with other vehicles to avoid sudden braking. It will also reduce brake wear.
9. Avoid areas with heavy traffic or traffic jams as possible.
10. Do not hold your foot on clutch or brake pedals for a long time. This will cause premature wear, overheating and high fuel consumption.
11. Keep a proper vehicle speed on the highway. The faster vehicle speed, the more fuel consumption. Decreasing vehicle speed will save fuel.
12. Keep proper front wheel alignment. Avoid collision with road curbs and reduce your vehicle speed when driving on rough road surfaces. Improper front wheel alignment will not only quicken tire wear, but also increase engine load.
13. Avoid contacting vehicle chassis with mud, etc.
14. Adjust vehicle and keep it in optimal working condition. Dirty air filter, improper valve clearance, dirty spark plugs, dirty oil and grease, brakes without proper adjustment, etc. can reduce engine performance and waste fuel. You must perform maintenance periodically if you want to extend your vehicle's life and reduce your driving costs. Your vehicle needs to be serviced more frequently if you always driving under severe conditions.

⚠ CAUTION
Never turn off engine when driving downhill. The power steering system and brake system will not operate normally when engine is not running.

1-8. Precautions Before Driving Vehicle

Safety Check

It is better to do a safety check before driving vehicle. A few minutes of checking can help ensure safe and pleasant driving.

⚠ WARNING
If you perform this check in an enclosed garage, make sure there is adequate ventilation.

Before Starting Engine

■ Outside vehicle

1. Tires (including spare tire): Check tire pressure with a tire pressure gauge and carefully check tires for cuts, damage or excessive wear.
2. Wheel bolts: Make sure no wheel bolts are missing or loose.
3. Fluid leaks: After the vehicle has been parked for a while, check underneath for leaking fuel, oil, coolant or other fluids (Water dripping from air conditioning after use is normal).
4. Lights: Make sure the headlights, daytime running lights, brake lights, fog lights, turn signal lights and other lights are working properly.
5. Intake grilles: Remove snow, leaves or other obstructions from the intake grilles in front of windshield.

■ Inside vehicle

1. Spare tools: Make sure you have spare tools, such as jack, wheel bolt wrench and spare tire.
2. Seat belts: Check if the buckles can be locked securely. Make sure belts are not worn or frayed.
3. Instrument cluster and controls: Especially make sure the malfunction indicator lights, indicator lights, and controls are working properly.
4. Brakes: Make sure the pedal has enough clearance.

■ Engine compartment and engine

1. Spare fuses: Make sure spare fuses are available. All the fuses with amperage ratings designated on the fuse box cover should be provided.
2. Coolant level: Make sure coolant level is proper.

3. Battery and cables: Check for corroded or loose terminals and a cracked case. Check the cables for good condition and connections.
4. Wiring: Check for damaged, loose or broken wires.
5. Fuel lines: Check the lines for leaks or loose connections.

■ Hood

Make sure the hood is locked completely before driving. Otherwise, the hood may tilt up and block front view when vehicle is moving, which could lead to an accident.

After Starting Engine

1. Exhaust system: Listen for any leakage. Repair any leaks immediately if such condition occurs.
2. Engine oil level: Stop vehicle on level ground, turn off engine and wait for 5 minutes, pull out the dipstick to check if the engine oil level is proper.

When Driving

1. Gauges and meters: Make sure each the indication of gauges and meters are working properly.
2. Brakes: At a safe place, check that the vehicle is not be pulled to one side when the brakes are applied.
3. Other abnormal conditions: Check for loose parts and leaks. Listen for abnormal noises.

Parking Operations

Proper parking is an important part of safety driving, park the vehicle in a place with wide road, good view without affecting traffic. Parking operation steps are as follows:

1. Depress clutch (vehicle with manual transmission) and brake pedal until the vehicle is completely stopped.
2. Confirm that the electronic parking is enabled.
3. For vehicle with automatic transmission: Move shift lever to "P" position. For vehicle with manual transmission: Move shift lever to neutral position.
4. Turn ENGINE START STOP switch to OFF mode.

⚠ CAUTION
When you leave vehicle, make sure to lock your vehicle and carry the vehicle's key with you.

Parking on Slope

Parking vehicle on a slope is mainly by brake force of parking brake. Failure to apply parking brake or parking brake malfunction may cause the vehicle to slide downwards along slope and personal injury or damage to vehicle. When parking on a slope, it is better to face tires toward one side of vehicle, to prevent vehicle from moving accidentally.

■ Parking on downhill with curb

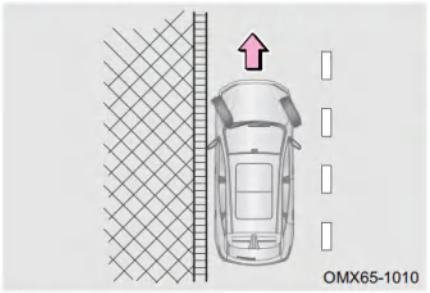

If there is curb on roadside, turn steering wheel to left by a certain angle to make front part of front right wheel close to or against the curb, to prevent vehicle from sliding forward along the slope, then apply the park brake.

■ Parking on uphill with curb

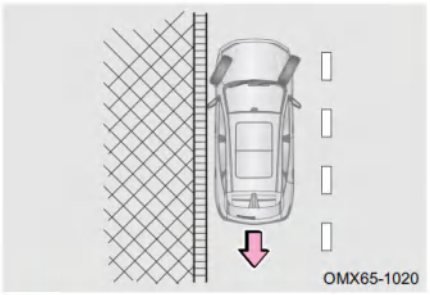

If there is curb on roadside, turn steering wheel to right by a certain angle to make rear part of front right wheel close to or against the curb, to prevent vehicle from sliding backward along the slope, then apply the park brake.

■ Parking on uphill or downhill (without curb)

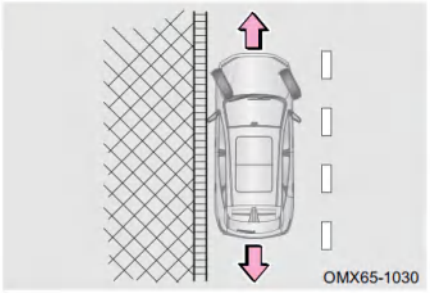

If there is no curb on roadside, turn steering wheel left by a large angle, to prevent vehicle from driving into center of road after sliding forward/ backward along the slope. Turn steering wheel to side of road so that vehicle is far away from center of road when moving, then apply the parking brake.

■ Carrying passengers

Before driving, make sure all passengers sit in their seats with their seat belts properly fastened. Do not let the passengers sit in the places where there are no seats and seat belts, as they are likely to be seriously injured during a collision.

■ Locking the vehicle

- When leaving the vehicle unattended, carry smart key with you and lock all the doors, even if parking the vehicle in the garage or on the sidewalk in front of your house.
- Park the vehicle in bright and spacious places as much as possible, and do not expose valuable items.

■ Exhaust gas

- Avoid inhaling the engine exhaust gas. It contains carbon monoxide (CO), which is a harmful, colorless and odorless gas. It can cause unconsciousness or even death after inhaling.
- Make sure the exhaust system has no leakage holes or loose connections. The exhaust system should be checked usually. If a change in exhaust gas sound is found, please have the system checked immediately.
- Do not run the engine in a garage or an enclosed area except for the time needed to drive the vehicle in or out. The exhaust gas cannot escape, which may cause serious injury.
- Do not stay in a parked vehicle for a long time with the engine running. If it is unavoidable, vehicle should be parked in a spacious area and adjust heating and cooling system to forcibly introduce outside air into vehicle.
- Keep the back door closed while driving. An open or unclosed back door may cause exhaust gas to enter the vehicle.
- To achieve proper operation of vehicle ventilation system, keep intake grilles free of snow, leaves, or other obstructions.
- If you smell exhaust fumes in vehicle, open windows to allow fresh air to enter and check vehicle condition.

Check the Exhaust System

The exhaust system should be checked in the following situations:

1. When you smell the exhaust fumes;
2. When you notice a change in the sound of exhaust system;
3. When exhaust system is damaged due to vehicle collision;
4. When the vehicle is lifted for inspection and repair.

1-9. Off-road Driving Precautions

Off-road Driving

Always observe the following precautions to minimize the risk of serious personal injury or damage to your vehicle:

- Be careful when driving off the road. Do not drive in dangerous areas.
- Place both hands on the outer ring of the steering wheel when driving off the road.
- Always check your brakes for effectiveness immediately after driving on the road covered with sand, mud, shallow water or snow.
- The driver and all passengers should fasten their seat belts whenever vehicle is moving.

> ⚠ WARNING
>
> - After driving on road surfaces covered with tall grass, mud, gravel, sand, rivers, etc., check if there is grass, bush, paper, rags, stone, sand, etc. adhering to or trapped on underbody. Clear off any above materials from the underbody. If driving vehicle with those matters trapped on or adhering to the underbody, a breakdown or fire could occur.
> - When driving off road or on rugged terrain, high speed driving, jumping, sharp turning and striking objects, etc. are forbidden. Failure to do so may cause loss of control or vehicle rollover, resulting in death or severe personnel injury. You are also risking expensive damage to your vehicle's suspension and chassis.

1-10. Precautions When Driving in the Rain

When Driving on Slippery Road Surfaces

Drive carefully when it is raining, because visibility will be reduced, windows may become fogged-up and road will be slippery.

- Do not drive at high speed when driving on an expressway in rain, because there may be a layer of water between tires and road surface, preventing steering system and brakes from operating properly.

⚠ CAUTION

- Sudden braking, acceleration and steering on slippery road surfaces may cause tire slippage and reduce your ability to control vehicle, resulting in an accident.
- Sudden changes in engine speed, such as sudden engine braking may cause vehicle to skid, resulting in an accident.
- After driving through a puddle, lightly depress brake pedal to make sure brakes are functioning properly. Wet brake lining may prevent brakes from functioning properly. If brake lining on one side is wet and not functioning properly, steering control may be affected, resulting in an accident.

Driving Through Water

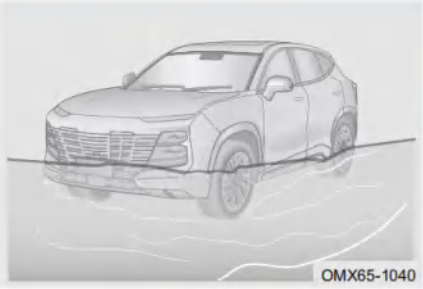

The vehicle could be seriously damaged when driving on a road that has flooded after heavy rain. If driving through water is unavoidable, check the depth of the water and drive slowly and carefully.

1. When you are driving through water, make sure that the engine runs properly and that the steering and braking system works normally. When driving smoothly through water, you should switch to low gear and avoid a sudden depression of the accelerator pedal or a rush driving. Doing so may prevent water from splashing into the engine.
2. Depress and hold accelerator pedal while driving, make sure vehicle has adequate and stable power. You should drive through without half-way stopping, gear shifting or sharp turning.
3. If vehicle stalls in water, never restart it immediately to prevent further damage to engine. The vehicle should be towed to a safe place where the water is shallow to find out the cause.

⚠ CAUTION

- Never drive through water that is deeper than wheel rim.
- Water intrusion into engine can cause it to stall, or cause serious internal damage.
- Water can wash the grease from the wheel bearing, causing rusting and premature abrasion.
- Driving through water may cause damage to your vehicle drive train components. Always visually inspect your vehicle's fluids (e.g. engine oil, transmission fluid, etc.) for signs of leakage after driving through water. Do not continue to operate vehicle if any fluid leaks, as this may result in further damage.
- Vehicle traction and braking performance will decrease while driving through water. The braking distance will increase. Sand and mud that have accumulated around the brake discs may affect the braking efficiency and may damage the brake system components. After driving through water, slightly depress the brake pedal for several times to dry the brakes off.

1-11. Winter Driving Precautions

Winter Driving Tips

- Coolant: Make sure that coolant has anti-freezing function. Only use coolant recommended by Jetour.
- Battery and cables: Low temperature will decrease power of battery. Sufficient power should be stored in battery for starting in winter.
- Oil: In winter, it is recommended to choose appropriate engine oil according to the local temperature condition. The lower viscosity at low temperature, the better fluidity at low temperature, indicating that the lower the ambient temperature at which the oil can be used. More details about oil type selection.
- Door locks: Avoid door locks being frozen. Deicing agent or glycerin should be sprayed into door lock holes.
- Washer fluid: Use washer fluid containing antifreeze. This product is available at Jetour authorized service station and most vehicle component distributors.
- Mudguards: Avoid ice and snow accumulation under mudguards. Failure to do so may cause difficult steering. When driving in cold weather, you should often stop vehicle to check for ice and snow accumulation under mudguards. It is recommended that you should take some necessary emergency items with you depending on different driving destinations. Items that need to be put in vehicle: Tire chains, window snow scraper, sand or salt bag, signal flasher, shovel, jumper cable, etc.

⚠ CAUTION

- Do not use water as a substitute for coolant.
- Do not use engine coolant or other alternative washer fluid, otherwise vehicle paint will be damaged.

Driving on Road Covered with Ice and Snow

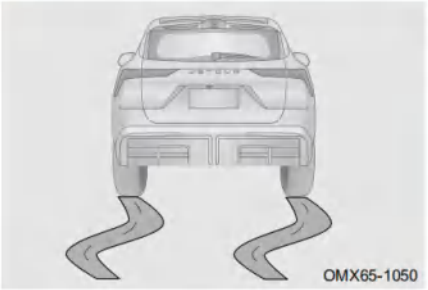

Rapid acceleration on slippery road surfaces, such as snow or ice covered roads, may cause the rear wheels slipping to right or left. Therefore, please drive at low speed and operate carefully.

It is possible to build up a layer of water film between the tire and road surface when driving on wet or slushy roads. This may prevent the steering and braking from operating properly. To reduce the torque and avoid slipping, you can use 2nd gear (vehicle with manual transmission) when starting off vehicle on ice or snow covered road surfaces. It is recommended that you enable ESP function on this occasion.

■ Driving out silt and ice and snow road

If drive wheel is stuck in silt or ice and snow, please attempt to shake vehicle at low speed and drive forward and backward repeatedly. Shift the shift lever between D position and R position several times and depress accelerator pedal slightly. Avoid shifting the shift lever between D position and R position for a long period of time, failure to do so may cause excessive transmission wear.

Tire Chains

Purchase a set of tire chains that match size of the vehicle tires. Pay attention to the following precautions when installing and removing chains:

1. Follow local regulations when using chains;
2. Install and remove tire chains in a safe location;
3. Install tire chains by following the instructions provided with the tire chains;
4. Chains can only be installed on drive wheels;
5. It is recommended to use the beef tendon chains or rubber chains with a thickness not exceeding 12 mm, otherwise, tires, rims, drive system, brake system and wheel guard plates may be damaged, vehicle damages resulting from improper use of chains are not covered by warranty;

6. Please consult Jetour authorized service station for details about wheels, tire size.

⚠ CAUTION

Observe the following precautions to reduce the risk of accidents. Failure to do so may cause that the vehicle is unable to be driven safely, and may cause death or serious injury.

- Regulations regarding the use of tire chains vary depending on location and type of road. Always check local regulations before installing tire chains;
- Be sure to use chains that are suitable for your vehicle. Installing chain will affect vehicle handling, please drive carefully. Using improper chains or improper installing of chains may cause an accident and lead to injuries;
- Please follow the instructions provided by the manufacturer of the chains to install and remove chains, park the vehicle in a safe place before installation and removal. Be sure to turn off the engine before installing chains (automatic transmission is in P position), place the traffic warning signs if necessary;
- Do not drive vehicle at more than 30 km/h when chains are installed on vehicle, or refer to the vehicle speed limit specified by the manufacturer of chains, whichever is lower. It should avoid dangerous road conditions such as bumps, potholes, sharp turns etc. when installing chains, do not turn steering wheel sharply, lock brake urgently, accelerate and decelerate suddenly etc.

PREPARATION FOR DRIVING

2-1. Instrument Cluster

Instrument Cluster Overview 24

Operation/Malfunction Indicator 30

2-2. Steering Wheel

Horn 34

Steering Wheel Buttons (If Equipped) 34

Adjusting Steering Wheel 35

2-3. Rear View Mirror

Inside Rear View Mirror 36

Outside Rear View Mirror 37

2-4. Wiper System

Wiper Operation 39

Replacing Wiper Blade 41

2-5. Lighting System

Exterior Lighting 43

Interior Lighting 45

Fogging Instructions for Light 46

2-6. Seat

Correct Sitting Posture 47

Head Restraint 48

Front Seat 49

Second Row Seat 50

2-7. Seat Belt

Seat Belt 51

Seat Belt Pretensioner (If Equipped) 55

2-8. Child Restraint System

Child Restraint System 56

Installation of Child Restraint System (ISOFIX) 59

2-1. Instrument Cluster

Instrument Cluster Overview

1 Speedometer	2 Outside temperature	3 Time
4 Tachometer	5 Fuel gauge	6 Driving Mode
7 Gear position information	8 Total mileage	9 Engine coolant temperature gauge

Speedometer

Speedometer: The driving speed of vehicle (unit: km/h).

> ⚠ CAUTION
>
> Speedometer is affected by tire size used in vehicle. Only tires of original size can be used (for details, refer to "Vehicle Specifications"), otherwise the speedometer will not indicate the correct speed.

Tachometer

Tachometer: Current engine speed (unit: x1000 rpm).

After break-in period of vehicle, it is allowed to reach the high engine speed range of 6000 - 8000 rpm. Do not drive vehicle within this range for prolonged periods of time.

⚠ CAUTION

- Do not run engine at high speed during break-in period.
- Do not keep engine speed at 6000 rpm or more for a long time, or engine may be seriously damaged.

Fuel gauge

Fuel gauge: Remaining fuel of fuel tank.

When fuel gauge indication is near E or the low fuel level warning indicator remains on, it indicates that remaining fuel is insufficient. Please add fuel as soon as possible.

READ

When the vehicle is accelerating, braking urgently, turning sharply or driving on a slope, the fuel gauge reading might be inaccurate.

Engine coolant temperature gauge

Engine coolant temperature gauge: Current engine coolant temperature.

Low temperature range: Near C or in C area

When engine coolant temperature gauge is near C or in C area, it indicates that engine coolant temperature is low. Within this temperature range, do not run engine at high speed and the engine load should not be excessive.

Overheating range: Near H or in H area

When engine coolant temperature gauge is near H or in H area, it indicates that engine coolant temperature is high. Stop vehicle at a safe place away from major traffic, turn vehicle power to OFF mode after idling for several minutes. Please go to Jetour authorized service station for inspection and repair immediately.

⚠ CAUTION

- If engine coolant temperature gauge indication remains in low temperature range for a long time, please go to Jetour authorized service station for inspection and repair immediately.
- Never open the coolant reservoir cap if engine coolant temperature gauge indication is in overheating range. Check if coolant level is too low after engine cools down. Never run engine when coolant level is too low, or the engine will be seriously damaged.

Total mileage

Total mileage: The total mileage of the vehicle (common unit: km).

Gear position information

Gear position information: The currently selected gear position information (in manual mode or current gear position).

READ

For details about gear position information, refer to "Transmission".

Driving mode

Driving mode: The currently selected driving mode.

READ

For details about driving mode, refer to "Transmission".

Conventional display interface

Conventional display interface includes the following interfaces, push the "▲"/"▼" button on the left side of steering wheel upward and downward to cycle the following interface.

Driving information interface

Driving information interface includes the following interfaces, push the "▲"/"▼" button on the left side of steering wheel upward and downward to cycle the following interface (In order: ADAS interface/tire pressure information interface/on-board computer interface).

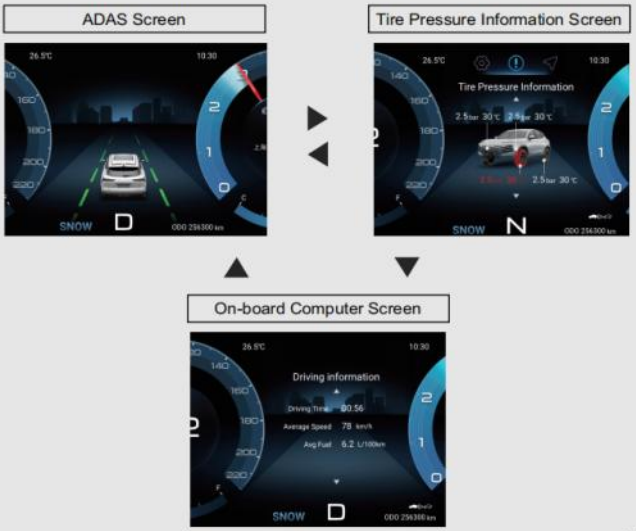

OMX65-3004

Setting Interface

■ Warm tips

OMX65-3006

Step 1: On setting interface, push the "▲"/"▼" button on the left side of steering wheel upward and downward to switch to warm tips interface.

Step 2: Set the time of warm tips on the warm tips interface.

READ

The default reminder time is 1 hour, and the reminder time can be set from 1 hour to 4 hours.

■ Backlight adjustment

OMX65-3008

Step 1: On setting interface, push the "▲"/"▼" button on the left side of steering wheel upward and downward to switch to backlight adjustment interface.

Step 2: Set the backlight brightness on the backlight adjustment interface.

■ Information clear

OMX65-3010

Step 1: On setting interface, push the "▲"/"▼" button on the left side of steering wheel upward and downward to switch to information clear interface.

Step 2: Set the information clear on the information clear interface.

■ Overspeed alarm

OMX65-3012

Step 1: On setting interface, push the "▲"/"▼" button on the left side of steering wheel upward and downward to switch to overspeed alarm interface.

Step 2: Set the limit value of overspeed alarm on the overspeed alarm interface.

READ

- During overspeed alarm, the red icon flashes; After overspeed is 10%, the speed on instrument cluster changes to red.
- In order to prevent the user from repeatedly activating the alarm, the instrument cluster interface switches repeatedly between red and normal; When the speed rises more than 10%, the instrument cluster dial changes to red rapidly. When the speed drops below the speed limit value, the instrument cluster switches to normal.

■ Default setting resetting

Step 1: On setting interface, push the "▲"/"▼" button on the left side of steering wheel upward and downward to switch to default setting resetting interface.

Step 2: Set the default setting resetting on the default setting resetting interface.

Operation/Malfunction Indicator

Vehicle power is turned to ON mode, some malfunction indicators will come on for a short time, indicating that system is performing self-check. If one system malfunction indicator remains on or flashes after starting the vehicle, please contact Jetour authorized service station for inspection and repair immediately.

The operation indicator is used to alert driver the operating condition of a certain vehicle's system and the corresponding operation indicator will remain on.

Malfunction indicator is used to alert driver that a certain system of the vehicle is malfunctioning and the corresponding malfunction indicator will remains on or flash.

Name	Indicator	Description
Daytime running light indicator		Daytime running light indicator remains on when engine is started.
Position light indicator		When the position lights are turned on, the indicator remains on.
High beam light indicator		When the high beam lights are turned on or when the high beam lights flash, the indicator remains on.
Turn signal indicator		When the left or right turn signal lights are turned on, the corresponding turn signal indicator flashes. When hazard light switch is turned on, both left and right turn signal indicators will flash simultaneously.
Rear fog light indicator		When rear fog lights are turned on, the indicator remains on.
Seat belt indicator		This indicator is used to alert that the front seat belt is not fastened or fastened firmly. Wear seat belt and drive safely.
Electric parking brake system malfunction indicator		This indicator is used to alert the driver that electric parking brake system is malfunctioning. Please contact Jetour authorized service station for inspection and repair immediately.

Electric Parking Brake (EPB) system indicator		This indicator remains on to indicate that the vehicle's EPB is in operating condition currently. The indicator flashes during sudden braking, it is normal and does not need to be processed. If it flashes in other cases, it indicates that the system is malfunctioning. Please contact Jetour authorized service station for inspection and repair immediately.
Brake system malfunctio-n/low brake fluid level indicator		The indicator is used to alert the driver that brake fluid level is low or brake system is malfunctioning. If the brake fluid level is low, please add the brake fluid or contact Jetour authorized service station for inspection and repair immediately. If the level is normal, please contact Jetour authorized service station for inspection and repair immediately.
Anti-lock Brake System (ABS) malfunction indicator		This indicator is used to alert the driver that ABS is malfunctioning. Please contact Jetour authorized service station for inspection and repair immediately.
Electronic stability program system indicator		This indicator flashes to indicate that the vehicle's electronic stability program system is in operating condition currently. This indicator remains on to alert the driver that electronic stability program system is malfunctioning. Please go to Jetour authorized service station for inspection and repair as soon as possible.
Electronic stability program system OFF indicator		When electronic stability program system function is turned off, electronic stability program system OFF indicator will remain on, indicating that electronic stability program system is in disabled condition.
High coolant temperatur-e warning indicator		This indicator is used to alert the driver that engine coolant temperature is high. Drive vehicle to a safe area and stop, turn vehicle power to OFF mode after idling for several minutes. Please contact Jetour authorized service station for inspection and repair immediately.

Gasoline Particulate Filter (GPF) indicator		This indicator remains on to alert the driver that Gasoline Particulate Filter (GPF) is full, please increase the speed and clean it.
Gasoline Particulate Filter (GPF) malfunction indicator		This indicator remains on to alert the driver that Gasoline Particulate Filter (GPF) is malfunctioning. Please go to Jetour authorized service station for inspection and repair as soon as possible.
Low fuel level warning indicator		This indicator is used to alert the driver that vehicle is running out of fuel. Please add fuel as soon as possible.
Airbag malfunction indicator		This indicator is used to alert the driver that airbag is malfunctioning. Please contact Jetour authorized service station for inspection and repair immediately.
Tire pressure monitoring system malfunction indicator		This indicator is used to alert the driver that tire pressure monitoring system is malfunctioning. Please check if tire pressure is abnormal or if temperature is too high. If tire pressure is normal, please contact Jetour authorized service station for inspection and repair immediately.
Electric power steering system malfunction indicator		This indicator comes on in yellow, indicating that electric power steering system is malfunctioning. Restart the vehicle. If this indicator still comes on after restarting the vehicle, please contact Jetour authorized service station for inspection and repair immediately. This indicator comes on in red, indicating that electric power steering system is malfunctioning. Please contact Jetour authorized service station for inspection and repair immediately.
Low engine oil pressure warning indicator		This indicator is used to alert the driver that engine oil pressure is low. Park vehicle in a safe area. Please contact Jetour authorized service station for inspection and repair immediately.
EPC malfunction indicator		This indicator is used to alert the driver that engine system is malfunctioning. Please contact Jetour authorized service station for inspection and repair immediately.

Engine malfunction indicator		This indicator is used to alert the driver that engine is malfunctioning. Please contact Jetour authorized service station for inspection and repair immediately.
Transmissi-on malfunction indicator		This indicator is used to alert the driver that transmission system is malfunctioning. Please contact Jetour authorized service station for inspection and repair immediately.
Maintenan-ce reminder indicator		When the initial mileage reaches 5,000 km, the indicator reminds owner to contact Jetour authorized service station as soon as possible for maintenance.
Cruise control indicator		This indicator is used to alert the driver that constant speed or adaptive cruise control system is turned on.
Front collision warning ON indicator		This indicator is used to alert the driver that front collision warning function is turned on.
Front collision warning malfunction indicator		This indicator is used to alert the driver that front collision warning system is malfunctioning. Please contact Jetour authorized service station for inspection and repair as soon as possible.
AUTOHOL-D indicator	AUTO HOLD	This indicator comes on in white to alert the driver that AUTOHOLD function is turned on. This indicator comes on in green to alert the driver that AUTOHOLD function is activated.
Hill descent indicator		This indicator remains on to alert the driver that hill descent control system is activated.

2-2. Steering Wheel

Horn

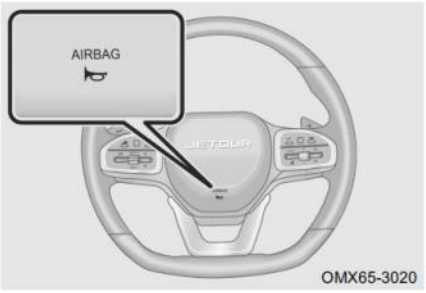

To sound the horn, press area near horn mark on the steering wheel.

READ
Obey local regulations regarding usage of vehicle horns.

Steering Wheel Buttons (If Equipped)

: Press the button and go back to the previous menu of instrument cluster.

: Short press the instrument cluster to confirm.

Move the button to " " once to enter pre-cruising mode; exit cruising mode (in cruising mode).

Move the button to "RES/+" once: Restore cruising mode; increase cruising speed (in cruising mode); move and hold to increase cruising speed (in cruising mode) continuously.

Move the button to "SET/-" once: Enter cruising mode; reduce cruising speed (in cruising mode); move and hold to reduce cruising speed (in cruising mode) continuously.

"▲": Push up once, select the content on instrument cluster upward.

"▼": Push down once,select the content on instrument cluster downward.

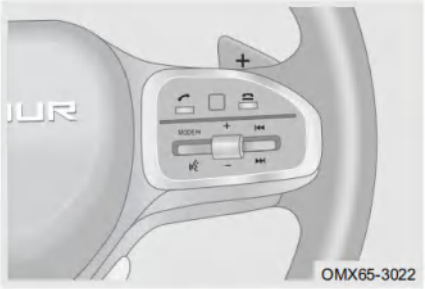

: Shortly press this button to enter the audio Bluetooth dialing interface and answer the call.

: shortly press to hang up the call.

Move the button to "MODE/" once: Switch sound source mode/one-button snapshot (it is required to set in audio system); Move and hold: mute mode.

Move the button to " " once: Wake up Jetour voice/end Jetour voice (when waking up); move and hold to wake up the voice assistant.

Move the button to " " once: Switch to previous station/song; Move and hold to fast rewind music.

Move the button to " " once: Switch to next station/song; move and hold to fast forward music.

"+": Move up to increase the volume. Move up and hold to increase the volume continuously.

"-" : Move down to decrease the volume. Move down and hold to decrease the volume continuously.

Adjusting Steering Wheel

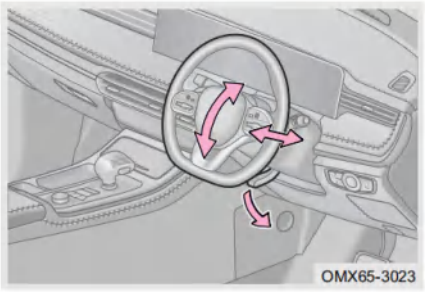

Stop vehicle at a safety place, turn vehicle power to OFF mode:

Step 1: Push down adjustment lever and release it;

Step 2: Hold the steering wheel with two hands and move the steering wheel up or down/forward and backward to adjust it to a proper position;

Step 3: Hold steering wheel steady and push adjustment lever to original position;

Step 4: Check if the steering wheel is shaking. Repeat operations of step 3 if shaking.

⚠ WARNING

- Do not adjust steering wheel while driving, doing so may cause driver to mishandle the vehicle and cause an accident, resulting in death or injuries injury.
- For safety, after adjusting steering wheel, always push adjustment lever to original position and try moving steering wheel up or down/forward and backward to make sure that it is securely locked. Otherwise, steering wheel may move suddenly during driving, causing unnecessary injury and loss.

2-3. Rear View Mirror

Inside Rear View Mirror

Adjusting inside rear view mirror position

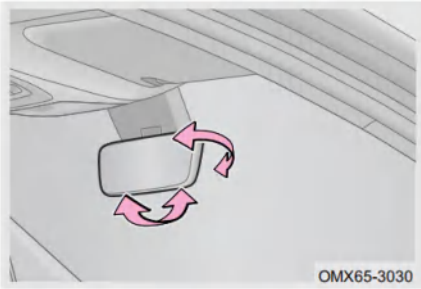
OMX65-3030

Adjust inside rear view mirror to a proper position before driving, to make sure driver can achieve an optimum view. Manually adjust the inside rear view mirror to desired position.

Manual glare-resistant function

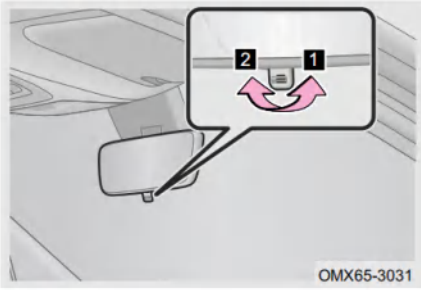

OMX65-3031

1 Night mode

2 Day mode

To reduce glare from the headlights of vehicles behind during night driving, pull the glare-resistant adjustment lever backwards to adjust the rear view mirror angle.

⚠ WARNING

Do not adjust inside rear view mirror while driving, otherwise it may cause accidents and personal injuries.

Outside Rear View Mirror

Adjusting outside rear view mirror electrically

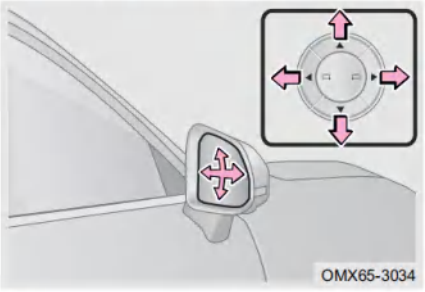

Park the vehicle on a safety place, turn vehicle power to ON:

Press "" button to adjust position of left outside rear view mirror lens.

Press "" button to adjust position of right outside rear view mirror lens.

Press "▲"/"▼"/"◀"/"▶" button to adjust angle of outside rear view mirror lens.

READ

- When vehicle speed is higher than 10 km/h, the power outside rear view mirrors can not fold automatically but can extend automatically.
- Outside rear view mirror adjustment needs to be set on multimedia display. For details, refer to "Multimedia Display".

⚠ CAUTION

- Do not fold/extend the power outside rear view mirror manually, otherwise it may cause the folding function to fail.
- When folding/extending the outside rear view mirror, do not touch its surface to prevent damage to it with excessive force.
- In cold winter, it is recommended to turn off the outside rear view mirror automatic folding function. This will prevent the outside rear view mirror from being frozen in folding position due to accumulated snow or rain.

⚠ WARNING

- Do not adjust outside rear view mirror while driving, otherwise it may cause accidents and personal injury.
- Do not drive vehicle with outside rear view mirror folded.
- Before driving, the driver and passenger side rear view mirrors must be extended and adjusted appropriately.
- Image displayed on outside rear view mirror may differ from the actual, so always drive carefully.

Folding/extending outside rear view mirror (If equipped)

■ Manual

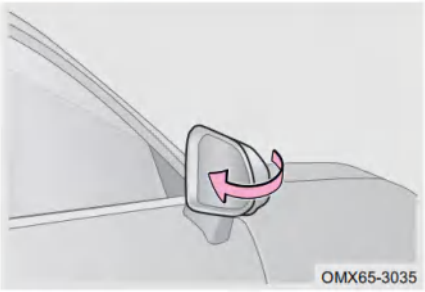

Hold the outside rear view mirror, and push it backward firmly and slowly, until it folds to its position; Hold edge of the outside rear view mirror, and pull forward slightly, until it extends in place.

■ Power

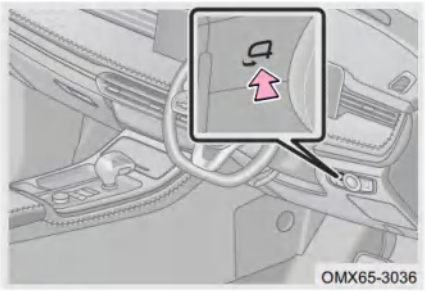

Operate using switch: Turn vehicle power to ON, press the folding switch on left switch of instrument cluster to fold outside rear view mirror automatically; press the switch again to extend mirrors automatically.

Operate using key: In arming/ disarming mode, outside rear view mirror will fold/extend automatically.

READ

- When vehicle speed is higher than 10 km/h, the power outside rear view mirrors cannot be folded automatically but can be extended automatically.
- Outside rear view mirror automatic folding needs to be set in audio system.

⚠ CAUTION

- Do not fold/extend the power outside rear view mirror manually, otherwise it may cause the folding function to fail.
- When folding/extending the outside rear view mirror, do not touch its surface to prevent damage to it with excessive force.
- In cold winter, it is recommended to turn off the outside rear view mirror automatic folding function. This will prevent the outside rear view mirror from being frozen in folding position due to accumulated snow or rain.

Rear view mirror heating (if equipped)

While starting the rear windshield heating, turn on the outside mirror defogger. Heat for 15 minutes and then stops automatically.

2-4. Wiper System

Wiper Operation

Wiper combination switch

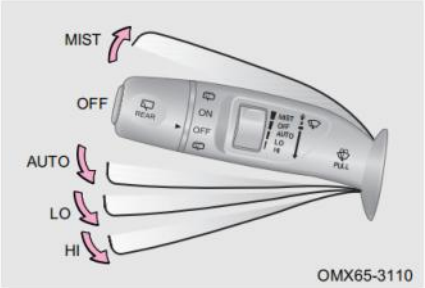

OMX65-3110

Wiper combination switch is located on the left side of steering column.

Turn vehicle power to ON mode, move the wiper switch:

MIST: Low speed wiping for 1 cycle.

AUTO: In AUTO mode, the rain sensor control the wiping speed of the wiper according to amount of rainfall.

LO: Low speed wiping.

HI: High speed wiping.

OFF: Turn off front windshield wiper and washer.

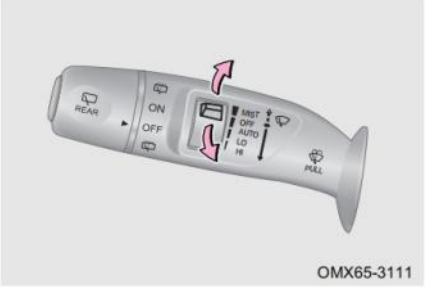

OMX65-3111

In AUTO position, the wiper sensitivity can be adjusted.

READ

If rain sensor is damaged, the AUTO mode cannot work normally. Please go to Jetour authorized service station for inspection and repair as soon as possible.

⚠ CAUTION

- Do not operate wiper when the windshield is dry, as this may damage wiper blade and scratch the windshield.
- Do not operate wipers if there are obstacles on windshield, as this may scratch the windshield and damage wiper motor.
- In cold winter, always check if wiper blade is frozen onto windshield before using wipers. If so, defrost it before using, otherwise it may damage wiper blade and wiper motor.
- Do not use fire or hot water to melt the glass freeze, otherwise it will cause the glass to burst.

Front washer operation

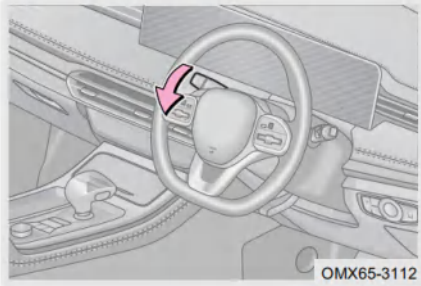
OMX65-3112

Turn vehicle power to ON mode, pull and hold wiper combination switch towards the steering wheel side, front washer sprays water, and front wiper operates simultaneously. After releasing, front washer stops working and wiper will still operate several times.

Rear washer operation

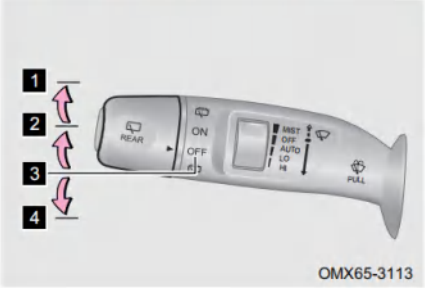

OMX65-3113

Turn vehicle power to ON mode:

1. Turn on the rear windshield wiper and washer. This is automatic return type and it will return to ON automatically.
2. Wipe continuously.
3. Turn off the rear windshield wiper and washer.
4. Turn on the rear windshield wiper and washer. This is automatic return type and it will return to OFF automatically.

⚠ CAUTION

- When operating wiper switch to spray water, do not exceed 10 seconds at a time.
- Do not operate wiper switch when there is no washer fluid in reservoir.
- The antifreeze will corrode any painted surface, so be careful when adding washer fluid.
- Do not try to clear a nozzle with a pin or other objects when it becomes blocked, or it will be damaged.
- Do not mix water with the washer. Water may cause the solution to freeze and damage the wash tank and other parts of the washer system.
- When the washer fluid is insufficient, please add it in time. In cold weather, a suitable washer fluid should be added to ensure that the washer fluid does not freeze. Otherwise, not only the washing function will be lost, but also the related parts will be frozen.

Replacing Wiper Blade

Replacing front wiper blade

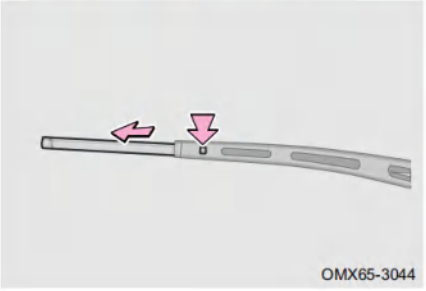
OMX65-3044

Step 1: Move wiper combination switch to mist mode "MIST" for several seconds within 3 seconds after turning vehicle power to OFF mode, it will enter repair mode;

Step 2: Lift the front wiper arm and hold;

Step 3: Push up wiper blades while pressing the lock button, so as to remove the blades;

Step 4: Install the new wiper blades in reverse order, and make sure that the fixing clamp is locked firmly;

Step 5: Check that front wipers operate properly.

Replacing rear wiper blade

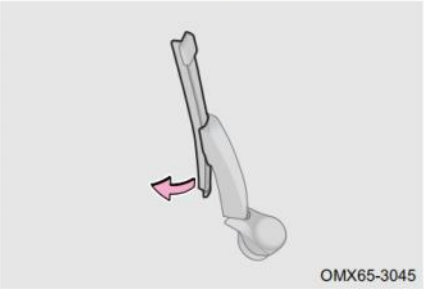

Step 1: Lift the rear wiper arm and hold;

Step 2: Separate the wiper blade by hand as shown in the illustration;

Step 3: Install the new wiper blades in reverse order, and be sure to install them in place;

Step 4: Check that rear wipers operate properly.

READ

- When turning vehicle power to OFF mode, the wiper automatically returns to the ready-to-work position.
- It is recommended that you have wiper blades replaced by someone at Jetour authorized service station to ensure correct fitting.

⚠ CAUTION

Make sure that the wiper arm returns to its original position before driving. otherwise it may damage the vehicle and cause an accident.

2-5. Lighting System

Exterior Lighting

Headlight combination switch

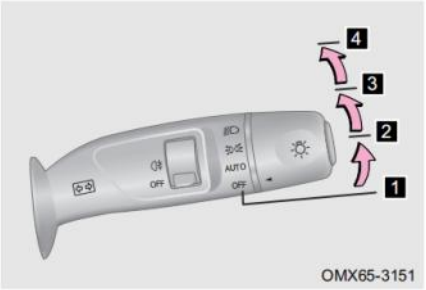

OMX65-3151

Turn vehicle power to ON mode, rotate headlight combination switch:

1. OFF: Turn off headlight.
2. AUTO : Automatically sense the intensity of external light, turn on lights automatically.
3. : Turn on position lights, license lights and backlights.
4. : Turn on low beam lights, position lights, license lights and backlights.

Headlight high beam

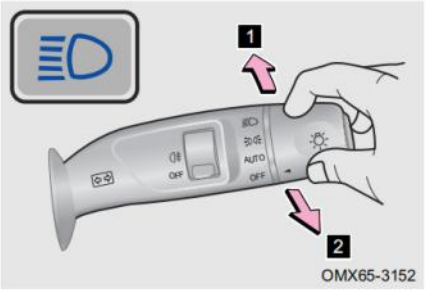

OMX65-3152

1. When turning on low beam light, push headlight combination switch away from steering wheel side and release to turn on high beam light. Push the switch away from steering wheel again or pull the switch to its original position to turn off high beam light.
2. Pull headlight combination switch towards the steering wheel and release it to flash the high beam lights once. At the same time, headlight high beam indicator in instrument cluster flashes once.

READ
You can flash high beam light with low beam light on/off.

Turn signal light

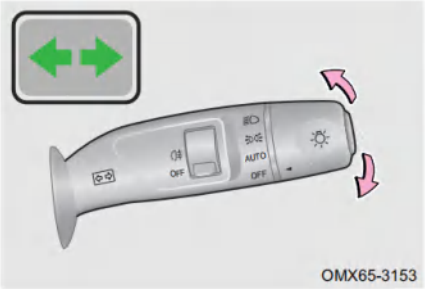

Turn vehicle power to ON mode:

Dial headlight combination switch upward, right turn signal light is turned on; Dial headlight combination switch downward, left turn signal light is turned on.

Note: When the turn signal light is damaged, the turn signal indicator on instrument cluster flashes at twice the normal frequency.

Rear fog light

When turning vehicle power to ON mode and low beam light on, dial the button towards "⧫" once to turn on rear fog light; Dial the button towards "⧫" once again to turn off rear fog light.

READ

- When turning off low beam lights, rear fog lights is turned off at the same time.
- Fog light can be used in fog, snow or rain with poor visibility.
- Obey local regulations regarding usage of fog lights.

Ground light (if equipped)

When pressing disarming on vehicle, ground light will come on automatically with door open; When vehicle is armed successfully, ground light will go off immediately.

Daytime running light

When starting vehicle, the daytime running light will turn on automatically; when low beam light is turned on, the daytime running light will turn off automatically.

Brake light

Depress the brake pedal, brake light and high mounted stop light turn on.

Back-up light

When starting vehicle, shift the shift lever to R, back-up light turns on.

Cornering light (if equipped)

Turn vehicle power to ON mode, when vehicle speed is less than 40 km/h and low beam lights turn on:

Method 1: When the shift lever is shifted to D, the left/right turn signal light is turned on, and the corresponding side cornering light turns on.

Method 2: When the shift lever is shifted to D, turn the steering wheel to left/right (corner > 30°or < -30°), the corresponding side cornering light turns on.

Method 3: When the shift lever is shifted to R, the left/right cornering light turns on.

Light leveling adjustment

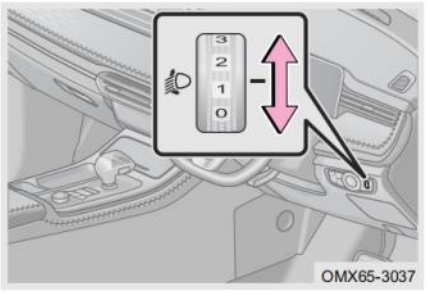

OMX65-3037

Turn vehicle power to ON mode, with the low beam light on, headlight beam leveling can be adjusted according to occupant quantity and vehicle load.

Headlight beam leveling adjusting switch includes 4 positions (0/1/2/3), when switch is at 0, the headlight beam is at the highest position. If it is moved too fast, it may not work.

Interior Lighting

Front dome light

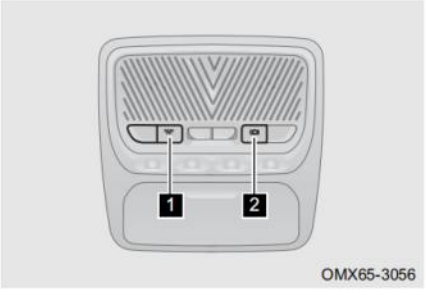

OMX65-3056

1 Press front dome button, it will come on.

2 Press door control button, when any door is opened, front dome light comes on.

READ

- When any door remains open, the front dome light turns on for 3 minutes and then goes off; when any door is closed, the front dome light turns on for 15 seconds and then turns off.
- When using smart key to unlock, the front dome light turns on for 15 seconds, at this time the vehicle power is turned to ON mode, and front dome light goes off immediately; when using smart key to lock, the front dome light goes off immediately.
- When vehicle detects a collision signal, the dome light turns on for 30 minutes.

Rear dome light

Press the rear dome light switch, rear dome light comes on, press it again, rear dome light turns off.

Vanity mirror light (if equipped)

Open the vanity mirror cover and vanity mirror light comes on; Close the vanity mirror cover and vanity mirror light turns off.

Luggage compartment light

When luggage compartment remains open, luggage compartment light will turn on for 3 minutes. When luggage compartment is closed, luggage compartment light will turn off immediately.

Fogging Instructions for Light

When the weather is cold or humid, the inner side of lights will fog up due to the difference in temperature between the inside and outside. After lights turn on for a period of time, the fog inside the lens will gradually disappear, and there may still be some fog at the edge of the lens. This is normal. This fog has no effect on service life of lighting system. The vehicle lights generate fog, which gradually begins to disappear in the inner surface of lens for headlight within 30 minutes after the low and high beam lights are turned on. After a period of lighting, the fog disappears naturally. This is normal.

⚠ WARNING

- Following guidelines for driving through water (for example: water depth, speed, etc.) to avoid any water entering the lights.
- After opening light dust cover, reinstall it in place at the end of operation, otherwise water may enter the lights.
- When replacing a bulb, strictly check installation of various light components to make sure that they are installed correctly and sealed properly. When installing rear cover, check its seal ring and keep it clean! Otherwise, it will lead to water and dust entering lights!
- It is strictly forbidden to flush the engine compartment with a high pressure water gun, in particular, the lights cannot be flushed. Due to high pressure of high pressure water gun, accessories on lights may lose or fall off, vent hole and wire harness connector may damp, resulting in water infiltration or moisture not dispersing for a long time, and even severe condensation.

2-6. Seat

Adjust the driver's seat so that the pedal, steering wheel and instrument panel controller are within the range for easy control of the driver.

The most effective protective measures in vehicle driving are to keep seatback upright, keep the body well rested on the back of the seat at all times, and adjust the seat belt in the proper position.

Secure the luggage properly to prevent it from sliding or moving. Do not place luggage higher than the seatback.

Correct Sitting Posture

The seats, head restraints, seat belts and airbags are helpful to protect passengers. Using them correctly will provide you with more protection.

OMX65-3060

When sitting, sit slightly inclined backwards (25° backward is ideal) and well back on seatback.

The front seats must not be too close to the instrument panel. The driver should hold the steering wheel with slightly bent arms during driving. His/her feet should also be bent slightly so that he/she can fully depress the pedal. Adjust head restraints properly so that the top of the head restraint is closest to the top of your head.

OMX65-3061

The shoulder belt should be over the shoulder center and close to the chest, kept away from the neck, the lap belt should be as low as possible on the hips.

Head Restraint

Second row seat head restraint adjustment

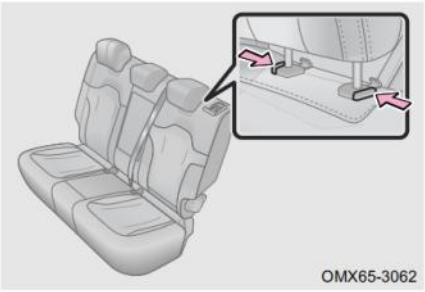
OMX65-3062

Adjust head restraint upward: Pull it up directly to a proper height.

Adjust head restraint downward: Press the unlock button on the outside of head restraint to unlock, then adjust the head restraint downward.

Remove head restraints: Press and hold 2 unlock buttons at the same time until unlocked, then lift the head restraint straight up and pull it out completely.

Install head restraints: Align the head restraint with the installation holes and push it down to lock position.

⚠ WARNING

- Do not adjust head restraint while driving, otherwise it may cause accidents and personal injury.
- Make sure that the head restraint is securely locked before driving, otherwise it may cause accidents and personal injury.

Front Seat

Manual seat

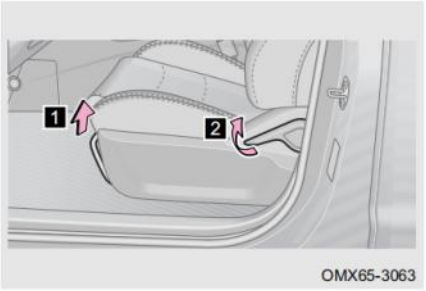

1 Adjusting seat forward and backward

Pull grip up and move the seat back and forth to adjust the seat position forward and backward. After adjusting seat to a desired position, release the grip. Then, shake the seat forward and backward to make sure that the seat is locked properly.

2 Adjusting seatback

Lean your body against seatback, and then pull seatback adjustment lever upward. Adjust seatback to desired angle by changing tilt angle of your body and release the lever. After that, apply force backward against the seatback to make sure that the seatback is locked properly.

Power seat

■ Adjusting driver power seat

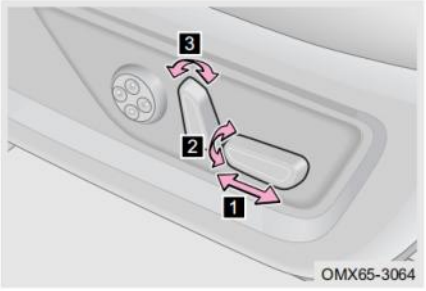

1 Adjusting seat position

Move button forward and backward parallel to adjust seat position.

2 Adjusting seat height

Move rear end of button upward and downward to adjust seat upward and downward.

3 Adjusting seatback

Move upper end of button forward and backward to adjust seatback angle.

■ Adjusting driver power seat waist (If equipped)

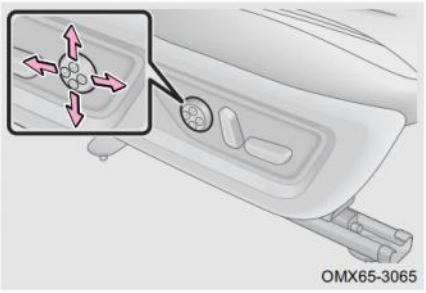

Long press "↑" to support upper part of waist and reduce support to lower part of waist.

Long press "↓" to support lower part of waist and reduce support to upper part of waist.

Long press "←" to increase support to overall forward side of waist.

Long press "→" to reduce support to overall forward side of waist.

■ Adjusting front passenger power seat

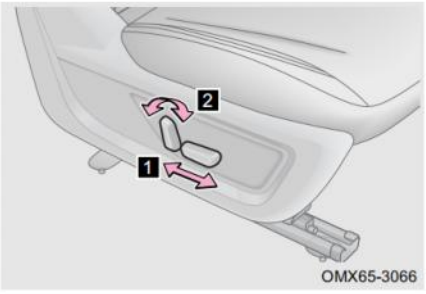

1 Adjusting seat position

Move button forward and backward parallel to adjust seat position.

2 Adjusting seatback

Move upper end of button forward and backward to adjust seatback angle.

Second Row Seat

Folding seatback

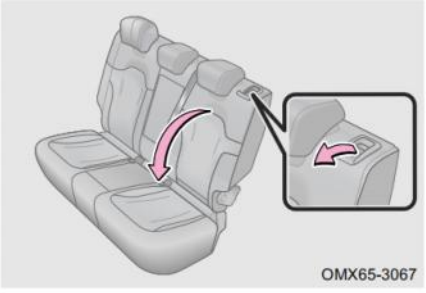

Pull unlock button on upper part of seatback by hand to release the seatback while pulling the seatback forward to folding it down.

⚠ CAUTION
When folding rear seat, make sure that outer seat belt passes around the seatback to avoid damaging the belt.

2-7. Seat Belt

Seat Belt

Studies have shown that proper use of seat belt can significantly reduce occupant injuries or death during emergency braking, sudden steering, and collision. Please read the following carefully and observe strictly.

OMX65-3080

We strongly recommend the driver and passengers to wear their seat belts correctly at all times. Failure to do so could increase possibility and severity of injury in case of an accident. Check the seat belt regularly. If any seat belt function failure is found, please contact Jetour authorized service station for inspection and repair immediately.

Seat belt indicator

Turn vehicle power to ON mode, the front seat belt is not buckled or not fastened firmly, the red indicator " " on instrument cluster flashes continuously; when vehicle speed is 18 km/h or higher, and the front seat belt is not buckled or not fastened firmly, the red indicator " " on instrument cluster flashes, accompanied by sound alarm.

Using seat belt correctly

Step 1: Adjust the height of front seat belts.

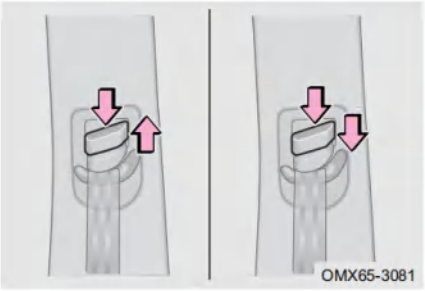
OMX65-3081

Adjust the seat belt height adjuster (-front row) to the appropriate position for optimum comfort and protection.

Adjust downward: Push seat belt adjuster downward while pressing adjusting button.

Adjust upward: Push seat belt adjuster upward while pressing adjusting button.

Step 2: Fasten/release seat belt.

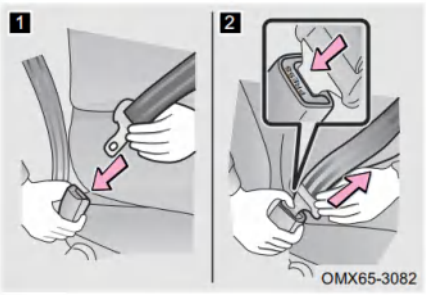

1 Push the tab into the buckle until a click sound is heard to fasten the seat belt.

2 Press the release button to release seat belt. If the seat belt cannot retract smoothly, pull it out and check for kinks or twists. Make sure that seat belt can retract smoothly.

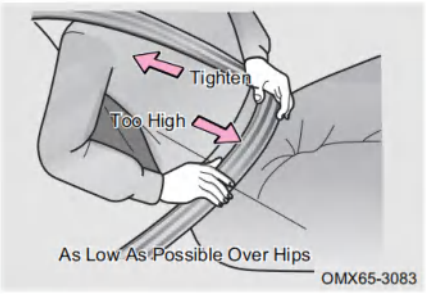

Step 3: Adjust the position of seat belts.

To adjust the seatback angle, sit up straightly and well back in the seat. Position the lap belt as low as possible over your hips, then pull the shoulder belt upward so that it comes fully over the shoulder, but does not come into contact with the neck or slide shoulder.

READ

- Each seat belt shall be used by one person only. Do not use a seat belt for more than one person at one time, including children.
- The seat belt will lock when it is pulled out quickly or the vehicle is on a slope, but it will not lock when pulling it out slowly.
- The method of wearing the rear seat belt is the same as front seat. In order to ensure the correct protection of rear seat belt, be sure that the corresponding seat belt latch is inserted into the corresponding seat belt buckle when using the rear seat belt. It is the driver's responsibility to remind the passenger to wear the seat belt correctly.
- Before driving the vehicle, ensure that all passengers wear seat belts.

⚠ CAUTION

- Make sure that seat belt buckle position is correct and is locked safely, otherwise it may cause personal injuries.
- Do not use any seat belt with a loose buckle, otherwise, the seat belt will not protect the passengers in the event of sudden braking or a collision.
- Avoid loose fitting clothes when driving. These can prevent the seatbelt fitting correctly and can affect the protection offered.
- Both high-positioned lap belts and loose-fitting belts could cause death or serious injuries during a collision or other unintended events.
- Do not recline seat more than necessary to achieve a comfortable ride. Seat belts are most effective when passengers are sitting up straight and well back in their seats.
- Make sure the shoulder belt is positioned across your shoulder. Do not place the shoulder belt under your arm. The belt should be kept away from your neck, but not falling off your shoulder. Failure to do so could reduce the protection effect of seat belt in an accident.
- We recommend that children be seated in the second row seat. Use seat belt or child restraint system with ISOFIX function according to the child's height. Never fix child restraint system with seat belt only. Always use standard fixing device for child restraint system on second row seat.

Maintaining seat belt

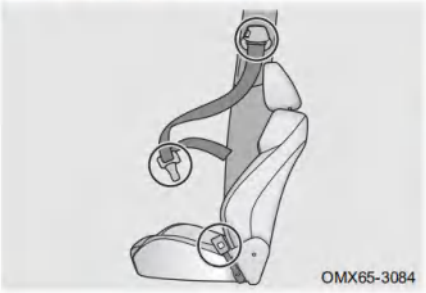
OMX65-3084

Check seat belts regularly for cuts, fraying, loose and stretched belt (-such as after a traffic accident). If the belt is damaged, please contact Jetour authorized service station for inspection and repair immediately.

⚠ CAUTION

- Do not allow water to penetrate belt retractor or buckle mechanism.
- Do not use chemical detergent, boiling water, bleach or dye to wash the seat belt.
- The seat belt should be washed with mild cleanser or warm water and dry naturally. Never clean it with artificial heat.
- Do not try to repair or lubricate retractor or buckle mechanism of seat belt, or repair seat belt in any way, otherwise, the Chery Commercial Vehicle Co., Ltd. will not be responsible for any problem caused thereby.

⚠ WARNING

- If your vehicle has been involved in a serious accident and even if seat belt is not obviously damaged, please contact Jetour authorized service station for inspection and repair.
- Ensure that the belt can function properly and the belt is not twisted. If the seat belt does not function properly, please contact Jetour authorized service station for inspection and repair immediately.
- Do not attempt to install, remove, modify, disassemble or dispose of the seat belts. If there is any need above, have any necessary service carried out by Jetour authorized service station.

Seat belt precautions

■ Precautions for using seat belt by a child

The seat belts of your vehicle are principally designed for persons of adult size. Use a child restraint system (for details, refer to "Child Restraint System") appropriate for the child, until the child becomes large enough to properly wear the vehicle seat belt. When the child becomes large enough to properly wear the vehicle seat belt, follow the instructions regarding seat belt usage. If a child is too large to use a child restraint system, the child should sit in the second row seat and must be restrained using the vehicle seat belt.

OMX65-3085

Make sure the shoulder belt is positioned across the center of child's shoulder. The belt should be kept away from child's neck, but not falling off child's shoulder. Otherwise, the child may be seriously injured or even death during a collision or other unintended events.

Failure to use a child restraint system (for example: Let a child stand or kneel on seats; Let a child sit on an adult's laps; Holding a child in arms). This may cause death or serious injuries during a collision or other unintended events.

■ Precautions for using seat belt by a pregnant woman

OMX65-3086

Obtain medical advice and wear the seat belt properly. Women who are pregnant should position the lap belt as low as possible over the hips in the same manner as other occupants. Extend the shoulder belt completely over the shoulder and across the chest, avoid belt contact with the rounding of the abdominal area. If the seat belt is not worn properly, it may cause serious injuries or death during a collision.

⚠ WARNING

- Do not insert coins, clips, etc. into the buckle to prevent from properly latching tab and buckle.
- After inserting the tab, make sure that the tab and buckle are locked and that the lap belt and shoulder belt are not twisted.
- It is not allowed to insert the non-genuine seat belt tab into buckle. Long-term use will easily lead to damage of the seat belt buckle and make it unusable.
- If the seat belt does not function normally, it cannot protect passengers from death or serious injury, please contact Jetour authorized service station for inspection and repair immediately.

Seat Belt Pretensioner (If Equipped)

OMX65-3087

- Seat belt pretensioner is designed to assist front airbag in the event of a severe impact.
- In the event of a minor impact or side impact, pretensioner may not activate.
- During a severe impact, seat belt pretensioner may be activated even if there is no occupant in front seat.

- When seat belt pretensioner is activated, retractor quickly tightens seat belt to tightly restrain occupant.
- When seat belt pretensioner is activated, it may make a working sound and release a small amount of non-toxic gas. The produced gas does not cause a fire and is generally harmless.

⚠ WARNING

- When seat belt pretensioner is activated, the airbag malfunction indicator remains on, and seat belts cannot be retracted / pulled out. Please contact Jetour authorized service station for inspection and repair immediately.
- Do not modify, remove, hit or open the seat belt pretensioner assembly, airbag sensor and assembly wire. Otherwise, it may cause death or serious injuries during a collision or other unintended events.

⚠ CAUTION

In the following cases, the seat belt pretensioner may not work properly:

- Modify suspension system.
- Modify front body section.
- Repair the seat belt pretensioner or any assembly nearby.
- Seat belt pretensioner assembly or its surrounding area is damaged.
- Install grill guard or any other device to front body.

2-8. Child Restraint System

Child Restraint System

According to accident statistics, a child is safer sitting in the second row seat and properly restrained than child in the front seat. Choose a child restraint system suitable for the vehicle, age and size of the child. (Vehicle seat belt meet international standards is designed according to body size of person over 1.5 m. If any child under 1.5 m uses seat belt, the belt could hurt his/her neck seriously in case of an accident.)

This instruction manual only provides installation instructions for child restraint system (ISOFIX). For installation details, strictly follow the instruction manual provided by the child restraint system manufacturer.

⚠ WARNING

- Never fix child restraint system with seat belt only. Always use standard fixing device for child restraint system on second row seat.
- Child restraint system should comply with the safety standards set by local regulations and laws. Chery Commercial Vehicle Co., Ltd. will take no responsibility for an accident caused by using a child restraint system.
- For effective protection in accidents and sudden stops, a child must be properly restrained using a seat belt or an appropriate child restraint system installed on second row seat depending on age and size of the child. Holding a child in your arms is not a substitute for a child restraint system.

Classification of child restraint system

Child restraint systems must comply with GB27887 and ECER44 standards. Child restraint systems that pass the GB27887 inspection are usually affixed with the 3C certification mark. Child restraint systems that pass the ECER44 standard inspection also have an orange label. There are informations such as weight class, ISOFIX class and child restraint systems permission instructions on the label.

■ Child restraint systems are divided into the following weight groups:

Weight group	Child weight
Group 0	0 to 10 kg
Group 0+	0 to 13 kg
Group 1	9 to 18 kg
Group 2	15 to 25 kg
Group 3	22 to 36 kg

Weight class 0/0+: It is suitable to use group 0/0+ or 0/1 of rearward-facing infant seat.

Weight class 1: It is suitable to use group 1 or 1/2 of child restraint systems with a built-in seat belt system.

Weight class 2/3: Group 2 is suitable for child restraint systems with seatback, and Group 3 is suitable for child restraint systems without seatback.

■ Applicable types of child restraint systems:

Weight group	Front passenger seat	Second row outer seat	Second row center seat
Group 0	X	L	X
Group 0+	X	L	X
Group 1	X	L	X
Group 2	X	UF, L	X
Group 3	X	UF, L	X

The meaning of the letters in above table:

X: It is not suitable for installing any type of child restraint system of this weight class.

UF: It is suitable for forward-facing child restraint systems of the "general" type that have obtained relevant certifications in this weight class.

L: If the vehicle is listed in the applicable model list of the child restraint system manufacturer, it is suitable for the "semi-general" type child restraint system that has been certified.

Child restraint system precautions

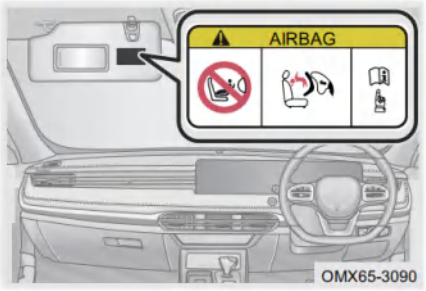

This sticker is attached to front passenger sun visor and used to remind you that the vehicle is equipped with front airbag (SRS). Observe the following precautions:

1. Never install rearward-facing child restraint system in seat protected by front airbag (SRS) (active state).

2. Never change the design of child restraint system fixing device or seat belt on the vehicle under any circumstances.

3. Never fix child restraint system with seat belt only. Always use standard fixing device for child restraint system on second row seat.

If you violate the above three precautions, Chery Commercial Vehicle Co., Ltd. will not be responsible for any problem caused thereby.

Installation of Child Restraint System (ISOFIX)

Child restraint system (ISOFIX)

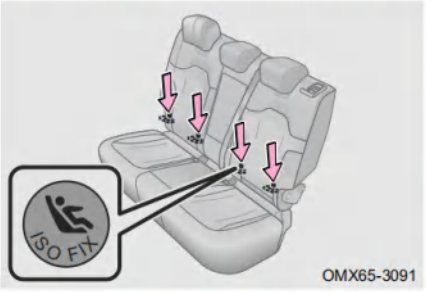

ISOFIX fixing point is an installation system for child restraint system based on GB14167 and ECER14 standards. ISOFIX fixing point is located on the second row outer seat (the mark indicating the position of the fixing point is attached to the rear seatback).

■ Size class of child restraint systems (ISOFIX):

Use the child restraint system size class suitable for the ISOFIX interface to help users choose the correct type of child restraint system.

Size class	Fixed module	Description
A	ISO/F3	Full-height forward-facing child restraint system for toddlers
B	ISO/F2	Reduced-height forward-facing child restraint system for toddlers
B1	ISO/F2X	Reduced-height forward-facing child restraint system for toddlers
C	ISO/R3	Full-size rearward-facing child restraint system for toddlers
D	ISO/R2	Reduced-size rearward-facing child restraint system for toddlers
E	ISO/R1	Rearward-facing restraint system for infant
F	ISO/L1	Left-facing child restraint system (portable bed)
G	ISO/L2	Right-facing child restraint system (portable bed)

■ Applicable types of child restraint system (ISOFIX):

Weight group	Size class	Fixed module	Front passenger seat	Second row outer seat	Second row center seat
Portable bed	F	ISO/L1	X	X	X
	G	ISO/L2	X	X	X
		(1)			
Group 0	E	ISO/R1	X	IL	X
		(1)			
Group 0+	E	ISO/R1	X	IL	X
	D	ISO/R2	X	IL	X
	C	ISO/R3	X	IL	X
		(1)			
Group 1	D	ISO/R2	X	IL	X
	C	ISO/R3	X	IL	X
	B	ISO/F2	X	IL, IUF	X
	B1	ISO/F2X	X	IL, IUF	X
	A	ISO/F3	X	IL, IUF	X
		(1)			
Group 2		(1)			
Group 3		(1)			

The meaning of the letters in above table:

X: The position of ISOFIX does not suitable for the ISOFIX child restraint system of this weight group or this size class.

IL: It is suitable for the special ISOFIX child restraint system on the list. These restraint system may be special vehicles, restricted or semi-general types.

IUF: It is suitable for the forward-facing general ISOFIX child restraint system approved by this weight group.

(1): For child restraint system without ISO/XX size class mark (A to G), if it is required to know the suitable weight group, please check the model list of ISOFIX child restraint system.

Installation of child restraint system (ISOFIX)

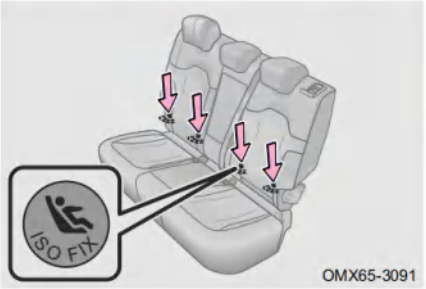

OMX65-3091

Step 1: Find the lower retaining ring used to secure child restraint system.

Step 2: Put the child restraint system on second row seat.

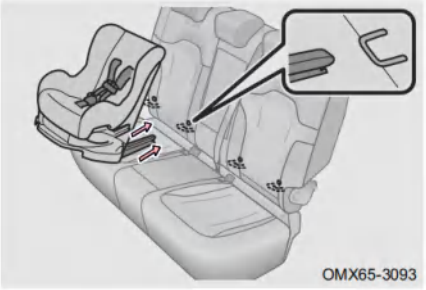
OMX65-3093

Step 3: Insert and secure lower hook of child restraint system to lower retaining ring.

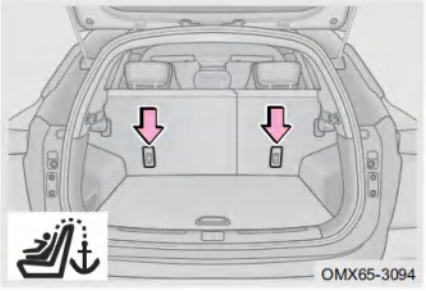
OMX65-3094

Step 4: Pull out the webbing of the child restraint system and fix it with the upper fixing point (TOPTETHER) for forward-facing child restraint system (as shown in the illustration).

Note: According to the child restraint system type you purchased, check if it needs to be fixed with the upper fixing point (TOPTETHER).

READ

- Before use, please remove the head restraint where the child restraint system to be installed, and then hang the hook of child restraint system to the fixing point to avoid the strap of the hook directly over the top of the head restraint or bypass the head restraint, and the head restraint and the strap should not interfere.
- After the upper strap hook is hung into the fixing point, be sure to tighten the strap and not loosen; For detailed methods of fixing and tightening the upper strap of child restraint system, please strictly follow the instruction manual provided by the child restraint system manufacturer.

⚠ WARNING

- After installing child restraint system, never adjust the seat.
- Child restraint system must be installed in second row seat.
- Never fix more than one child restraint system on a set of retaining rings.
- Do not allow the upper strap to cross or bypass the head restraint, and be sure to tighten the strap after installation. Incorrect installation may cause serious injury to children.
- For vehicles with a luggage cover on the luggage compartment, the luggage cover must be removed before installing the child restraint system to the fixing point.
- If retaining ring device is damaged or overloaded during an accident, please contact Jetour authorized service station for inspection and repair immediately.
- If the driver's seat interferes with the correct installation of the child restraint system, install the child restraint system on the second row right side seat.
- Do not use child restraint system anchor bracket to secure items other than child restraint system. Otherwise, the Chery Commercial Vehicle Co., Ltd. will not be responsible for any problem caused thereby.
- If the child restraint system is not correctly fixed in place, the child or passengers may face serious injury or even death during a collision.
- Make sure the top strap is securely latched, and check if the child restraint system is secured by pushing and pulling it in different directions. Follow the installation instructions provided by the child restraint system manufacturer. If the child restraint system is not correctly installed, the child is at risk of serious injury or even death during a collision.
- If the child restraint system interferes with locking device of front seat, do not install child restraint system in second row seat. The child and front passenger may be seriously injured or even death during a collision or other unintended events.
- Do not allow child to play with the child restraint system lock function belt. Avoid belt twists around a child's neck, if so, it may not be released, leading to chocking, other serious injuries or even death. If this occurs and the buckle cannot be released, scissors should be used to cut the belt.
- When the child restraint system is not in use, it should also be fixed properly on the seat. Do not place unfixed child restraint system in the passenger cabin.
- If it is necessary to remove child restraint system, take it out after removing or store it properly in luggage compartment. Otherwise, it may cause serious injuries during a collision or other events.

3-1. Key Information
Smart Key 64
Replacing Smart Key Battery 65
Vehicle Locating Mode 67
Remote Start/Stop 67
Effective Range 68
Keyless Entry 68
Welcome Function 69
Vehicle Arming 70
Immobilizer System 71

3-2. Doors
Door Lock Switch 72
Unlocking Doors with Inside Handle 73
Door Mechanical Switch 73
Child Lock 75

3-3. Windows
Window Setting 76
Window Remote Control Function 77
Window Jam Protection Function 77

3-4. Panoramic Moon Roof (If Equipped)
Opening/Closing Moon Roof 79
Opening/Closing Sunshade 80

3-5. Multimedia Display
Multimedia View 83
Vehicle Setting 85
Phone-link (If Equipped) 87

3-6. Air Conditioning System
Air Conditioning System 89
Function Definition 90
Refrigeration Function of Armrest Box on Auxiliary Fascia Console 93

3-7. Wireless Charging (If Equipped)
Wireless Charging 93

3-8. Storage Space
Storage Space 95

3-9. Power Outlet
Power Outlet 98

3-10. USB Port
Front 98
Rear 99

3-11. Sun Visors and Vanity Mirrors
Sun Visors and Vanity Mirrors 99

3-12. Hood
Opening/Closing Hood 100

3-13. Back Door
Power Back Door (If Equipped) 101
Back Door Emergency Opening 103

3-14. Fuel Tank Cap
Opening/Closing Fuel Tank Cap 104

3-1. Key Information

Smart Key

Smart key is used to unlock/lock doors remotely, open back door and perform smart vehicle locating within about 20 m (within clear view) of the vehicle.

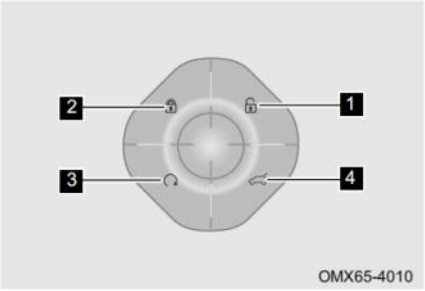

OMX65-4010

1 Unlock button
2 Lock button
3 Start/stop button
4 Back door opener button

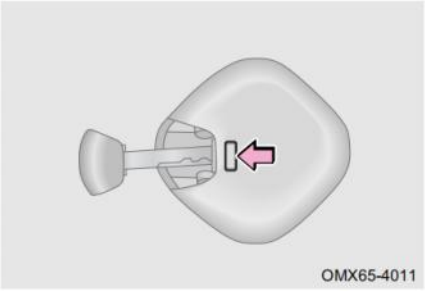
OMX65-4011

The mechanical key built into the smart key can be used to unlock/lock doors after pressing release button and removing mechanical key. After using, return it into smart key (for details, refer to "Doors").

Function limit

■ In the following conditions, the smart key may not work properly:

- There are more than one smart keys being used nearby.
- The distance between vehicle and smart key is over 20 m.
- The smart key is in contact with, or is covered by a metallic object.
- The smart key is placed near an electrical appliance (such as mobile phone or personal computer).
- The key is near wireless communication devices that have the similar frequency with the remote control key (such as portable radio).
- The key is near facilities that generate strong radio waves (such as TV tower, radio station, power station, airport, train station).

⚠ CAUTION

- This product is a low frequency radio device and can be interfered by various radio services or radiation from industrial, scientific and medical equipment.
- Do not change the transmitting frequency, increase the transmitter power (-including installation of the wireless RF power amplifier), or install an external or other transmitting antenna without permission.
- When using the product, do not interfere with legal wireless communications; In case of interference, immediately stop using and take measures to eliminate the interference before continuing to use it.

If any of the following conditions occurs, the smart key battery may be low or depleted:

- The remote control distance gradually decreases.
- Remote control function does not work even there is no interference.
- When pressing any smart key button, indicator is dim or does not come on.

■ Smart key may not be detected in the following conditions:

- Smart key is in luggage compartment.
- When locking doors, smart key is too close to the window or roof.
- Check if the smart key is placed together with strong electromagnetic interference sources (such as portable power source, interphone or other phones etc.).

Replacing Smart Key Battery

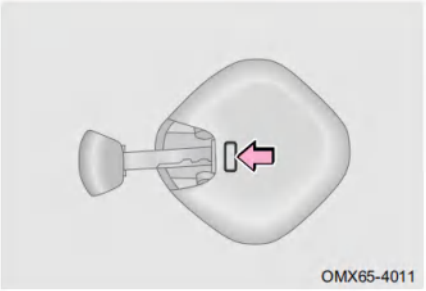

Step 1: The mechanical key built into the smart key. Press release button on backside of smart key to take out mechanical key.

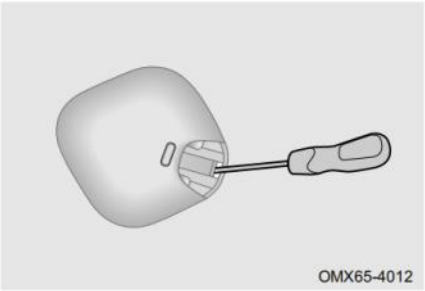
OMX65-4012

Step 2: Use a screwdriver with its tip wrapped with tape to insert into smart key hole and gently separate the smart key cover.

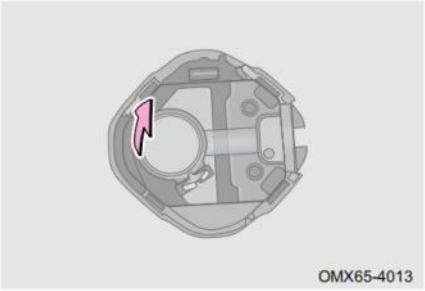
OMX65-4013

Step 3: Remove battery and install a new one.

Step 4: Install smart key in place in the reverse order of removal.

Step 5: After replacing battery, check if the smart key operates properly (press any smart key button to confirm that indicator comes on). If the smart key still does not function correctly, please contact Jetour authorized service station for inspection and repair as soon as possible.

ENVIRONMENTAL PROTECTION
Used lithium battery cannot be handled as general household rubbish, please handle used battery according to the local regulations and provisions regarding environmental protection.

READ
Make sure that positive and negative terminals of battery are placed correctly.

⚠ CAUTION

- Do not place the key in a high temperature place, such as the dashboard exposed in high temperature in summer.
- Do not use the key to hit other object hard or drop it.
- Do not permeate water into key in or wash it in an ultrasonic cleaner.
- Do not place the smart key together with electromagnetic wave device, such as mobile phone.
- Do not bend electrode and terminal when installing battery.
- Make sure your hands are dry and keep away from water when replacing the battery.
- Do not touch new battery with oily hand. Failure to do so may cause battery corrosion.
- Do not touch or move any components inside the smart key, or its functions may not work properly.
- There are some difficulties when replacing battery, so it may be damaged if replacing the battery by yourself. It is recommended to replace it at Jetour authorized service station.

⚠ WARNING

Take special care to prevent children from swallowing the removed battery or other components, failure to do so may cause death or serious injury to the child.

Vehicle Locating Mode

When vehicle is in anti-theft state, pressing the lock button on the smart key twice within 1.5 s can trigger the horn to sound twice, turn signal light to flash, and position light to come on for 10s. When the location of the vehicle cannot be confirmed, this function can be used to find the specific location of the vehicle.

READ

If smart key is equipped with vehicle locating button, locate your vehicle by pressing vehicle locating button.

Remote Start/Stop

Press the lock button on smart key, and then long press the start/stop button to start/stop the engine.

Effective Range

Automatic sensing area

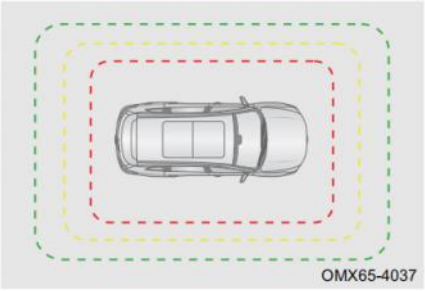
OMX65-4037

Away from locking area

Leave the vehicle while carrying smart key on your person, the doors will lock automatically.

Smart welcome lights ON area

Approach the vehicle while carrying smart key on your person, the welcome lights will turn on.

Approaching to unlocking area

Approach the vehicle while carrying smart key on your person, the doors will unlock automatically.

Keyless Entry

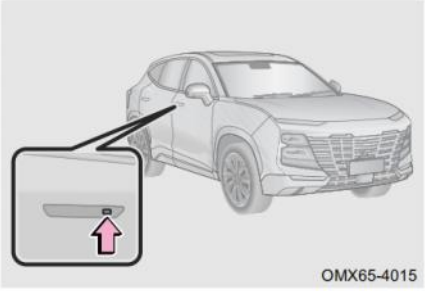
OMX65-4015

Method 1: Press button on driver door handle when carrying smart key, the system automatically recognizes the validity of smart key and doors unlock automatically.

Method 2: Approach the vehicle while carrying smart key on your person, welcome lights turn on, system automatically recognizes the validity of smart key and doors unlock automatically.

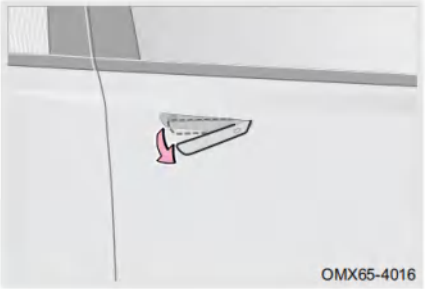
OMX65-4016

After the vehicle is unlocked, the outside door handle will automatically expand, and the door can be opened by pulling the outside door handle.

READ

- Set the closing time of all door handles or driver side door handle through multimedia display; Set automatic lock of welcome to ON/OFF, if it is ON, the vehicle will unlock automatically when approaching it, and the vehicle will lock automatically when leaving it.
- If vehicle is locked, vehicle speed exceeds 3km/h or door is opened (-deployment time exceeds set time), the outside door handle will not retract automatically, and it will retract automatically after all doors are closed for 30s.

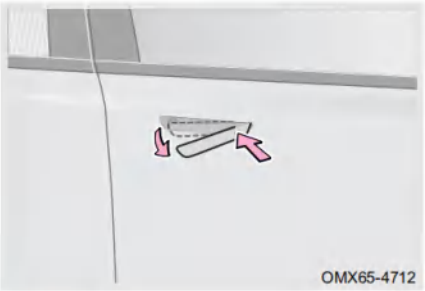
OMX65-4712

If the outside door handle is closed or cannot be expanded, press and hold the front area of corresponding outside door handle to manually expand the outside door handle.

WARNING

During the automatic retraction of door handle, please avoid passengers (-especially children) putting their hands into handle, causing hand injury.

Welcome Function

Welcome function is turned on through multimedia display. When vehicle is in the arming state, approach the vehicle about 2 m while carrying smart key on your person, welcome light and position light come on, approach the vehicle about 1.5 m, the vehicle will unlock automatically; When all doors and back door are closed, the vehicle power is switched to OFF mode. When leaving the vehicle about 3 m while carrying smart key, the vehicle will lock automatically, window and moon roof will close automatically.

READ

- Use the welcome function. After locking vehicle for 3 days, welcome function is closed. It is necessary to restart engine, welcome function will be restored.
- Do not put smart key next to computer, cordless mouse, phone, etc. otherwise welcome function may not work properly.
- If the smart key is over 3m away, horn is not heard, turn signal lights do not flash once, rear view mirror folds, four door windows automatically rise (-successful arming prompt), check if the vehicle is locked to avoid locking failure caused by misoperation or unsatisfied condition.

Vehicle Arming

Arming operation

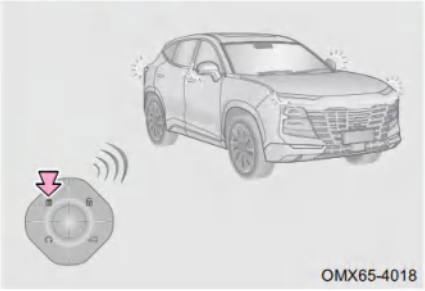
OMX65-4018

Arming mode:

When vehicle power is switched to OFF mode, four doors and back door are closed, press the lock button on smart key or leave vehicle with smart key, the door will automatically lock and enter the arming status.

Successful arming prompt:

Turn signal lights flash once and anti-theft horn sounds once, rear view mirror folds, four door windows automatically rise.

Arming failure prompt:

It is detected that the back door and any door of back door are not closed, the vehicle cannot be armed, and the horn sounds three times.

Secondary arming mode:

After disarming, if all doors and back door are not operated, the vehicle will lock automatically and enter arming state after 30 s; if any of the doors or back door is opened, the vehicle will exit secondary arming mode.

READ

- Arming prompt needs to be set in multimedia display, for details, refer to "-Multimedia Display".
- Vehicle arming cannot be set if vehicle power is not switched to OFF mode.
- If all doors are closed and back door is not closed completely, the central lock will lock once and vehicle arming is not set successfully.
- If back door is closed and any door is not closed, the central lock will lock and then unlock, and vehicle arming is not set successfully.

Alarm triggering

In the following situations, the system will send an alarm:

- Without using the smart key entry function, any of doors, luggage compartment door or hood is unlocked.
- Without using the smart key start function, the vehicle is powered on.

Disarming operation

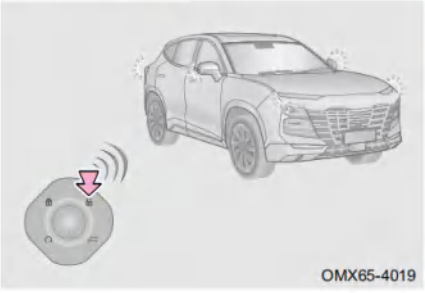
OMX65-4019

Press unlock button on smart key or approach vehicle while carrying smart key on your person, the system automatically recognizes the validity of smart key and doors unlock automatically, then vehicle exits from arming mode.

Successful disarming prompt:

Turn signal lights flash twice, mirrors are extended.

Immobilizer System

Engine immobilizer system

Smart key has a built-in transponder chip. If the smart key is not pre-matched into engine immobilizer module, the built-in chip will prevent engine from starting.

■ In the following conditions, the engine immobilizer system may not work properly:

1. Smart key is in contact with a metallic object.
2. Modify or remove engine immobilizer system.
3. Smart key is too close to or contacts smart key (key with a built-in transponder chip) of another vehicle.

⚠ CAUTION

- Do not match the smart key by yourself, otherwise the engine immobilizer system may not work properly.
- If vehicle fails to start, it may be due to the interference of immobilizer system, please contact Jetour authorized service station for inspection and repair immediately.

Vehicle anti-theft system

When vehicle is in arming mode, illegally opening any of four doors and back door or switching vehicle power to ON gear can trigger vehicle alarm and the flashing of turn signal light.

READ

- The vehicle anti-theft system will not be enabled if the doors are locked by mechanical key. It is recommended to lock doors by smart key.
- After locking doors with smart key, the vehicle anti-theft system will be triggered if front left door is unlocked and opened by mechanical key.
- When vehicle anti-theft system is triggered, vehicle anti-theft system can be deactivated by pressing unlock button on smart key or switching if the vehicle power to ON mode.
- To prevent unexpected triggering of vehicle anti-theft system or vehicle theft, before leaving the vehicle, check that nobody is in vehicle, all doors and windows are closed properly and vehicle is fortified successfully.

3-2. Doors

Door Lock Switch

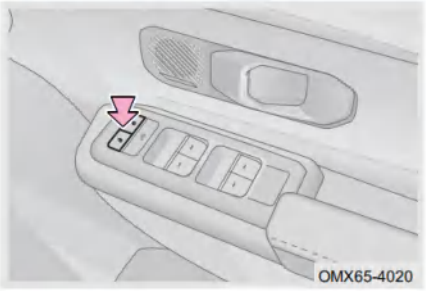

When doors are locked, press "🔓" switch to unlock doors.

When doors are unlocked, press "🔒" switch to lock doors.

READ

When all doors are closed and vehicle speed is more than 20 km/h, doors will automatically lock. Door automatic lock function need to be set in multimedia display, for details, refer to "Multimedia Display".

Unlocking Doors with Inside Handle

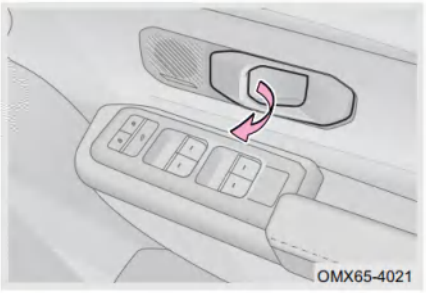

When doors are unlocked, pull door inside handle directly to open doors.

When doors are locked, pull door inside handle for the first time to unlock the doors, and pull it again to open the doors.

⚠ CAUTION

- In case of vehicle collision, the doors will unlock automatically.
- Repeat the operation of unlocking/locking 10 times within 25s, the vehicle is forbidden to lock at this time.
- If the doors are locked using mechanical key, the vehicle anti-theft function cannot be enabled. Therefore, it is recommended to lock doors using smart key.
- After locking doors with smart key, the vehicle anti-theft system will be triggered if front left door is unlocked and opened by mechanical key.

Door Mechanical Switch

Vehicle can not be unlocked/locked electrically when battery is discharged or under similar conditions. In this case, each door can be unlocked/locked with door mechanical switch.

Front right door

When unlocking front right door with mechanical key, the vehicle anti-theft system will be triggered; After triggering the vehicle anti-theft system, press the smart key unlock button or switch vehicle power to ON mode to deactivate vehicle anti-theft system.

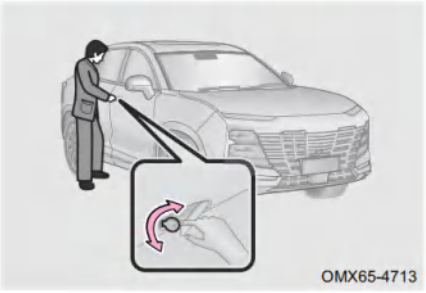
OMX65-4713

Step 1: Press and hold the front area of driver door outside handle to expand the door outside handle.

Step 2: Hold the expanded door outside handle with one hand, and insert the mechanical key into the key hole in the door outside handle with the other hand, and rotate clockwise to unlock driver door.

Step 3: When locking, it is also necessary to press and hold the front area of door outside handle, and use mechanical key to rotate counterclockwise to lock driver door.

Front left door/second row doors

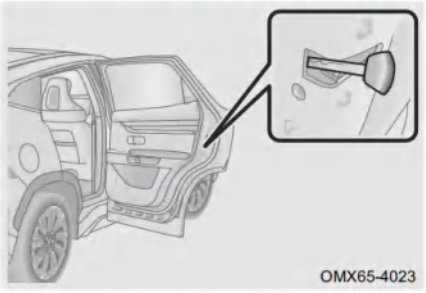
OMX65-4023

Vehicle cannot be locked electrically when battery is depleted or under similar conditions, in this case, the doors can be locked with emergency locking function.

Operating method is as follows:

Step 1: Open the doors;

Step 2: Insert the mechanical key into mechanical switch hole from the door panel edge lock body. Press down the white lock knob with mechanical key, thus the locking operation on one side door can be achieved;

Step 3: Pull the door handle to make sure the door is locked;

Step 4: Lock other doors according to above steps if necessary (this function does not include the front left door).

READ

- If the doors can not be unlocked/locked electrically, please go to Jetour authorized service station for inspection and repair as soon as possible.
- After using the door mechanical switch to lock vehicle, please check whether each door is locked. If it cannot be locked, please contact Jetour authorized service station immediately.

Child Lock

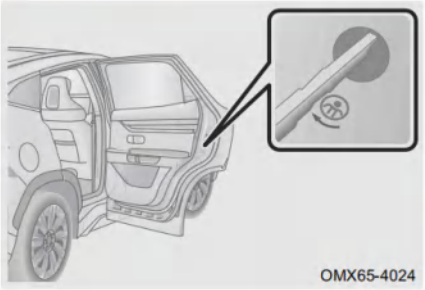

The child lock is located on inside of second row doors.

Lock: Use mechanical key or suitable screwdriver to turn in the direction of arrow to activate the child lock, at this time, rear door can not be opened from inside and it only can be opened from outside.

Unlock: Use mechanical key or suitable screwdriver to turn in the opposite direction of arrow to unlock the child lock, at this time, rear door can be opened from both inside and outside.

⚠ WARNING

- The system is independent and cannot replace the central lock mechanism in any case.
- Make sure that all doors are closed before driving, otherwise accidents and personal injury may be caused.
- When a child is seated on rear seat, always activate the child lock to prevent rear door being opened accidentally while driving.
- In the case of an accident, when the child lock is activated and there is someone in vehicle, remember that, rear door can only be opened from outside.
- In hot weather, if vehicle stalls and all doors and windows close, do not allow any animal or child in vehicle alone. Otherwise, serious injury or even death may be caused by the sharp temperature rise even if it is a short time.

3-3. Windows

Window Setting

Usage methods

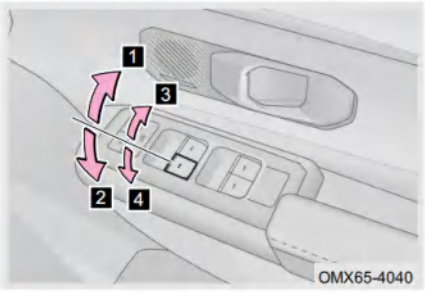

Operate power window switch after vehicle power is switched to ON mode:

1 Auto close

2 Auto open

3 Manual close

4 Manual open

READ

- If any of doors is not opened within 1 minute while vehicle power is switched to OFF mode, the power window can be operated.
- After leaving vehicle in low temperature environment for a long time, when operating power window switch, window glass cannot be fully opened or closed. In this case, release the switch and then operate it again, repeat this operation 3 - 5 cycles to resume.
- When the driver window switch is forbidden to press, the passenger window cannot be regulated.
- In order to protect the function of window software, it is forbidden to regulate for 30 s or more.
- Vehicle is armed successfully, and the window does not automatically rise fully, it will trigger alarm 3 times.

⚠ WARNING

- The driver is responsible for the operation of all power windows, including the operation of the occupants. To prevent accidental operation (especially by children), do not allow children to operate the power windows. The children and other passengers may get caught in the power windows. In addition, it is recommended to use the window lock switch when children are sitting.
- When operating window, check that any part of passenger will not be caught.
- When leaving the vehicle, turn off the ENGINE START STOP switch, carry the key and get off with children. Due to naughty children, etc, accidental operation may occur resulting in an accident.

Window lock switch

Use this function to prevent children from accidentally opening or closing the passenger window.

Press the window locking switch, switch indicator will illuminate and the passenger window will be locked. Passenger windows only can be operated by driver window switches (It is recommended to use this function when there is a child in vehicle.).

Window Remote Control Function

Remote control window down function

When vehicle power is switched to OFF mode, all doors are closed. In the effective area, long press the unlock button on the smart key to open all windows and the outside rear view mirror will extend automatically.

Remote control window up function

When vehicle power is switched to OFF mode, all doors are closed. In the effective area, press the lock button on the smart key to close all windows and the outside rear view mirror will fold automatically.

> ⚠ WARNING
>
> When operating power window with wireless remote control, check that any part of passenger will not be caught by side window before operating the power window. In addition, do not allow children to operate the window with wireless remote control, otherwise the power window may pinch children and other passengers.

Window Jam Protection Function

In the effective area of jam protection function, when the window encounters obstacles during window auto up, the window will stop halfway and open slightly.

> ⚠ WARNING
>
> - Do not allow children to operate the power windows.
> - Do not activate jam protection function by intentionally clamping any part of body.
> - If an object is caught when the window is about to close completely, jam protection function may not work. Be careful not to let the window catch any part of body.

Jam protection function

During one-touch window up or remote control one-touch window up, if obstacle is encountered in jam protection area and resistance exceeds a certain value, window will stop rising and go down slightly. To close window, move away obstacle and operate again.

To protect the window regulation system, window jam protection function and one-touch window up function will be canceled in some conditions to avoid potential safety hazard. At this time, the window only has the conventional up-down function. After jam protection learning, the one-touch window up function of corresponding door will return to normal.

Canceling jam protection function

If obstacle is encountered twice continuously when rising the window, the window will stop rising, jam protection function will be canceled. If the battery cable is disconnected during working or non working process, jam protection function will be canceled.

Overheat protection function

To protect motor, if window up-down operation is performed continuously, overheat protection function actively disables the control of corresponding window switch. After motor temperature returns to normal, it recovers. This function will not affect the use of other normal window up-down functions.

Window jam protection self-learning

Step 1: Turn vehicle power to ON mode.

Step 2: Operate window switch manually to fully close the window and hold the switch for 2 s.

Step 3: Release the switch.

Step 4: Operate window switch manually to fully open the window and hold the switch for 2 s.

Step 5: Release the switch.

Step 6: Try to operate automatic window up function.

Step 7: If window cannot close automatically, please repeat the above steps to set. If automatic window up function cannot resume after repeating the above steps, please go to Jetour authorized service station for inspection and repair as soon as possible. Note: If window position memory setting is lost, it can also be set with remote control one-touch window up function. At this time, window will go down to bottom, then go up to top. Window if closed normally while setting is successful.

READ
When driving over roads with potholes or uneven surfaces, gravity may affect door system unexpectedly. In this case, window may reverse and go down while rising by one-touch window up function. This is a small probability event and normal.

⚠ CAUTION

- Frequent triggering of jam protection will lead to one-touch window up failure, so it is necessary to enable self-learning operation.
- If battery cable is disconnected and reconnected, automatic window up function and jam protection function will not work.
- Jam protection function is a kind of window safety protection function. Never try to active it repeatedly using various objects, in improper methods or even by intentionally pinching any part of your body. Failure to do so may cause damage to window regulation system mechanism or accidental personal injury.
- When closing window, always keep the window close area clear even if it is equipped with jam protection function, otherwise, if there is a thin object and system cannot sense it, jam protection will not work. If someone's hand or finger is caught, extremely serious injury may be caused.

3-4. Panoramic Moon Roof (If Equipped)

Opening/Closing Moon Roof

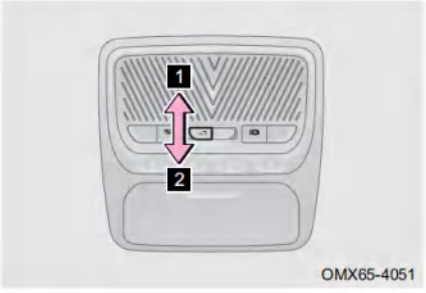

OMX65-4051

1 Opening moon roof

2 Closing moon roof

Manual operation

- Move and hold the button to **1**, and moon roof will stop after tilting to the maximum angle. Move and hold the button again, and moon roof can be opened manually.
- Move and hold the button to **2**, and moon roof can be closed manually.
- During the manual operation of moon roof, release the button, and moon roof will stop.

Automatic operation

- Move the button to **1**, and moon roof will stop after tilting to the maximum angle. Move the button, and moon roof will automatically open to a comfortable position and stop, then move the button again, moon roof will open fully.
- Move the button to **2**, moon roof will close automatically.
- During the automatic operation of moon roof, move button **1** or **2**, moon roof will stop.

⚠ CAUTION

- When the outside temperature is lower than -20℃, it is forbidden to operate moon roof to avoid damage to moon roof.
- In order to protect the function of moon roof software, it is forbidden to operate moon roof for 30 s or more.
- Do not use a high pressure water gun to wash moon roof weatherstrip.

⚠ WARNING

- The driver is responsible for the operation of moon roof, including the operation of occupants. To prevent accidental operation (especially by children), do not allow children to operate the moon roof. The children and other passengers may get caught in the moon roof.
- When operating moon roof, check that any part of passenger will not be caught.
- When leaving the vehicle, turn off the ENGINE START STOP switch, carry the key and get off with children. Due to naughty children, etc, accidental operation may occur resulting in an accident.

Opening/Closing Sunshade

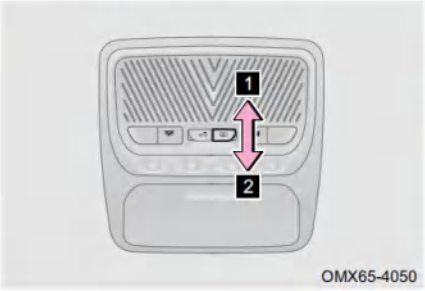

OMX65-4050

1 Opening sunshade

2 Closing sunshade

Manual operation

- Move and hold the button to **1**, sunshade will be opened manually.
- Move and hold the button to **2**, and sunshade will be closed manually.
- During the manual operation of sunshade, release the button, and sunshade will stop.

Automatic operation

- Move the button to **1**, sunshade will open automatically.
- Move the button to **2**, and sunshade will close automatically.
- During the automatic operation of sunshade, move button **1** or **2**, sunshade will stop.

READ

- For details about voice recognition function, refer to "Multimedia Display".
- Clean the sunshade rail regularly.

⚠ CAUTION

- When the outside temperature is lower than -20℃, it is forbidden to operate sunshade to avoid damage to sunshade.
- In order to protect the function of sunshade software, it is forbidden to operate sunshade for 30 s or more.
- Do not squeeze moon roof sunshade with excessive force to prevent sunshade from dropping or damage.

⚠ WARNING

- The driver is responsible for the operation of sunshade, including the operation of occupants. To prevent accidental operation (especially by children), do not allow children to operate the sunshade. The children and other passengers may get caught in the sunshade.
- When operating sunshade, check that any part of passenger will not be caught.
- When leaving the vehicle, turn off the ENGINE START STOP switch, carry the key and get off with children. Due to naughty children, etc, accidental operation may occur resulting in an accident.

Jam protection function

In the effective area of jam protection function, when moon roof and sunshade encounters obstacles during closing, the they will stop halfway and open slightly.

⚠ WARNING

- Do not activate jam protection function by intentionally clamping any part of body.
- If an object is caught when the sunshade is about to close completely, jam protection function may not work. Be careful not to let the window catch any part of body.

Auto close function

- Vehicle is armed successfully, moon roof and sunshade will close automatically.
- When the vehicle power is in ON mode, if the rain light sensor senses rain and snow, moon roof will close automatically.

READ

- When the sunshade is in the closed position, the system will automatically adjust the opening angle of the sunshade according to the opening angle of the moon roof when opening the moon roof.
- Within a few seconds after vehicle power is switched to OFF mode, moon roof and sunshade also can be operated.

⚠ CAUTION

- During the operation of moon roof, if vehicle speed exceeds 120 km/h, moon roof will maintain its original motion state and high speed auto closing function of moon roof cannot be started.
- When moon roof performs high speed auto closing function, if moon roof switch is used, the moon roof will stop operating immediately.

Self-learning

If the system is disordered or the vehicle battery is recharged or disconnected, it will be necessary to perform sunshade self-learning again:

- Operate the switch to close moon roof and sunshade, and then long press and hold moon roof close button. When a "click" sound of moon roof and sunshade is heard, release the switch.
- Long press and hold moon roof close button again within 6 s, release the button after moon roof and sunshade operate from half open to full close, and the self-learning is completed.

If moon roof or sunshade rebounds during closing, self-learning will be performed forcibly through the following operations:

- When moon roof or sunshade rebounds, long press and hold moon roof close button immediately. After the rebound, continue to long press and hold moon roof close button until moon roof is completely closed and a "click" sound is heard.
- Long press and hold moon roof close button again within 6 s, sunshade is closed, release the button after moon roof and sunshade operate from half open to full close, and the self-learning is completed.

⚠ CAUTION

- It is necessary to ensure that battery is fully charged before self-learning, so it is recommended to replace the battery with a new one or fully charge the battery before self-learning.
- There is no jam protection force during initialization, operators should pay attention to safety.
- If the sunshade cannot function properly after the above operations, please contact Jetour authorized service station for inspection and repair.

3-5. Multimedia Display

Multimedia View

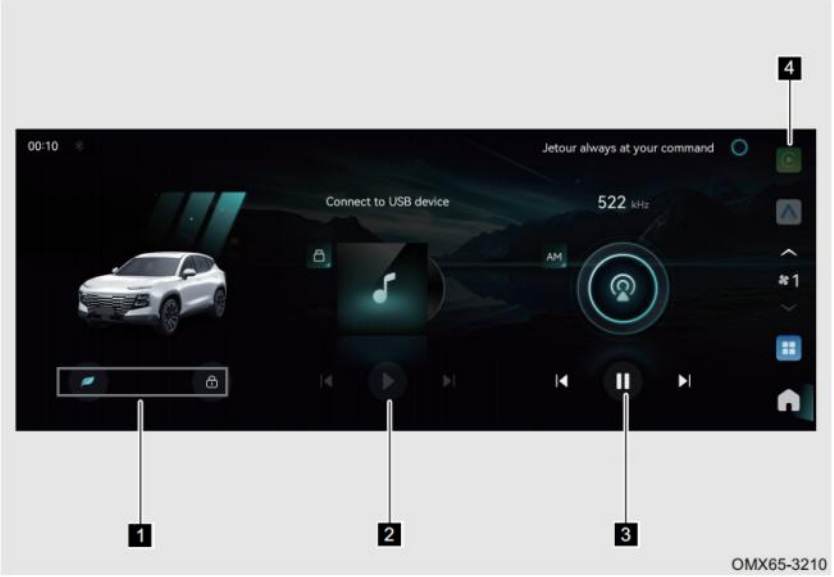

1 Quick operation setting
2 Multimedia
3 Radio
4 Display area of application setting

Setting button

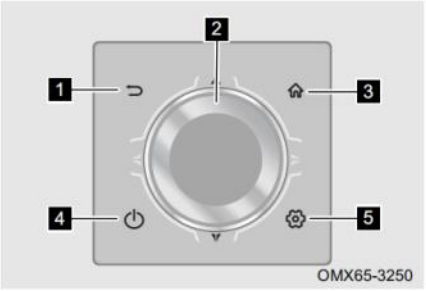

1 Back button

Shortly press to return to previous page.

2 Volume adjustment knob

Rotate counterclockwise to decrease volume and clockwise to increase volume;

Push upward to move the cursor upward; Push down to move the cursor down; Push left to move the cursor to left, push right to move the cursor to right, and shortly press to confirm the selection.

3 Home button
Shortly press to enter the main screen.

4 Audio switch button
Turn standby mode ON/ OFF.

5 Setting button
Shortly press to enter setting screen.

> ⚠ CAUTION
>
> Do not repair, disassemble or modify the head unit without authorization. If there is a malfunction, please contact Jetour authorized service station.

Application screen

OMX65-3260

Application screen includes User Manual, system settings, vehicle settings, Bluetooth call, media center, etc.

Quick screen

OMX65-3270

Set to turn on network and Bluetooth, adjust media volume, set driving mode, etc. on the quick screen.

Multimedia

OMX65-3280

On the multimedia screen, click the button in the upper left corner and select radio, Bluetooth music, local music, etc.

Voice assistant (if equipped)

When the multimedia display is turned on, the voice assistant can be awakened by any of the following methods:

Method 1: Directly say "Hello, Jetour".

Method 2: Click "Voice Assistant" in upper left corner of multimedia screen.

Method 3: Through "" on steering wheel.

Vehicle Setting

System setting

OMX65-3290

Set network, Bluetooth, sound, display and general on system settings screen.

Vehicle setting

■ Commonly used

OMX65-3300

Driving mode: Sport/comfort.

Power steering mode: Comfort/sport.

Windows: Set moon roof to fully close/half open/fully open; Set sunshade to fully close/half open/fully open; Set side window to fully close/ ventilated/fully open; Turn on/off the rear wiper linkage.

Rearview mirrors: Set ON/OFF, immediate extending or immediate folding of rearview mirrors auto folding when locking vehicle.

Tail gate: Set the opening angle of tail gate.

■ Exterior lamp

OMX65-3310

Follow-me-home delay: Off/60s/30s.

Lane change flash times: 7 times/5 times/3 times.

■ Ambient lamp

OMX65-3320

Set color and brightness of ambient lamp; Choose from monochrome breathing, panchromatic breathing, or musical rhythms.

■ Driver assistance

OMX65-3330

Blind spot monitoring: ON/OFF.

Door-open warning: ON/OFF.

Adjustable overspeed alarm: ON/OFF.

■ Vehicle setting

OMX65-3340

Time length for four door handles to fold: 30s/90s/180s.

State of four door handles: Automatically pop up/Do not pop up.

Right front door self-defined button: Voice wakening/disabled.

Left back door/right back door self-defined button: Voice wakening/ disabled.

Auto lock: ON/OFF.

Power-off unlock: ON/OFF.

Welcome mode: ON/OFF.

Fortifying prompt: Light, horn, light and horn.

Mode button definition: Switch sound source or turn on panoramic view.

READ

The setting items are different depending on the configuration of the vehicle. Please refer to the actual vehicle configuration.

Phone-link (If Equipped)

Phone-link mainly uses USB or WIFI communication technology to realize the interconnection and intercommunication between mobile phone and head unit, and synchronizes some functions (such as navigation, music, radio, news) in the mobile phone to the audio head unit, allowing the driver to control the head unit to experience the mobile APP. Maximize the convenience of user operation and take into account driving safety.

Scan the QR code on audio head unit by using Android phone/iPhone, and then skip to App Store or official website to download it (Android phone: search for Easy connection in Google Play; iPhone: search for Easy connection in APP Store).

USB data cable connection

1. Open the Bluetooth settings of mobile phone and head unit, and make a matching connection;
2. Connect mobile phone and USB port with an original data cable;
3. Operate the APP according to the prompt in dialog box that pops up on the mobile phone screen.

WIFI connection

1. The mobile phone can be connected with audio head unit through WIFI hotspot (mobile phone connects to audio head unit hotspot, head unit connects to mobile phone hotspot, mobile phone and audio head unit jointly connect to the third-party hotspot);
2. Open the Bluetooth settings of mobile phone and head unit, and make a matching connection;
3. Operate the APP according to the prompt in dialog box that pops up on the mobile phone screen.

READ

- USB connection permission should be turned on when establishing a connection by a USB.
- When the mobile phone is connected to Android auto, if the mobile phone does not support the multimedia display to obtain call status, the multimedia display does not pop up an incoming call notification when answering an incoming call. If the mobile phone supports the multimedia display to obtain call status, the multimedia display pops up an incoming call notification when answering an incoming call.

CAUTION

Disclaimer

- This software is suitable for designated T-Box. If this software is used to other terminal systems, our company will not be responsible for any problem caused thereby.
- Please operate this software before the vehicle is driving or when it is parked. Do not operate it during driving, or the user shall be fully responsible for the safety accident caused by this, our company will not be responsible for this.
- Please choose the traffic route according to the actual local traffic conditions. The map navigation is for reference only. The user choose any third-party navigation software by themselves, and any behavior that violates traffic laws and other laws, the user bears full responsibility, our company will not be responsible for this.
- Before using this software, please read carefully and thoroughly understand this disclaimer. You have the right not to use this software. However, it is deemed that you fully accept the entire content of this disclaimer once using this software.

3-6. Air Conditioning System

Air Conditioning System

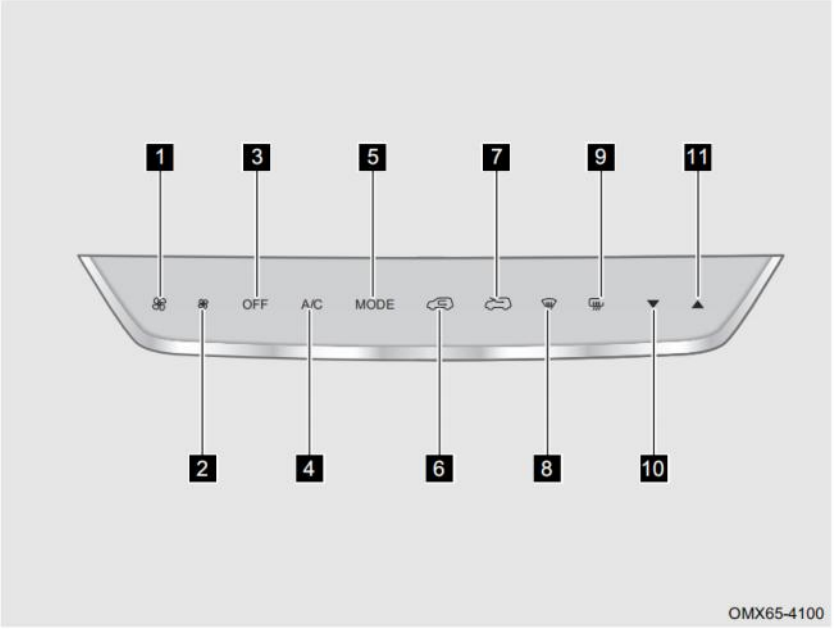

1 Air speed increasing button
2 Air speed decreasing button
3 A/C switch button
4 A/C button
5 Mode adjustment button
6 Recirculated air button
7 Outside air button
8 Front defrosting button
9 Rear defrosting button
10 Temperature decrease button
11 Temperature increase button

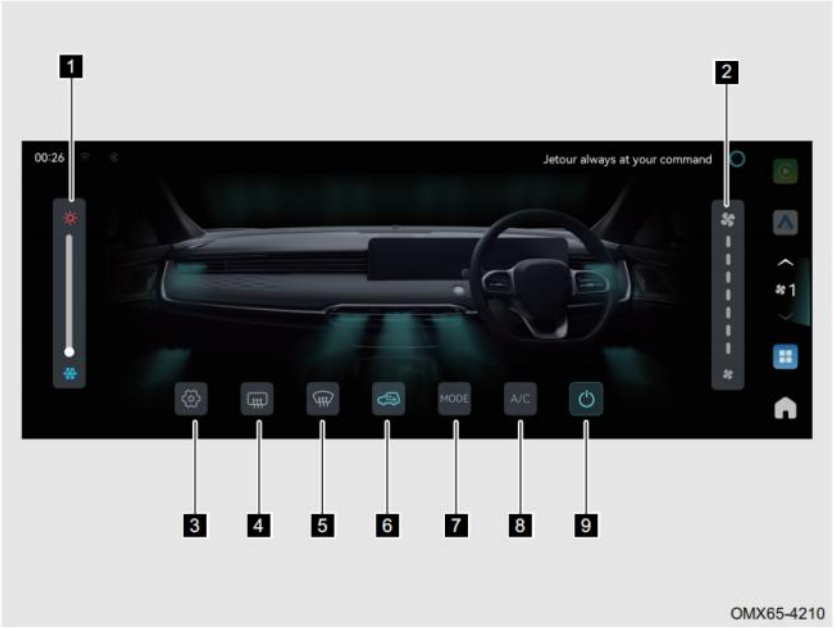

1 Temperature setting	2 Airflow volume adjustment	3 Setting
4 Rear defrosting button	5 Front defrosting button	6 Circulation mode
7 Mode adjustment button	8 A/C switch button	9 A/C button

Function Definition

Airflow volume adjustment

The airflow volume from outlet can be controlled using airflow volume adjustment knob on air conditioning control panel.

Temperature adjustment

Temperature adjustment button is used for controlling the air temperature from outlet.

A/C switch button

Click A/C switch button to turn on air conditioning. At this time, the icon comes on, and the compressor starts to operate to realize refrigeration. Click this button again to turn off air conditioning compressor. At this time, the icon goes off and the compressor stops to operate.

A/C button

When vehicle power is switched to ON mode, click A/C button, indicator comes on, indicating that the air conditioning is allowed to turn on; indicator turns off, indicating that the air conditioning is turned off directly.

Outside/recirculated air button

Click the outside/recirculated air mode button, the air inlet mode changes from the external circulation icon to the internal circulation icon, and the air inlet mode is internal circulation. Click this button again at this time, the inlet mode changes to outside air icon from recirculated air icon, and the inlet mode is outside air mode.

■ Use the recirculated air mode under following conditions

- In dusty environment.
- To quickly cool the air in the vehicle.
- To isolate other odors from outside.
- To prevent outside exhaust gas from entering vehicle.

⚠ CAUTION
• Using recirculated air mode for a long time may increase the temperature in vehicle and the window becomes fogging. Therefore, the recirculated air mode can be used only for a short period of time. • Do not smoke in recirculated air mode, because the smoke will accumulate on the evaporator and the air inlet filter, resulting in unpleasant odors, which is difficult to remove. When using the outside circulation, in sand-wind weather, please switch to recirculated air mode to prevent dust from entering the A/C system and clogging the A/C filter element.

Outlet mode adjustment

When vehicle power is switched to ON mode, click the outlet mode button to adjust the air outlet.

Face mode: It can adjust airflow blowing out from center and face outlets on both sides.

Face/foot mode: It can adjust airflow blowing out from center outlet, face outlets on both sides and foot outlet.

Foot mode: It can adjust airflow blowing out from foot outlet.

Front defrosting/foot mode: It can adjust airflow blowing out from defrosting outlet and foot outlet.

READ
If windshield becomes fogged-up during driving, front defrosting mode is recommended.

Front defrosting button

After pressing front defrosting button, adjust most of airflow blow to front windshield and a small amount of airflow blow to side windshield.

■ For the best defogging/defrosting effect, please operate as follows:

Step 1: Before driving, make sure that the inner surface of glass is clean and dry, if there is obvious dust or water drop, it is necessary to wipe off.

Step 2: Adjust air volume to the max level.

Step 3: Adjust temperature to comfortable temperature.

Step 4: Adjust mode to front defrosting mode or front defrosting/foot mode.

⚠ CAUTION

- For driving safety, please use the defogging function correctly.
- Please do not use recirculated air mode for a long time in winter, otherwise the front windshield will be fogged quickly.
- Poor glass visibility will increase the risk of traffic accidents and personal injury. Therefore, it is very important for traffic safety to ensure a good visibility during driving.

Rear defrosting button

After pressing front defrosting button. When the indicator comes on, it indicates that the defrosting function of rear windshield/outside rear view mirror is turned on. When the indicator is off, it indicates that the defrosting function of rear windshield/outside rear view mirror is turned off.

⚠ CAUTION

- Do not scratch or damage the heater wires when cleaning the rear windshield/outside rear view mirror.
- When the battery is low, the rear windshield/outside rear view mirror defrosting function cannot be turned on to ensure that vehicle starts normally.
- Make sure that the rear windshield/outside rear view mirror defrosting function are turned off when the fog or frost on rear windshield/outside rear view mirror surface are cleared.

⚠ WARNING

To prevent burning yourself, do not touch the rear windshield/outside rear view mirror when the defrosting function of rear windshield/outside rear view mirror is operating or immediately after being turned off.

A/C Settings (If Equipped)

A/C Cleaning after Locked: ON/OFF.

Bluetooth Call Noise Reduction: ON/OFF.

Hot Air Avoidance in Summer: ON/OFF.

Refrigeration Function of Armrest Box on Auxiliary Fascia Console

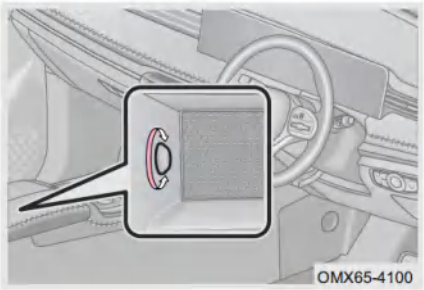
OMX65-4100

Armrest box on auxiliary fascia console is equipped with a refrigeration outlet. Place the required items (such as canned drinks) in the auxiliary fascia console armrest box. The air conditioning turns on face mode for cooling operation. Turn the armrest box inside knob counterclockwise to cool the required items.

3-7. Wireless Charging (If Equipped)

Wireless Charging

Wireless charging uses electromagnetic induction technology conveniently and safely to allow for a better experience while driving.

Usage methods

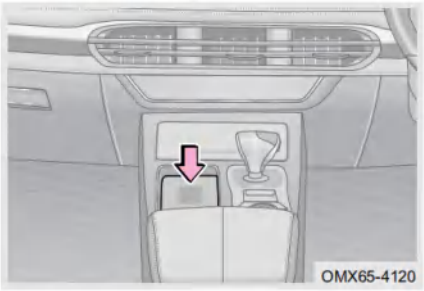
OMX65-4120

Phone wireless charging area is located in the front of center armrest. When vehicle power is switched to ON, place the mobile phone on the anti-skid rubber pad in the wireless charging area with the mobile phone screen facing up, and the mobile phone automatically enters wireless charging, accompanied by a charging icon display on multimedia display.

Phone wireless charging function is to transmit the electric energy of the coil to the mobile phone battery based on the principle of electromagnetic wave induction, so that the mobile phone can be charged without wire connection.

■ In the following conditions, the wireless charging may not work properly:

- The mobile phone does not fully fit with the wireless charging sensing area, and the mobile phone cannot be charged.
- If the phone case is too thick, it may not be charged.

- The back of mobile phone is not placed in the center of wireless charging sensing area, and the mobile phone cannot be charged.
- If there are metal foreign matters (such as coins, metal mobile phone case, etc.) between mobile phone and wireless charging sensing area, and the mobile phone cannot be charged.
- When the surface temperature of wireless charging sensing area is too high due to sun exposure, the wireless charging module will trigger self-protection and the mobile phone cannot be charged.
- If the mobile phone cannot be charged normally, make sure that there is no foreign matter in the wireless charging area or wait for the wireless charging area to cool before trying. If it is still unable to charge, it is recommended that you contact Jetour authorized service station.

READ

- Only one mobile phone can be charged at a time.
- When driving on bumpy roads, the phone wireless charging function may stop charging and resume charging intermittently.
- Try to ensure that the placement surface of the mobile phone is parallel to the charging module. If the mobile phone deviates from wireless charging area and stops charging, it is necessary to move the mobile phone back to the wireless charging area.
- Do not place mobile phone together with coin, metal key, metal ring or other items with metal content in the wireless charging area to avoid abnormal wireless charging function and even safety accidents.
- Do not place heavy objects in the charging area to avoid damage to the charging area.
- If the mobile phone wireless charging system fails and cannot be used normally, it is recommended that you contact Jetour authorized service station.
- The company will not bear any responsibility for any problems caused by abnormal use; If the product has been disassembled or modified, the free warranty service will be terminated.
- When the driver is not in vehicle, do not place mobile phone in vehicle to charge, leading to potential safety hazard.
- During driving, do not check the charging status of mobile phone for a long time to avoid potential traffic safety hazard.

⚠ CAUTION

- When charging the mobile phone wirelessly, if any metal foreign matter between mobile phone and rubber pad is found, do not remove the foreign matter immediately by hand to avoid burns.
- In order to achieve better charging effect, the center of mobile phone coil must be aligned with the center of wireless charger (character position in the charging area).
- Do not sprinkle water on the charging area, so as to prevent water from entering the wireless charger through the gap of rubber pad, causing charger failure.
- When the temperature is too high, the charging of mobile phone may stop, and the charging will continue after the temperature decreases.
- The company does not make promises for the problems caused by the external wireless charging coil. Please use it with caution.
- Do not place cards with chips such as bank cards between mobile phone box and mobile phone during charging to avoid burning the cards.

3-8. Storage Space

Storage Space

Glasses box

Glasses box is near front interior light closely. It can be used to store glasses or other small items. When placing glasses, it is necessary to fold the two temples normally, with lens facing forward and temples facing up. Otherwise, the glasses may fall off when opening the glasses box.

READ

Some large sunglasses may not be placed into the glasses box.

⚠ WARNING

Make sure the glasses box is closed when driving.

Door storage boxes

Storage boxes on front and the second row doors can be used for storing maps, cups and others items.

Luggage hook

The luggage hook is located on the right side of instrument panel, next to the glove box.

When in use, press the lower end of luggage hook, pop up the upper end, and then turn down the luggage hook.

When not in use, turn it up and press the upper part of luggage hook to return it.

The luggage hook can only hang light objects, and the maximum load weight cannot exceed the weight marked on luggage hook. Before driving, make sure that all items have been fixed firmly.

Glove box

Glove box is used to store map, instructions and other items.

> ⚠ WARNING
>
> Before driving, make sure that the glove box is fully closed. Otherwise in case of emergency braking or emergency steering, it may cause accidents and serious injury or even death.

Seat storage bag

Front seatbacks are both equipped with storage bags on backside, which are used to store documents, instruction etc.

Fold-down armrest

The second row of seats are equipped with fold-down armrest, which can be used by turning down the armrest. Please return the armrest to its original position when not in use.

> ⚠ WARNING
>
> Adults or children are not allowed to sit on the armrest box on auxiliary fascia console.

Front cup holder

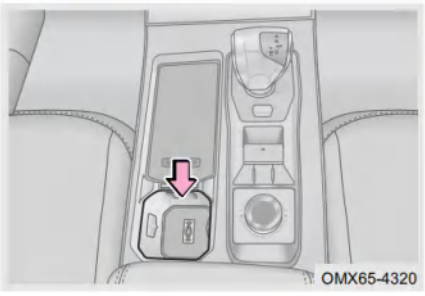

The cup holder is used to place the cup well, move the ashtray or drink can, etc.

> READ
>
> - Do not place drink can that is too small or has poor stability in the cup holder, otherwise it may topple over.
> - Please make sure that the lid of the drink can is covered to prevent the liquid inside from splashing out.

Rear cup holder

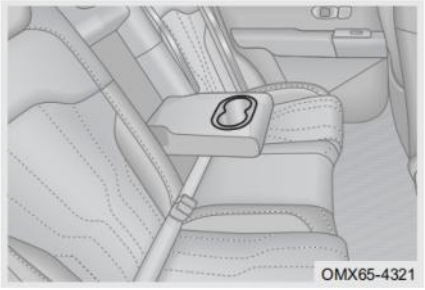

Rear cup holder is located on the armrest of second row of seats. It can be used by turning down the armrest.

When not in use, please return the armrest to its original position.

READ

- Do not place drink can that is too small or has poor stability in the cup holder, otherwise it may topple over.
- Please make sure that the lid of the drink can is covered to prevent the liquid inside from splashing out.

Bottle holder

There is a bottle holder on the inside of door, and only sealed bottle containers can be placed.

READ

Please make sure that the lid of the drink can is covered to prevent the liquid inside from splashing out.

WARNING

Do not put anything except bottles into the bottle holder. Otherwise, in the event of an accident or emergency braking, objects may be thrown out from bottle holder and cause personal injury.

Umbrella storage box

There is an umbrella storage box under the armrest inside door, which can place the folded umbrella.

3-9. Power Outlet

Power Outlet

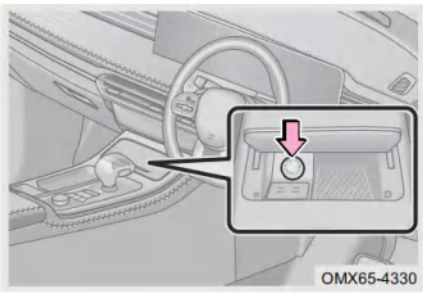

Front power socket is located in front of center armrest.

Open the protective cover to use.

It can be used for accessories with operating voltage of 12 V and operating current of 10 A or less.

⚠ CAUTION

- To prevent the fuse from blowing out, do not use accessories with a rated voltage more than 12 V.
- To prevent the battery from depleting, do not use the power outlet longer than necessary when the engine is not running.
- Do not insert anything or allow any liquid to flow into the outlet other than an appropriate plug. Failure to do so may cause electrical failure or short circuits.
- When the power outlet is not used, the protective cover should be closed, otherwise foreign matters or liquid will enter the power outlet to cause short circuit.

3-10. USB Port

Front

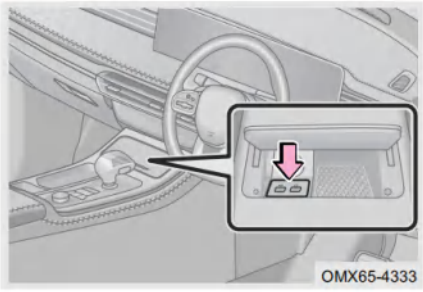

Front USB port is located on the front end of auxiliary fascia console.

Type-A port "⇐": It can be used for phone-link function, reading U disc and charging the electrical equipment with low power, such as phone etc.

Type-A port "⇐": Fast charging is supported.

Rear

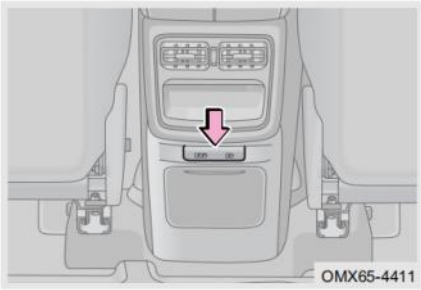

Rear USB port is located under the rear air outlet of center armrest box.

Type-A port "⇦": Fast charging is supported.

Type-C port "⇦": Support regular brand mobile phones and tablet computers (current ⩽ 3A) for charging; support the fast charging for regular brand notebook computers.

3-11. Sun Visors and Vanity Mirrors

Sun Visors and Vanity Mirrors

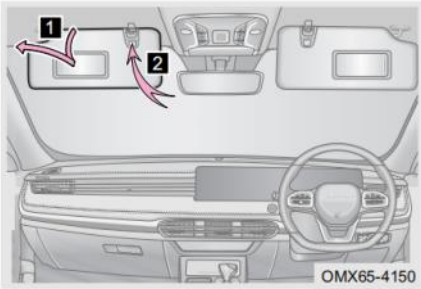

1 Flip the sun visor down to set it in the straight ahead position.

2 Flip the sun visor down, disengage the hook, and then turn to the side to set it in the side position.

The vanity mirror is located on the sun visor. Flip the sun visor down and open the vanity mirror cover to use the vanity mirror.

⚠ CAUTION

- Do not place hard items such as CD and metal cards behind the sun visors, preventing these items from injuring people in the vehicle during vehicle accidents.
- Keep the vanity mirror cover closed when the vanity mirror is not in use.

3-12. Hood

Opening/Closing Hood

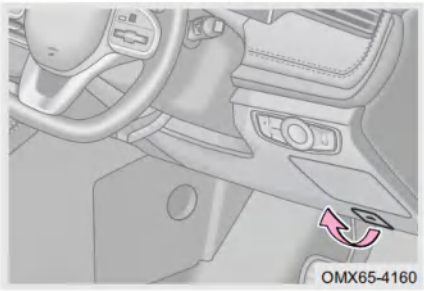
OMX65-4160

Follow the steps below, open the hood.

Step 1: The hood will spring up slightly by pulling hood opening handle outward (as shown in the left figure);

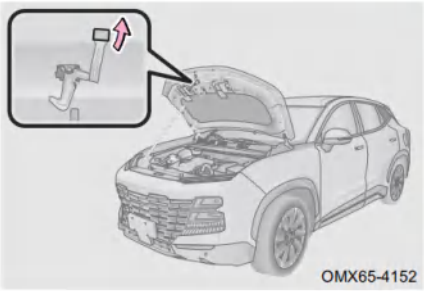
OMX65-4152

Step 2: Reach your hand to the center part of the front of the hood, and contact with the auxiliary catch lever. Then lift and hold the paddle upward, and lift the hood at the same time;

Step 3: After opening hood, take out hood support rod and put one end of the support rod into the support slot to support the hood;

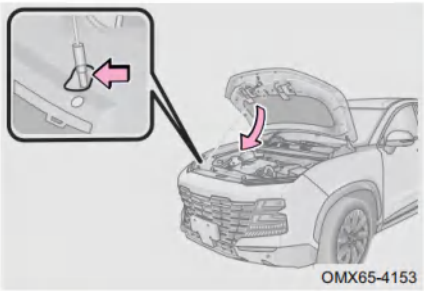
OMX65-4153

Step 4: Before closing the hood, support the hood with the left hand and move support rod out of support slot with the right hand, and then stuck it to the designated position inside the hood. Lower the hood and close it until the latch is locked;

Step 5: After closing the hood, lift the hood lightly to check that hood is fully closed.

⚠ CAUTION

- Before closing hood, check the area under hood to ensure that the covers of all containers are in place and all scattered objects (such as tools, etc.) have been removed.
- When closing the hood, do not press it by hand, otherwise it may be deformed.
- Make sure that hood is closed or locked before driving, otherwise accidents and personal injury may occur.

3-13. Back Door

Power Back Door (If Equipped)

For your convenience, power back door can be opened/closed through the following ways, let you fully feel the convenience of power back door.

Using smart key

While vehicle power is turned to OFF, long press back door opener button (for more than 2 s) on smart key to open/close power back door; During the movement of power back door go off, shortly press back door opener button on smart key to suspend the action of power back door.

Back door exterior switch

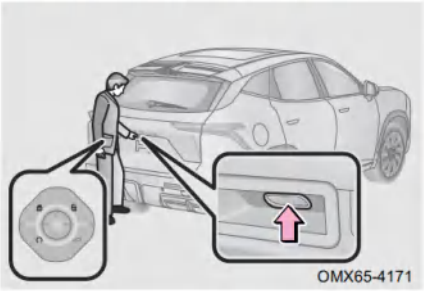
OMX65-4171

Method 1: With central control lock unlocked, approach the back of vehicle and press exterior switch on the back door and power back door will be opened.

Method 2: With central lock locked, approach to back of vehicle while carrying smart key on your person and press back door exterior switch and power back door will be opened/closed.

When the vehicle speed is higher than 2 km/h, back door cannot be opened electrically.

Back door interior switch

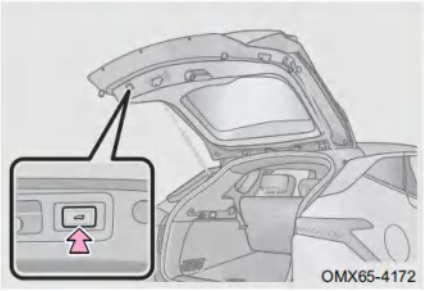
OMX65-4172

When the power back door opens, press back door interior switch to close power back door.

When the power back door is moving, press the back door interior switch to suspend the action of the power back door.

READ

- Power back door opening height can also be set in multimedia display. For details, refer to "Multimedia Display".
- When the power back door is moving, operate any of back door switch, the back door will stop moving.

Jam protection function

If the power back door is obstructed by any object during opening/closing, back door will automatically reverse for a short distance and stop.

Positive jam protection: When power back door is opening, if it encounters resistance (such as wall, obstacle), the back door positive jam protection works to avoid vehicle damage.

Reverse jam protection: When power back door is closing, if it encounters resistance (such as children, luggage), the back door reverse jam protection works to avoid child injury and vehicle damage.

Vehicle is armed successfully, and the window does not automatically rise fully, it will trigger horn alarm 3 times.

⚠ WARNING

- Do not activate jam protection function by intentionally clamping any part of body.
- If an object is caught when the back door is about to be fully closed, jam protection function may not work. Be careful not to pinch your fingers or any other object.

Continuous action/jam protection

Opening/closing the back door 8 times continuously within 30 s will trigger the over temperature protection of electric support rod, and the electric function will be temporarily invalid. After 30 s, the electric function will recover automatically.

During opening and closing, jam protection occurs 8 times in a row, the electric function is disabled, and the back door is closed to the fully locked position by hand to resume the electric function.

Manual learning

After power is off, the power back door needs to be learned manually. Close back door to lock position, press back door opening switch on back door until back door is opened to the maximum position, the learning is successful.

Back Door Emergency Opening

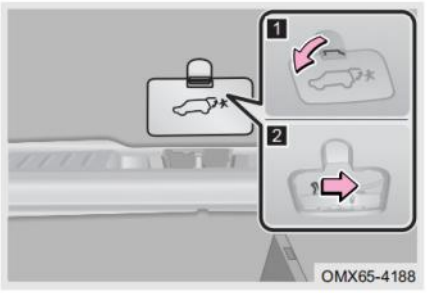

Back door cannot be opened when battery is depleted or under similar conditions. In this case, the back door can be opened with back door emergency device switch (stop the vehicle as safely as possible).

Step 1: Put down the rear seats to enter back door inside the vehicle.

Step 2: Remove the trim cover of back door inner protector.

Step 3: Push the emergency device switch to right to open back door.

3-14. Fuel Tank Cap

Opening/Closing Fuel Tank Cap

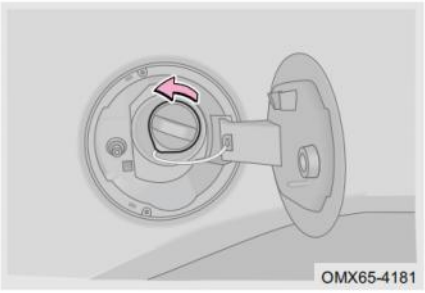

Step 1: Turn vehicle power to OFF mode, press the fuel tank cap, and the fuel tank cap will pop up automatically.

Step 2: Slowly turn the fuel tank cap counterclockwise to remove it.

Step 3: After refueling, turn the fuel tank cap clockwise until a "click" sound is heard. Then close the fuel tank cap completely.

READ

- Before refueling, turn ENGINE START STOP switch off and make sure all doors and windows are closed.
- Confirm the fuel type before refueling.

⚠ CAUTION

- Caution label is attached on fuel tank cap. Be sure to use the specified fuel type.
- Do not spill fuel during refueling. Otherwise, the vehicle may be damaged, such as abnormal operation of emission control system, damage to fuel system components or vehicle paint.

⚠ WARNING

Fuel is the high-temperature flammable and explosive substance. Fuel should be filled according to the specified procedures, and the following precautions should be observed, resulting in death or serious injury.

- For safety, always turn off the ENGINE START STOP switch.
- Be sure to strictly obey safety of gas station.
- Do not inhale vaporized fuel, as the fuel contains substances that are harmful for the health.
- Make sure that the fuel tank cap is properly closed to avoid fuel evaporation and splashing.
- Because gasoline is extremely flammable, smoking is prohibited when refueling, and there must be no other sparks or open flames. Be sure to turn off mobile phone, interphone or other radio equipment.
- Be sure to hold the handle on fuel tank cap and turn it slowly to remove fuel tank cap. A whooshing sound may be heard when the fuel tank cap is loosened. Remove the fuel tank cap after the sound disappears completely. In hot weather, fuel may spray from fuel filler due to excessive internal pressure, resulting in personal injury.
- After exiting the vehicle and before opening the fuel filler cap, touch an unpainted metal surface to discharge any static electricity.
- Stop refueling the fuel tank after the refueling gun is automatically closed. Otherwise, the fuel tank may be too full, causing fuel to overflow the fuel tank, which can easily cause fire, explosion and serious injury.

4-1. Vehicle Power Mode

ENGINE START STOP Switch 108

4-2. Starting and Driving

Starting Vehicle..... 108

Driving Vehicle..... 109

Turning Off Vehicle 111

Adaptive Engine Control System.....111

4-3. Gasoline Particulate Filter (GPF) (If Equipped)

Particulate Filter..... 112

4-4. Transmission

Automatic Transmission 113

Shift Paddle (If Equipped) 116

Driving mode 116

4-5. Steering System

Electric Power Steering System (EPS)..... 117

4-6. Brake System

Pedal 118

Electric Parking Brake (EPB) System 118

Automatic Parking System (AUTO HOLD)..... 120

Foot Brake 122

4-7. Anti-lock Brake System (ABS)

Anti-lock Brake System (ABS) 124

4-8. Integrated Vehicle Body Dynamic Electronic Stability Program System

Vehicle Body Dynamic Electronic Stability Program System 126

Extended Function 127

4-9. Airbag (SRS)

Introduction of Airbag (SRS) 129

Airbag Position 129

Using Airbag Correctly 130

4-1. Vehicle Power Mode

ENGINE START STOP Switch

When the system detects the legal smart key and the brake pedal is released, press the ENGINE START STOP switch to switch the power mode of vehicle, each time the ENGINE START STOP switch is pressed, the mode is switched once (OFF - ACC - ON - START).

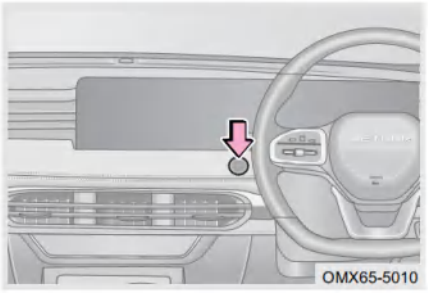

OFF mode: All electrical appliances are turned off.

ACC mode: Part of electrical appliances can be used.

ON mode: All electrical appliances can be used.

START mode: When vehicle power source is turned to ACC/ON mode, depress the brake pedal and transmission gear is in P, vehicle power is switched to START mode and the engine can be started by pressing the ENGINE START STOP switch.

READ

If ENGINE START STOP switch is not pressed properly, vehicle power mode can not be switched or engine may be not started.

4-2. Starting and Driving

Starting Vehicle

Methods for starting vehicle normally

Step 1: Apply parking brake firmly.

Step 2: Turn off all unnecessary lights and accessories.

Step 3: Carry effective smart key.

Step 4: Press the ENGINE START STOP switch while depressing brake pedal.

Starting in emergency

When smart key battery is low or signal is seriously interfered, keyless entry and start function will not work normally. Start engine according to following steps:

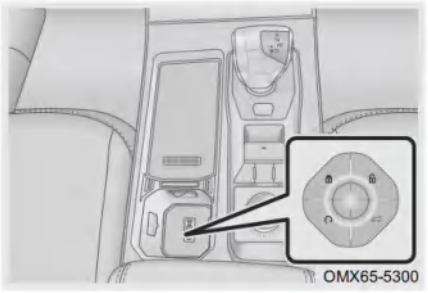
OMX65-5300

Step 1: Apply parking brake firmly.

Step 2: Turn off all unnecessary lights and accessories.

Step 3: Turn vehicle power to OFF mode.

Step 4: Smart key is in the vehicle.

Step 5: Long press ENGINE START STOP switch for more than 15 seconds to start the vehicle.

Driving Vehicle

Safety check before driving

It is better to do a safety check for vehicle before long distance driving, which will ensure your driving safety and increase your driving pleasure.

Vehicle exterior

- Tires: Check tires pressure, and carefully check tread for cuts, damage or foreign matters, abnormal and excessive wear.
- Wheel nuts: Confirm if the wheel nuts are loose or missing.
- Lighting: Confirm that headlights, brake lights, position lights, turn signal lights and other illumination lights are all working; check the light intensity of headlights.

Vehicle interior

- Seat belts: Check if seat belt buckles can be fastened securely; confirm that seat belts are not worn or frayed.
- Instrument cluster: In particular, make sure the maintenance reminder indicator, meter illumination and defroster operate properly.
- Brake pedal: Make sure the brake pedal has enough operating space.

Front compartment interior

- Spare fuse: Make sure various types of fuses are available. Specifications for various amperage ratings designated on the fuse box cover should be provided.
- Coolant level: Make sure the coolant level is normal.
- Battery and cables: Check for corroded or loose connectors and a cracked battery case.

Inspection after starting vehicle

- Instrument cluster: Make sure the maintenance reminder indicator and speedometer operate properly.

- Brakes: When driving straight in a safe place, hold steering wheel firmly and then brake, make sure that the vehicle traveling direction does not be pulled to either side.
- Other abnormal phenomenons: Check for loose parts and leakage or abnormal noises.

You can enjoy the driving pleasure at ease if everything is normal.

Preparation before driving

Step 1: Check surroundings of vehicle before getting in;

Step 2: Adjust seat position, seatback angle and steering wheel angle;

Step 3: Adjust angles of the inside and outside rear view mirrors;

Step 4: Turn off any unnecessary lights and electrical appliances;

Step 5: Fasten the seat belts;

Step 6: Confirm that the parking brake is applied;

Step 7: Confirm that the transmission gear is in P;

Step 8: Vehicle power switches to ON mode, check if malfunction indicator and other indicators on meter are normal; if they are abnormal, please go to Jetour authorized service station immediately for inspection and repair;

After starting engine

Engine idle speed is controlled by electronic control system. When engine is started, high speed can help to increase engine temperature, this is normal. After engine temperature increases, speed will automatically decrease to normal speed. If not, please contact Jetour authorized service station for inspection and repair immediately.

⚠ WARNING

- When engine is started, be sure to sit on driver seat to start engine. Do not depress accelerator pedal when engine is started in any situations. Otherwise, it may cause an accident, resulting in serious injury or death.
- Exhaust gas contains harmful carbon monoxide (CO) which is colorless and odorless. Exhaust gas may lead to a serious health hazard or even death when inhaled.
- If the vehicle is parked in poorly-ventilated place, the engine should be stopped. In the closed place, such as in garage, exhaust gas may accumulate and enter vehicle. This may lead to a serious health hazard or even death.
- When running engine in a ventilated area, someone should control engine in vehicle, switch air conditioning to outside air mode, and set high blower speed.
- It is forbidden to park on dry leaves, hay or other flammable materials or allow the vehicle to idle for a long time. When engine is running or the vehicle is just stopped, high temperature of exhaust pipe may cause fire.

Turning Off Vehicle

Turning off vehicle normally

Step 1: Stop the vehicle and apply parking brake;

Step 2: Shift the shift lever to P;

Step 3: Turn vehicle power to OFF position;

Step 4: Check that engine is turned off.

> ⚠ CAUTION
>
> - Do not depress accelerator pedal before engine is turned off.
> - Do not touch high temperature components (such as engine, exhaust pipe and radiator, etc.) immediately after driving at a high speed for a long time, otherwise, burns may occur.

Turning off vehicle in emergency

When driving, if engine has to be stopped in case of an emergency, press and hold ENGINE START STOP switch for more than 3 seconds to turn off engine forcibly.

> ⚠ WARNING
>
> - Do not press ENGINE START STOP switch during driving unless in an emergency.
> - If engine is turned off when driving vehicle, it may cause an accident.
> - Slow down as much as possible before turning off vehicle forcibly, the power assist of brake and steering wheel will lose, resulting in more effort when depressing brake pedal and heavier when turning steering wheel, otherwise it may cause personal injuries.

Adaptive Engine Control System

If the battery terminal is removed and reconnected, the vehicle power is switched to ON mode, and vehicle power will be switched to OFF mode after waiting for 15 seconds before starting the engine.

Abnormal phenomena (such as, engine shaking or unsmooth starting off) may occur in early driving stage, which is a normal phenomenon that engine control system is learning to adapt to engine again.

4-3. Gasoline Particulate Filter (GPF) (If Equipped)

Particulate Filter

GPF can capture particulate emissions from exhaust gas to reduce the effect of particulate emissions of vehicle. When particulate emissions from the GPF accumulate to a certain extent, the system will regenerate GPF.

When " " green indicator on instrument cluster comes on, to avoid engine idling for a long time, drive at 60 km/h or higher in the case of safety and compliance until the indicator goes off. When " " yellow indicator on instrument cluster comes on, it indicates that particles captured in the GPF have reached the limit value, please go to Jetour authorized service station for inspection and repair.

■ Observe the following precautions during daily driving:

- Avoid frequent short distance driving.
- Avoid engine idling for a long time or frequently.
- Avoid engine running at low speed with high throttle for a long time or frequently.

⚠ WARNING
It is forbidden to park on dry leaves, hay or other flammable materials or allow the vehicle to idle for a long time. When engine is running or the vehicle is just stopped, high temperature of exhaust pipe may cause fire.

4-4. Transmission

Automatic Transmission

Automatic transmission

Automatic transmission is 6-speed wet dual clutch transmission.

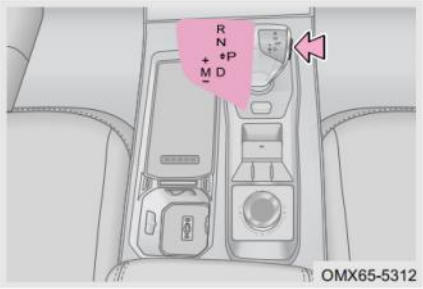

Step 1: Fully depress the brake pedal, the shift the shift lever from P to D.

Step 2: Release the parking brake manually or automatically and release the brake pedal. then drive the vehicle slowly.

READ

When vehicle stops steadily, press P button behind shift lever to shift to P. Push the shift lever forward and backward to shift to other positions.

⚠ WARNING

To avoid vehicle accident movement, be sure to depress brake pedal when shifting.

■ Automatic mode

After driver shifts the shift lever to D, vehicle upshifts and downshifts automatically according to speed without manual intervention.

■ Manual mode

When gear position is in D, push shift lever to the left to enter manual mode (+, -), push forward to upshift by one gear position and push backward to downshift by one gear position.

Gear position introduction

The following information will help you understand the purpose and operation procedures of different gears to make a right choice according to actual demand during operation.

Gear Position		Function
Automatic mode	P gear	Parking gear Drive wheels are mechanically locked. Engine can be started.
	R gear	Reverse gear The vehicle can only move backwards. The vehicle must be stopped completely before shifting the shift lever to R or out from R (except for special situations).
	N gear	Neutral gear Wheels and transmission are not locked in this gear. When parking on a gentle slope, brake pedal is also depressed or electronic parking brake is also applied, otherwise vehicle will slide freely.
	D gear	Forward driving gear The gear is generally used when driving. Starting from the stationary of vehicle, transmission gear will be shifted automatically between various gears.
Manual mode (M)	+	Push shift lever toward + once, transmission will raise one gear.
	-	Push shift lever toward - once, transmission will lower one gear.

⚠ WARNING

- Never tow the vehicle for a long distance or at high speed. Raise drive wheels or disconnect propeller shaft when towing.
- When shift lever is in N, make sure parking brake is applied or brake pedal is depressed, otherwise an accident may occur.

READ

- Engine can be started only when gear position is in P.
- Manual mode (M) can be entered only when gear position is in D.
- Never shift gear when vehicle is stationary and engine speed is increased.
- Never increase the engine speed when parking vehicle with gear position is in D or R.
- When engine stalls, do not coast vehicle in N. Otherwise, the transmission will be damaged.
- Do not shift the shift lever out of D while the vehicle is moving forward. Otherwise, the transmission may be damaged seriously.
- Do not shift the shift lever out of R while the vehicle is moving backward. Otherwise, the transmission may be damaged seriously.
- When shifting the shift lever to P, it is necessary to depress the brake pedal first to stop the vehicle steadily. Otherwise, transmission will be damaged.
- When shifting the shift lever out of P, it is necessary to depress the brake pedal first to stop the vehicle steadily. Otherwise, transmission will be damaged.
- When trying to make vehicle free from a stuck or wade, it is recommended to select lower gear manually to get larger wheel drive force and avoid water on road entering exhaust pipeline.
- When vehicle malfunctions occur due to insufficient battery, even depress brake pedal, shifting out of P is impossible. Please contact Jetour authorized service station immediately for inspection and repair.
- In manual mode, up-shifting and down-shifting operations must be performed by pushing shift lever according to engine speed and vehicle speed. If the requirements are not met, the transmission will not perform the gear shifting operation.
- When the vehicle is parked on a slope, the parking brake must be applied first, and then shift lever is shifted to P. After starting on a slope, first shift the shift lever out of P, then release parking brake for driving.
- With the vehicle power turned to ON mode without starting, move shift lever down to the lower limit position and hold it for 2 seconds to switch to N gear and enter towing mode.

Shift Paddle (If Equipped)

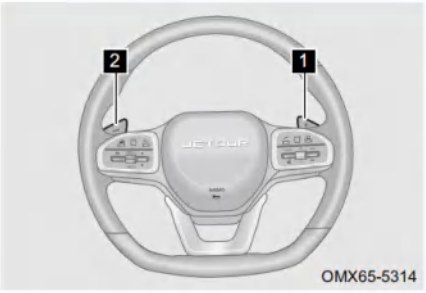

Use shift paddle on the steering wheel to shift gear position quickly. Both hands can hold the steering wheel.

When shift position is in D, push shift paddle once to switch to temporary manual mode.

1 Upshift

Each time operate it, gear position goes up by one level.

2 Downshift

Each time operate it, gear position goes down by one level.

READ

When gear position is in D, move shift paddle once to enter temporary manual mode; If gear position is not shifted by operating shift paddle in a certain period of time, and gear position is in D, it will switch to auto mode again.

⚠ CAUTION

- When trying to make vehicle free from a stuck or wade, it is recommended to select lower gear position manually to get larger wheel drive force and avoid water on road entering exhaust pipeline.
- Within the allowed engine speed range, transmission will lock at the gear position you selected manually. When vehicle is driving on a long downhill road, it is recommended to select lower gear position manually to control vehicle speed better, and reduce vehicle braking force attenuation because depress brake pedal for a long time or frequently.

Driving mode

During operation, driver can choose from sport mode and ECO mode; ECO mode improves vehicle fuel economy, sport mode improves vehicle maneuverability, controllability and power. Choose the mode according to different road conditions.

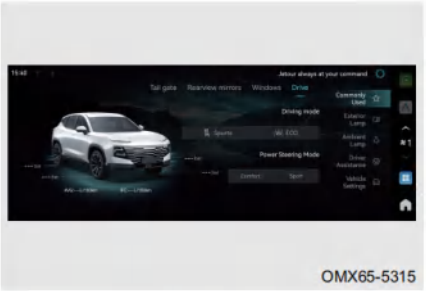

OMX65-5315

Switch between ECO/sport mode in the driving mode on the multimedia display.

4-5. Steering System

Electric Power Steering System (EPS)

Electric power steering system uses torque generated by motor as power source of steering system, instead of assisting method using in general vehicle, that is, hydraulic pump is driven by engine.

READ

Select power setting mode on multimedia display, set electric power steering system to Comfort/Sport mode.

CAUTION

- Do not keep steering wheel at the limit position in either direction for more than 5 seconds when engine running.
- Frequent handling and rotation of steering wheel over long periods of time may damage electric power steering system.
- EPS motor will produce normal running sound when steering wheel is turned quickly.

Electric power steering system indicator

When there is fault in system, "" yellow indicator on instrument cluster comes on.

WARNING

When there is fault in system, although the vehicle still has the conventional steering capability, it should be driven with caution. Please go to Jetour authorized service station for inspection and repair as soon as possible.

4-6. Brake System

Pedal

⚠ CAUTION

- Make sure that all the pedals are free of interference and can be fully depressed.
- All the pedals can return smoothly.
- It is forbidden to wear high-heeled shoes and slipper for driver. Always wear shoes that are fit your feet and can feel the movement of the pedal.

⚠ WARNING

- Do not store any objects in the driver's foot space, otherwise the objects may move into pedal area and obstruct pedal movement. Pedal can not be operated in the event of sudden braking or emergency, which can easily cause an accident.
- Only use the floor mat which can be fixed in foot space and does not obstruct the pedal movement. Make sure that the floor mat is securely fixed when driving.
- Always securely fix the floor mat again after taking it out for cleaning.

Electric Parking Brake (EPB) System

Electric Parking Brake (EPB) system, also known as electric handbrake, the function of electric handbrake is the same as that of the traditional handbrake which is used to park the vehicle.

Usage methods

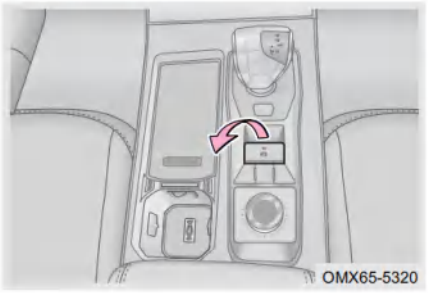

Apply parking brake manually

When vehicle stops steadily, with vehicle power in ON mode or vehicle started, pull the EPB switch upward and the indicator on EPB switch remains on. Electric parking brake system indicator on instrument cluster comes on.

Release parking brake manually

With vehicle power in ON mode or vehicle started, depress brake pedal and press EPB switch simultaneously, the indicator on EPB switch goes off. Electric parking brake system indicator on instrument cluster goes off.

■ Apply parking brake automatically

Method 1: When vehicle stops steadily, vehicle power is switched to OFF mode, parking brake is applied automatically.

Method 2: When vehicle stops steadily, gear position is switched to P, parking brake is applied automatically. (For vehicle with automatic transmission)

■ Release parking brake automatically (for vehicle with manual transmission)

Close all doors, fasten the driver seat belt, start the vehicle, depress the clutch pedal and shift the shift lever to 1st or R, depress the accelerator pedal while release the clutch pedal slightly, EPB will release automatically. Electric parking brake system indicator on instrument cluster goes off.

■ Release parking brake automatically (for vehicle with automatic transmission)

Close all doors, fasten the driver seat belt, start the vehicle, shift the shift lever to D or R, release the brake pedal, and then depress the accelerator pedal, EPB will release automatically. Electric parking brake system indicator on instrument cluster goes off.

⚠ CAUTION
Seat belt must be fastened and driver side door must be closed, otherwise EPB will not release automatically.

⚠ WARNING
Once the electric parking brake system enabled, red electric parking brake indicator "Ⓟ" on instrument cluster will come on. If the indicator does not come on or yellow warning light " Ⓟ " occurs, please contact Jetour authorized service station for inspection and repair.

■ Dynamic parking

In emergency conditions, when driver finds that there is no braking effect while depressing the brake pedal or brake failure caused by other reasons, pull up the EPB switch and hold, the electronic parking brake system will perform dynamic braking function (premise: vehicle speed > 4 km/h, vehicle power is in ON mode and the battery voltage is normal).

■ Electric parking brake system towing/washing vehicle mode

In some special circumstances, such as towing vehicle or washing vehicle in a automatic car washer, such auto parking function by means of power off does not wish to be performed, you can press EPB switch for more than 3 seconds before the vehicle stalls, then press ENGINE START STOP switch simultaneously to stall vehicle, then loosen EPB switch. At this time, electric parking system will not perform automatic parking.

⚠ WARNING

- When parking vehicle in our daily life, do not operate "car washing mode" to prevent vehicle from slipping due to parking failure, which may cause serious accident.
- Be sure to observe if EPB switch operation indicator comes on (it comes on when pulled up and goes off when released) when leaving vehicle and parking the vehicle.
- When stopping the vehicle, turn on right turn signal light first and confirm that there are no oncoming vehicles, pedestrians and non-motor vehicles on right side, then turn right gradually, finally stop at the roadside. Please obey local laws and regulation during stopping.
- To avoid vehicle accident movement, be sure to depress brake pedal when shifting to D or R with starting.

Automatic Parking System (AUTO HOLD)

Automatic parking system is used to prevent vehicle from rolling when vehicle is stationary and starts off.

Usage methods

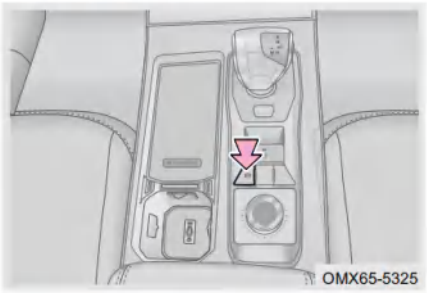

■ Automatic parking operation conditions

Engine is started, driver door is closed properly and driver seat belt is fastened.

■ Turning on automatic parking

When automatic parking conditions are met, press automatic parking button, indicator on button remains on, indicating that automatic parking function has been turned on.

■ Activating automatic parking function

When automatic parking function is enabled, depress brake pedal, vehicle changes to stationary state from movement, then automatic parking function is activated.

Depress brake pedal when vehicle is stationary, turn on the automatic parking function at the same time and the conditions of automatic parking are met, then automatic parking function is activated.

■ Turning off automatic parking

When automatic parking conditions are met, press automatic parking button, indicator on button remains on, indicating that automatic parking function has been turned on.

When automatic parking function is activated, press automatic parking switch to turn off automatic parking function, the indicator on automatic parking switch turns off, indicating that vehicle has exited automatic parking function and switched to parking brake function.

■ Automatic parking releasing function

Way to release automatic parking is the same as that of electric parking brake, including manual release and automatic release.

⚠ CAUTION

- Always park vehicle correctly according to safety regulations and take care to avoid hurt yourself and pedestrians.
- If accelerator pedal is depressed very slowly, auto release of automatic parking delays. This is normal.
- When automatic parking function is activated, open driver door or unfasten driver seat belt, automatic parking will switch to electrical parking.
- Automatic parking system can not be used when battery is insufficient. Jumper cables can be used to start the engine, refer to "Vehicle Distress Handling" for details.
- When automatic parking function is turned on, open driver door or unfasten driver seat belt to exit automatic parking function, close driver door or fasten driver seat belt again to turn on the function again.
- After automatic parking is turned on, and vehicle is completely stopped by foot brake, system will park vehicle automatically, but the gear is still in D or R. It is recommended to shift to N for a short time and shift to P for a long time.

⚠ WARNING

To avoid vehicle accidentally moving, in the state of automatic parking, confirm shift position before depressing accelerator pedal to start.

Foot Brake

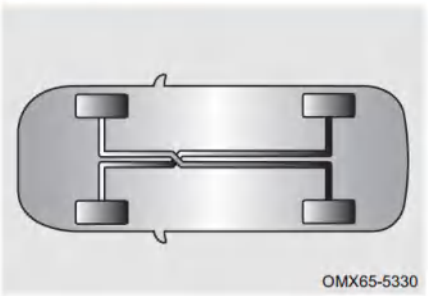
OMX65-5330

The brake system adopts X type arrangement, double circuit brake system; The system is a hydraulic system with two independent subsystems. If one of the subsystems fails, the other system can still perform brake function. However, brake pedal depressing force will be greater than usual as well as the braking distance, and the brake system malfunction indicator remains on.

Brake system indicator

When there is a fault, "(!)" indicator in instrument cluster remains on.

> ⚠ WARNING
>
> - When "(!)" indicator on instrument cluster comes on, check the brake fluid level, add brake fluid when it is lower than MIN line. If reason is unclear, please contact Jetour authorized service station immediately.
> - If "(!)" indicator on instrument cluster comes on during driving, one of the subsystems in double circuit brake system may be fails. Stop the vehicle to a safe place, please contact Jetour authorized service station immediately.

Precautions for brake system

- If there is continuous shudder or vibration being transferred to the steering wheel during braking, please go to Jetour authorized service station immediately for inspection and repair.
- When driving downhill, shift to a low gear to make full use of engine braking effect and avoid continuous use of brakes. Failure to do so may cause the brakes to overheat and braking distance will become longer, and the brakes may even temporarily lose its effectiveness in a serious case.
- The brake system will make some noises sometimes during operation, which is normal, but if you hear metal friction or a whistling sounds over a period of time, the brake linings may be seriously worn, and you must go to a Jetour authorized service station for replacement immediately.
- The new brake linings must be break-in to reach optimal brake effect. Braking effect in the first 200 km is not optimal. In this case, depress brake pedal more firmly to compensate braking effect.
- A wet brake may cause abnormal vehicle deceleration or pulling to one side when braking. Depress brake pedal slightly to test effectiveness of brakes.

After driving through deep water, keep a safe vehicle speed and depress brake pedal slightly until braking function is restored.

- Wear condition of brake lining depends largely on its working conditions and driving style. For vehicles mainly used in city traffic, frequent starting and stopping will make working condition of brake lining worsen. Therefore, please go to Jetour authorized service station according to specified maintenance mileage to check thickness of brake linings or replace it as needed.

4-7. Anti-lock Brake System (ABS)

Anti-lock Brake System (ABS)

Anti-lock brake system is designed to prevent wheel from being locked, and maintain steering performance even in emergency braking, making you avoid obstacles.

The ABS of this vehicle is integrated with EBD (Electric Brakeforce Distribution), making the ABS system performance more effective.

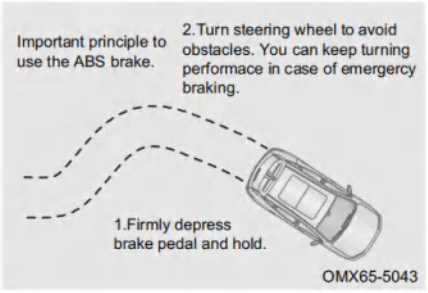

ABS does not function during normal braking and operates only (- brake pedal pulsates with noise, ensuring brake performance and steering performance, if the space is enough, the vehicle can also avoid obstacles) during sudden braking. Never release brake pedal in this case.

Function limit

■ ABS will make operation sound in following conditions:

- Rebounding sound of brake pedal.
- Impacting sound between suspension and vehicle body due to emergency braking.
- Operation sound of motor, solenoid valve and return pump in hydraulic unit.
- Operation sound of solenoid valve when EBD is intervened in braking.
- Buzz will be heard for a short time after vehicle is powered on or engine is started, indicating system self-test is performed.

■ Always maintain a safe distance from vehicle ahead in the following situations:

- When driving on rough roads.
- When driving on roads with potholes or uneven surfaces.
- When driving with tire chains.
- When driving on dirt, gravel or snow-covered roads.

Anti-lock brake system indicator

When there is a fault, "(ABS)" yellow indicator on instrument cluster remains on.

READ

When ABS is malfunctioning, this function may not work properly, please go to Jetour authorized service station for inspection and repair as soon as possible.

CAUTION

Tire size, specification and tread pattern wear will seriously affect ABS performance. Replacement tires should have same size, load capacity and structure as original one. When a tire is faulty, it is recommended to replace with a original brand at a Jetour authorized service station

WARNING

- Always drive carefully and make sure to decelerate during turning.
- When ABS is malfunctioning, please go to Jetour authorized service station for inspection and repair as soon as possible.
- Although ABS can ensure the best braking effect, braking distance will vary largely due to road conditions.
- When driving on rainy days, properly control the vehicle speed, because if the wheel spins or slips, ABS will cannot control the vehicle.
- Also, anti-lock brake system cannot eliminate risks arising from close-following driving, driving through water, turning quickly or driving on poor road surfaces and cannot avoid accidents caused by inattentive or inappropriate driving.
- Although ABS can help to control vehicle, make sure to drive carefully, maintain a moderate speed and keep safe distance from preceding vehicles. There are certain limitations in vehicle stability and steering wheel operation effect even ABS operates.
- ABS cannot ensure that brake distance can be shortened in any situations. When vehicle equipped with tire chains, on sand or snow covered roads, vehicles with ABS may require a longer braking distance compared to vehicles without ABS.
- If ABS malfunction indicator and brake system malfunction indicator remain on at the same time, please stop the vehicle on a safe place, contact Jetour authorized service station immediately.

4-8. Integrated Vehicle Body Dynamic Electronic Stability Program System

Vehicle Body Dynamic Electronic Stability Program System

Electronic stability program system keeps vehicle stability when oversteering or understeering. When difference between expected driving state and actual vehicle condition is detected, electronic stability program system operates. Improve driving stability by electronic stability program and traction control system, which helps you react smoothly in difficult driving conditions (such as an animal scurries on road suddenly), to avoid vehicle instability.

Electronic stability program system switch

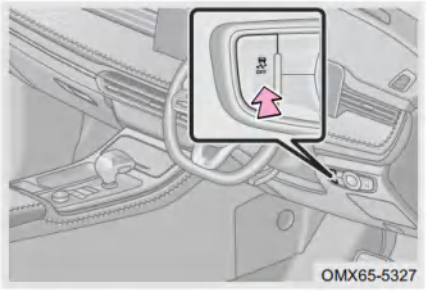

Press ESP OFF switch to turn off ESP; Press ESP OFF switch again to turn on ESP function.

Note: To ensure maximum driving safety, electronic stability program system is turned on automatically when vehicle is started.

■ Electronic stability program system OFF function fails

- Switch vehicle power to OFF mode.
- Electronic stability program system is malfunctioning.
- Anti-lock braking system or electronic stability program system is operating.

Electronic stability program system indicator

When turning off, "" yellow indicator on instrument cluster remains on.

During operation, "" yellow indicator on instrument cluster blinks.

When there is a fault, "" yellow indicator on instrument cluster remains on.

READ
When electronic stability program system is malfunctioning, this function may not work properly, please go to Jetour authorized service station for inspection and repair as soon as possible.

⚠ WARNING

- Even when electronic stability program system working, high speed driving, sharp turns or poor road conditions can cause accidents.
- Electronic stability program system function does not completely ensure that you can take over vehicle if it has lost control due to various extreme situations. Even with electronic stability program system, always follow laws and regulations to avoid accidents.

Function limit

Under the following conditions, electronic stability program system needs to be turned off:

- When driving with tire chains.
- When driving on power tester.
- When vehicle is stuck in somewhere, it is necessary to move back and forth to get free of it.
- When vehicle is stuck in deep snow or mud or off-road driving on sand.
- When extreme driving is performed (such as drifting).

READ

To improve vehicle traction when driving on sand or gravel, it is recommended to turn electronic stability program system off.

Extended Function

Electric Brakeforce Distribution (EBD) system

The dynamic electronic stability system of the vehicle is integrated with EBD (-Electric Brakeforce Distribution) system, making the ESP system performance more effective. Function: Distribute brake force to ensure wheels stability and safety.

Electric Brakeforce Distribution (EBD) system automatically adjusts braking force distribution ratio of front and rear axles according to axial load transfer difference caused by braking to improve braking efficiency. In addition, EBD works together with ESP to improve braking stability.

Emergency Brake Assist (EBA) system

EBA system is used to shorten the braking distance in emergency braking. In an emergency, driver usually brakes in time, but generally does not apply the maximum braking force, thus lengthening braking distance. In this case, HBA system will operate: When driver depresses brake pedal rapidly in an emergency with insufficient force, HBA system quickly increases brake pressure to maximum level, making anti-lock brake system shorten braking distance more quickly and effectively.

Traction Control System (TCS)

Function: Maintain steering performance, improve the acceleration performance especially when driving on the slippery road surface.

Traction Control System (TCS) function is a extended function of ESP system. During starting off or rapidly accelerating, drive wheels may slip. In case of on a slippery road such as snowy or icy road, direction could get out of control and cause dangerous. TCS detects speed of driven and drive wheels using sensor. When detecting driven wheel speed is lower than drive wheel speed (a kind of wheelslip symptom), it sends a signal to adjust ignition timing, reduce throttle opening, downshift or brake wheels so that wheel no longer slips.

ESP indicator on the instrument panel will flash when traction control system is turned on. Some noise can be heard or brake pedal vibration can be felt. This is normal and continue operating vehicle in the direction you wish; If malfunction is detected in traction control system, the indicator will stay on and system will operate abnormally. Adjust the driving methods accordingly.

To ensure the maximum driving safety, traction control system is turned on automatically when vehicle is started.

Hill Hold Control (HHC) system

Hill hold control is an additional function for comfort, which helps driver maintain pressure after stopping on a slope to ensure that the vehicle does not move backward when driver releases the brake pedal to start off. After hill hold control function recognizes that the vehicle is stationary, confirm that there is pressure depressed by driver in wheel cylinder to ensure vehicle is stationary while releasing the brake and switching to accelerator pedal. During pressure maintaining (about 1 second), driver has enough time to depress accelerator pedal to start off and drive away. Once system detects driver has intention to start off, the brake pressure will release and reduce gradually. However, the pressure maintaining time will be automatically extended if driver depresses the accelerator pedal but engine fails to output enough torque.

Roll Movement Intervention (RMI) system

In high speed driving conditions, roll movement intervention function can further improve the effectiveness of vehicle stability system. When traveling at critical lateral acceleration, vehicle roll stability can be further improved by braking intervention and drive torque intervention.

Dynamic Brake Function (DBF) system

DBF is a assist function of electric parking. Emergency braking can be applied when EPB switch lifted continuously.

4-9. Airbag (SRS)

Introduction of Airbag (SRS)

Airbag system is a part of supplemental restraint system and operates as a supplementary part of seat belt. When vehicle is involved in a serious collision and airbag deployment conditions are met, the airbag will deploy quickly and works together with seat belt, providing extra protection for the head and chest of driver and passenger to reduce the probability of injury or death.

Depending on the type of collision, airbag system is general divided into front airbag and side airbag. Front airbag includes driver and front passenger airbags. Side airbag includes seat side airbag and curtain shield airbag.

In severe frontal/side collision, the airbags deploy and work together with seat belts to protect occupants in vehicle. Airbags can distribute impact force more evenly to upper parts of occupants' body, so their body move slowly until stop, thus minimizing injuries to occupants and driver. Once an airbag is deployed, doors will automatically unlock, interior dome light and hazard lights will illuminate.

Airbag Position

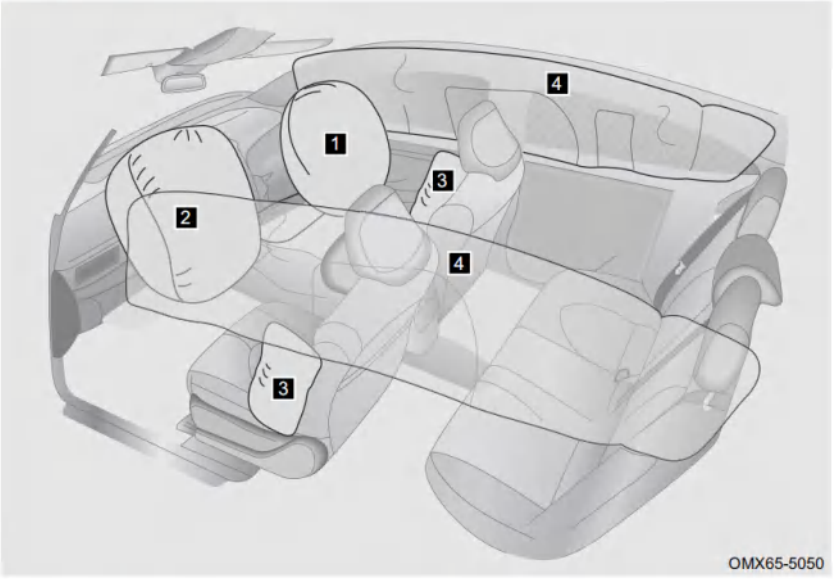

1 Driver airbag

2 Front passenger airbag

3 Seat side airbag (if equipped)

4 Curtain shield airbag (if equipped)

Using Airbag Correctly

Front airbag

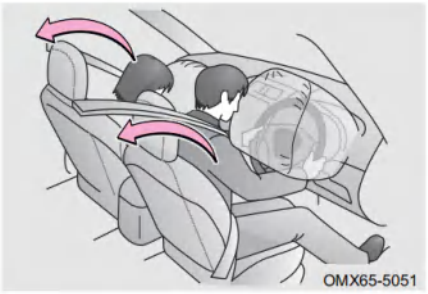
OMX65-5051

In an event of a severe frontal collision, driver airbag, front passenger airbag work together with the seat belt to help reduce injuries to the head or chest of driver and front passenger caused by hitting the interior component (- front passenger airbag may be activated even if there is no occupant in passenger seat).

OMX65-5052

The airbag works together with seat belt to protect safety of driver and passengers. However, airbag is not a substitute for seat belt. In addition, the airbag will deploy only when the collision degree of vehicle reaches the design condition. In some collisions, seat belts are the only protective device. Wearing a seat belt during a collision can help reduce the risk of hitting objects inside the vehicle or being thrown out of the vehicle, and effectively protect the driver and occupants. Therefore all people in vehicle should wear seat belts correctly. Airbags and seat belts can provide protection only for adults, they are not designed to protect infants and young children.

Seat side airbag

If your vehicle is equipped with seat side airbag. When vehicle is subjected to a moderate to severe side collision while driving and airbag deployment conditions are met, the airbag will deploy to protect the chest of occupants on the side of the collision to reduce the extent of the injury.

READ

- When vehicle is subjected to side collision and airbag deployment conditions are met, the airbag of impacted side will deploy.
- The airbag will generate considerable force at the moment of deployment. In order to avoid injury caused by deployment of the airbag, the driver and occupants must adopt the correct sitting posture, correctly wear the seat belt and adjust their seat position, never get too close to the airbag (such as sitting on the edge of the seat or tilting the body forward). For vehicles equipped with front seat side airbag and curtain shield airbag, ensure that the upper limbs are at a sufficient distance from the side of the vehicle to avoid injury during deployment.

⚠ CAUTION

- Do not wet the seatback to avoid affecting the normal operation of side airbag system.
- Do not cover or replace seatback cover by yourself. Using improper seatback cover or other covering may interfere the deployment of seat side airbag during a collision.

Curtain shield airbag

If your vehicle is equipped with left and right curtain shield airbags. When vehicle is subjected to a moderate to severe side collision while driving and curtain shield airbag deployment conditions are met, the curtain shield airbag will deploy to protect the head of occupants on the side of the collision to reduce the extent of the injury.

READ

- When vehicle is subjected to side collision and airbag deployment conditions are met, the airbag of impacted side will deploy.
- In order to obtain the best protection from curtain shield airbag, passengers must fasten their seat belts and sit upright against the seatback.

⚠ CAUTION

- Do not touch relevant components immediately after airbag is deployed, because they may be very hot.
- After vehicle is involved in a collision and airbag is deployed, please go to Jetour authorized service station for replacement of airbag control unit. The original is not allowed to continue to be used.
- If the areas where the airbags are stored, such as the steering wheel and instrument panel are damaged or cracked, please go to Jetour authorized service station for replacement as soon as possible.
- Do not strike or apply excessive force to the area of airbag components. Otherwise, it may cause airbag malfunction.
- The airbag system can only provide one-off accident protection function. If airbag system has been triggered, this system must be replaced.
- The airbag is neither designed for rear collision, slight frontal collision, nor for vehicle rolling over, and it does not work when the vehicle is braked in an emergency.
- Do not use seat accessories covering the seat side airbag and airbag deployment area, because they may interfere the deployment of airbag.
- When airbag is deployed, it will be accompanied with the deployment sound of airbag and smoke, but it will not cause a fire. If a person with respiratory and tracheal diseases such as asthma inhale this gas, they may feel difficult to breathe. At this time, it is safer to escape to outside immediately. If you cannot escape to outside, open window or door to breathe fresh air, and seek medical treatment if necessary.
- A soft, dry cloth or cloth dampened with water must be used to clean the airbag area. Avoid any fluid entering into the airbag, otherwise it may seriously affect the normal function of airbag.

⚠ WARNING

- Driver and all passengers in vehicle must fasten seat belts properly. Airbag is an auxiliary equipment working together with seat belt.
- Serious impact will be generated when front passenger airbag is deployed. If the distance between front passenger and airbag is too close, it may result in serious injury or death. Adjust seats to keep front passenger seat away from airbag, and front passenger should sit up straightly.
- If airbag is deployed, when it is deployed at extreme high speed due to hot air, it may result in slight abrasions, burns, bruises, etc.
- When residue (such as gas) splashes into eyes or adheres to skin during deployment of airbag, clean it with water as soon as possible. The person with sensitive skin may have allergic reactions.
- If infants and young children are not seated properly or protected properly, it may result in serious injury or even death due to the deployment of airbag. Infants and young children who are too young to use seat belts should be restrained properly by using child restraint devices. We strongly recommend that infants and young children are placed on rear seat and properly restrained.

Airbag indicators

When there is a fault, " " red indicator on instrument cluster remains on.

READ

When airbag is malfunctioning, this function may not work properly, please go to Jetour authorized service station for inspection and repair as soon as possible.

Airbag operating conditions

Deployment conditions of the airbag do not depend on driving speed of vehicle, but depend on the object, collision direction and vehicle deceleration conditions due to a collision. Airbags may be not deployed when impact of collision is absorbed or dispersed into the body; However, the airbag can sometimes operate depending on the impact condition in an accident. Therefore, deployment conditions of the airbag should not be judged according to the damaged condition of the vehicle.

Even if the airbag is not deployed, a collision may damage the airbag in the vehicle. Airbag may not operate properly if damaged, and it will not be able to protect you and other occupants in the event of another collision, resulting in accidents and personal injury. In order to ensure that the airbag can be deployed properly in an event of collision, please go to Jetour authorized service station for inspection and repair as soon as possible.

Conditions in which airbags may deploy

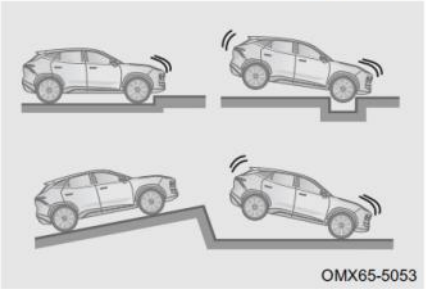
OMX65-5053

The driver airbag and front passenger airbag may deploy if a impact occurs to the underside of your vehicle. (Refer to example in the figure)

- Hit curb, pavement edge or hard surface.
- Fall into or cross the deep pit.
- Wheels hit the hard ground or vehicle falls.

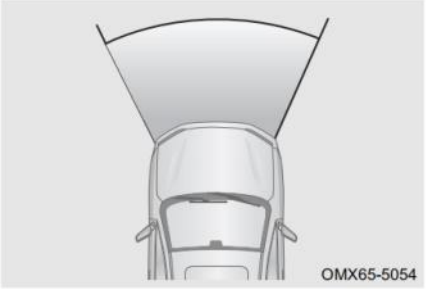
OMX65-5054

In general, in an event of frontal collision, the driver airbag and front passenger airbag will deploy or deceleration may exceeds the designed threshold level.

Conditions in which airbag may not deploy during a collision

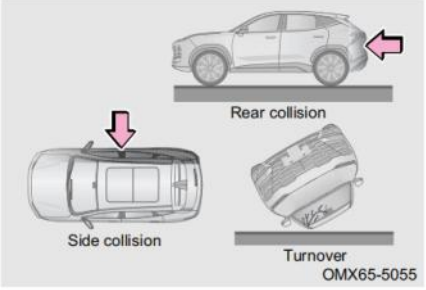

The driver airbag and front passenger airbag may not deploy if vehicle is involved in a side or rear collision, if it rolls over, or if it is involved in a low-speed frontal collision.

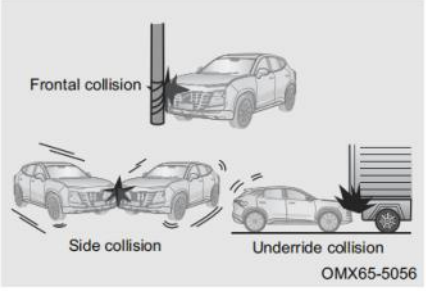

The driver airbag and front passenger airbag may not deploy if the front of vehicle hits a telegraph pole, goes under a truck, or inclined side collision.

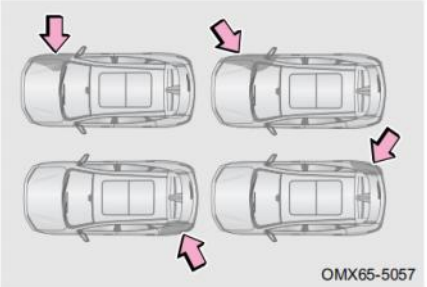

The seat side airbag and curtain shield airbag may not deploy if the vehicle is subjected to a collision from side, the rear part of the rear tire or a side collision at certain angles to the vehicle.

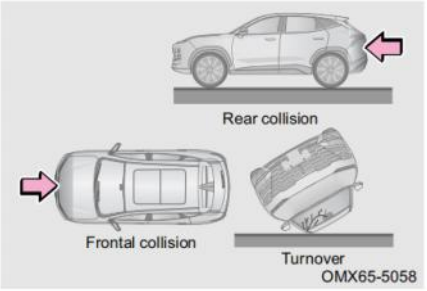

The seat side airbag and curtain shield airbag may not deploy if the vehicle is subjected to a front or rear collision, turnover or low speed side collision.

Precautions for airbag

Always keep airbag deployment path clear. It is forbidden to place anything (such as mobile phone, etc.) between the occupant and airbag. It is forbidden to fix or place any object on or near the airbag cover. If there is an object between occupant and airbag, the airbag may not deploy according to design path, or the airbag may push object to occupant's body, causing serious injury or death.

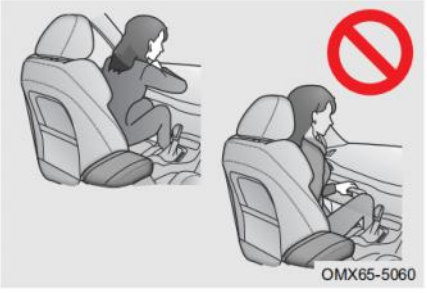

Do not sit on the edge of the seat or lean against the instrument panel.

Do not allow a child to stand in front of the front passenger airbag unit or sit on the knees of front passenger.

Do not lean against the door, A pillar, B pillar or C pillar.

Do not allow anyone to kneel on the passenger seat toward the door or put their heads or hands outside the vehicle.

Do not attach anything to or lean anything against the areas such as the instrument panel, steering wheel and lower portion of instrument panel. These items can become projectiles when driver airbag or front passenger airbag deploys.

Do not attach anything to areas such as the door, windshield glass, side door glass, A pillar, B pillar, C pillar, roof side rail and assist grip.

Replacement of airbag components

The related parts of the airbag must be replaced 10 years from the date of vehicle purchase. In order to make sure that the airbag can ensure your safety, please always go to Jetour authorized service station to replace related parts of the airbag within the specified time. Make sure that the new owner knows the airbag configuration and the replacement date of airbag in this vehicle when the vehicle is sold.

Modification and disposal of airbag components

Do not dispose the vehicle or perform the following modifications without permission of the Jetour authorized service station, otherwise, airbag may malfunction or deploy accidentally, causing serious injury or death.

- Modification of vehicle suspension system.
- Modification of vehicle front bumper, etc.
- Modification of side doors or door protective panel and B-pillar protective panel, etc.
- Installation, removal, disassembly and repair of airbags.
- Repair, modification, removal or replacement of steering wheel, instrument cluster, instrument panel and seats.

DRIVING ASSISTANCE

5-1. Cruise System

Cruise Control System (CCS) (If Equipped) 140

5-2. Hill Descent Control (HDC) System

Hill Descent Control (HDC) System 142

5-3. Blind Spot Detection System (BSD)

Blind Spot Detection System (BSD) (If Equipped) 142

Door Open Warning System (DOW) (If Equipped) 144

Rear Cross Traffic Alert System (RCTA) (If Equipped) 144

5-4. Tire Pressure Monitoring System (TPMS)

Tire Pressure Monitoring System (TPMS) 145

5-5. Parking Assist System

Parking View Monitor System (If Equipped) 146

Panoramic View Monitor System (If Equipped) 148

Parking Radar System 151

5-1. Cruise System

Cruise Control System (CCS) (If Equipped)

CCS can maintain the speed set by driver.

Usage methods

■ Entering Cruise Control System (CCS)

During vehicle driving, move the button on steering wheel to "" once to enter pre-cruising state, "" indicator on instrument cluster comes on and flashes; vehicle speed is within 40 - 130 km/h, move the button on steering wheel to "SET/-" once to set the current vehicle speed as cruise speed and enter cruising state, "" indicator on instrument cluster remains on.

During cruising, move the button on steering wheel to "" once to exit cruising state, and cruise speed cannot be set.

During cruising, depress accelerator pedal until vehicle speed is higher than cruise speed (in this process, cruise indicator remains on), the vehicle speed increased. When you release accelerator pedal, vehicle returns to cruise speed before accelerator pedal is depressed and enters cruising status (in this process, cruise indicator remains on).

During cruising, depress accelerator pedal until vehicle speed is higher than cruise speed (in this process, cruise indicator remains on), the vehicle speed increased. When you release accelerator pedal, move the button on steering wheel to "SET/-" once to set current speed as cruise speed and enter cruising status (in this process, cruise indicator remains on).

During cruising, depress brake pedal to enter pre-cruising status (in this process, cruise indicator blinks), the vehicle speed decreased. When vehicle speed is higher than 40 km/h, release brake pedal and move the button on steering wheel to "RES/+" once, then vehicle returns to the cruise speed before brake pedal is depressed and enters cruising status (in this process, cruise indicator remains on). When vehicle speed is higher than 40 km/h, release brake pedal and move the button on steering wheel to "RES+" and hold, cruise speed will increase continuously. At this time, release the button to set current speed as cruise speed and enter cruising status (in this process, cruise indicator remains on).

During cruising, depress brake pedal to enter pre-cruising status (in this process, cruise indicator blinks) to decrease vehicle speed. When vehicle speed is less than 40 km/h, release brake pedal and move the button of steering wheel to "RES/+" once, vehicle cannot return to the cruising status before brake pedal is depressed. When accelerator pedal is depressed until vehicle speed is higher than 40 km/h, move the button of steering wheel to "RES/+" once and release accelerator pedal, then vehicle returns to the cruising status before brake pedal is depressed (in this process, cruise indicator remains on). When accelerator pedal is depressed until vehicle speed is higher than 40 km/h, move the button of steering wheel to "RES/+"

and hold, cruise speed will increase continuously. At this time, release the button to set current speed as cruise speed and enter cruising status (in this process, cruise indicator remains on).

During cruising, depress brake pedal to enter pre-cruising status (in this process, cruise indicator blinks). When cruise control system button is not operated, the vehicle will remain in pre-cruising status, which requires the driver to take over vehicle and drive according to normal drive standards.

⚠ WARNING

- During cruising, if you shift the shift lever from D to N, or shift to R position by mistake, for safety reason, cruising will also be canceled and enter the pre-cruising state (cruise control indicator on the instrument cluster flashes). If it is not an emergency, this operation mode is not recommended.
- If a malfunction in the vehicle affecting cruise safety occurs, vehicle cannot enter cruising state and cruise control indicator flashes (cruise function button is locked). Please go to Jetour authorized service station for inspection and repair.

■ Speed setting

During cruising, move the button on steering wheel to "RES/+" once, cruise speed will increase by 1 km/h.

During cruising, move the button on steering wheel to "RES/+" and hold, cruise speed will increase continuously.

During cruising, move the button on steering wheel to "SET/-" once, cruise speed will decrease by 1 km/h.

During cruising, move the button on steering wheel to "SET/-" and hold, cruise speed will decrease continuously.

Function limit

■ Under the following situations, do not use CCS. Failure to do so may cause an accident, resulting in death or serious injury:

1. During emergency towing.
2. In heavy traffic.
3. On winding roads.
4. On roads with sharp curves.
5. On slippery roads, such as roads covered with rain, ice or snow.
6. Vehicle speed may exceed set speed when driving up and down on a steep slope.

5-2. Hill Descent Control (HDC) System

Hill Descent Control (HDC) System

HDC system can help vehicle drive on steep roads safely under controlled conditions. Combine engine braking, vehicle body dynamic electronic stability program system and Anti-lock Brake System (ABS) to work together. When HDC system is turned on, transmission gear is kept in 1st gear. The vehicle uses engine braking function to keep the speed in a lower range.

Hill Descent Control (HDC) System switch

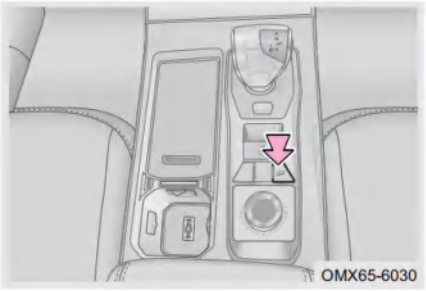

Press "" switch (indicator comes on), HDC system turns on; press "" switch again (indicator goes off), HDC system turns off.

> ⚠ WARNING
>
> The driver must control vehicle and operate as needed during the whole driving process to avoid danger.

Hill Descent Control (HDC) System indicator

When it is activated, "" green indicator on instrument cluster remains on.

When there is a fault, "" yellow indicator goes off.

> READ
>
> When HDC system is malfunctioning, this function will not work, please go to Jetour authorized service station for inspection and repair as soon as possible.

5-3. Blind Spot Detection System (BSD)

Blind Spot Detection System (BSD) (If Equipped)

The system has Blind Spot Detection System (BSD), Lane Change Assist System (LCA), Door Open Warning System (DOW), Rear Collision Warning System (RCW) and Rear Cross Traffic Alert System (RCTA) functions.

Activating blind spot detection system/lane change assist system

Blind spot detection warning system/lane change assist system monitors whether there are moving vehicles in the rear area of left and right sides of vehicle, and sends the information to driver to remind the driver to pay attention to driving safety and lane change safety.

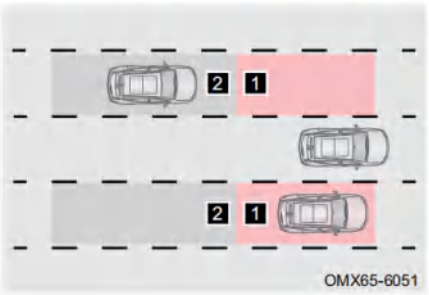

When shift lever is in D position and vehicle speed is 15km/h or higher with turning on system, blind spot detection warning system is activated.

1 Detection area of blind spot detection warning system

2 Vehicle approaches detection area of blind spot detection warning system

Level I: When there is a target vehicle entering the blind area behind the vehicle or the adjacent lane, and the alarm conditions are met, level I alarm is triggered, remind driver that there are dangerous vehicles behind both sides and pay attention to driving safety through the blind spot detection LED indicator on outside rear view mirror and alarm screen on instrument cluster.

Level II: On base of level I, turn signal lights on the same side are triggered. After level II alarm is triggered, blind spot detection LED indicator on outside rear view mirror quickly blinks, alarm sounds, reminding the driver that the lane change is dangerous.

READ

Blind spot detection system can be turned on/off through multimedia display.

⚠ CAUTION

- When lots of snow or ice accumulates on rear bumper and near radar sensor, or if drive on snowy road for a long time, BSD may not work.
- When towing or attaching accessories to rear of vehicle (such as a bicycle carrier), turn off BSD. Otherwise, radar radio waves will be affected, causing system work abnormally.
- BSD/LCA may detects stationary objects on or near a road (such as guardrails, tunnels, side walls, and parked vehicles) to turn on warning light.

⚠ WARNING

BSD and extended function just offer assistance to you. It may not work properly under all driving conditions, weather conditions, traffic conditions or road conditions.

Blind spot detection warning system

When receiving vehicle left side alarm, the multimedia display displays the red warning view of left side of vehicle.

When receiving vehicle right side alarm, the multimedia display displays the red warning view of right side of vehicle.

When receiving vehicle rear side alarm, the multimedia display displays the red warning view of rear side of vehicle.

READ
When blind spot detection system is malfunctioning, please go to the Jetour authorized service station for inspection and repair as soon as possible.

Door Open Warning System (DOW) (If Equipped)

When parking the vehicle and opening the door, there are fast approaching objects behind the left and right sides collide with the vehicle, DOW sounds an alarm.

Activation

After the function is turned on, when the vehicle is stationary or vehicle speed is less than 3km with the shift lever is not shifted to R, system is activated.

Level I: When there is a target vehicle in the left and right DOW detection area, and the alarm conditions are met, level I alarm is triggered, remind driver that there are dangerous vehicles behind both sides through the blind spot detection LED indicator on outside rear view mirror and alarm screen on instrument cluster.

Level II: On base of level I, door on the same side are triggered. After level II alarm is triggered, blind spot detection LED indicator on outside rear view mirror quickly blinks, reminding the driver and passenger that pay attention to safety when opening the door.

Rear Cross Traffic Alert System (RCTA) (If Equipped)

When reversing (vertical space reversing and oblique parking space reversing), RCTA detects the traffic behind the vehicle. If there is another vehicle approaching, the system will send an alarm to remind the driver to pay attention to safety.

Activation

After the function is turned on, when shift the shift lever to R, system is activated. When there is a target vehicle entering the blind area behind the vehicle or the adjacent lane, and alarm conditions are met, LED indicator on outside rear view mirror at the side of vehicle entering blinks to inform driver there is a target vehicle approaching and risk of collision exists.

5-4. Tire Pressure Monitoring System (TPMS)

Tire Pressure Monitoring System (TPMS)

TPMS is an active safety configuration and can monitor pressure and temperature of tire in real-time and the information can be checked through information display area. When tire pressure is too low or temperature is too high, TPMS alarms.

OMX65-5340

When tire inflation pressure of one or more tires is insufficient or the temperature is too high, "(!)" yellow indicator light on instrument cluster remains on.

Low tire inflation pressure will increase fuel consumption and aggravate tire wear. Serious tire wear may cause a risk of tire blowout, inspect causes of air leakage. Please go to Jetour authorized service station immediately for inspection and repair.

When tire temperature is too high, stop driving at once to cool down tires naturally. Do not cool it down by pouring cold water, otherwise, tire may be damaged, causing an accident. Please go to Jetour authorized service station for inspection and repair immediately.

If TPMS has not received radio-frequency signal from one or more sensors after several minutes, TPMS will send system malfunction warning, "(!)" yellow indicator on instrument cluster remains on. Please go to Jetour authorized service station for inspection and repair immediately.

READ

Even if vehicle is equipped with TPMS, check if tire pressure and appearance are normal before driving. Please go to Jetour authorized service station for inspection and repair as necessary.

Function limit

■ TPMS may send system malfunction warning in the following conditions:

1. Configuration learning of TPMS is not performed after replacing wheels (-spare tire included).
2. TPMS may be affected by electromagnetic shielding of sensor due to installation of tire chains.

3. Tire pressure sensor or other components have been damaged, please go to Jetour authorized service station for inspection and repair as necessary.
4. TPMS may not work properly due to interference of electronic equipment (-over standard equipment) installed on vehicle, resulting in false warning.
5. TPMS may not operate due to radio interference; And it may be interfered temporarily due to strong electromagnetic radio signals with same frequency (433 MHZ).

5-5. Parking Assist System

Parking View Monitor System (If Equipped)

Parking view monitor system collects the rear view image of the vehicle through rear camera and displays the rear view and lane guideline to the operator by audio system display, providing safety and easy parking for driver.

Usage methods

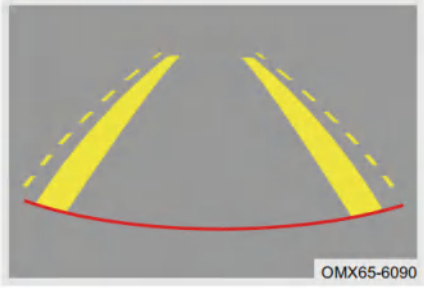
OMX65-6090

Move shift lever to R to enter parking view monitor system screen, and the screen will display the parking view monitor and lane guideline. Lane guideline varies depending on steering wheel rotation and it is used for prejudging the reversing traveling trace.

⚠ CAUTION

- Use the distance as a reference (such as on the hill).
- Vehicle width guideline and predicting line are wider than the actual line.
- Do not scratch the lens when cleaning dirt or snow on the camera surface.
- If tire is replaced with a different size, the displayed predicting line is different from the actual line, please use the rear view mirror or check and determine distance to other objects actually.

⚠ WARNING

- When reversing, make sure that back door is firmly closed.
- Never distract your attention from surrounding traffic due to images on display.
- Due to the limited monitoring range, parking view monitor system cannot view the bottom and corners of bumper.
- When reversing, always pay extra attention to surrounding children, small animals and objects, because they cannot always be detected by camera.
- Because rear camera uses wide-angle lens, object distance displayed on parking view monitor system may appear different from the actual distance.
- Never hit the lens. It is a precise instrument. Hitting the lens may lead to malfunction or damage, causing a fire or electric shock.
- When washing the vehicle body with high-pressure water, do not spray water around the camera, otherwise, water will enter camera and condense on the lens, causing malfunction, fire, or electric shock.
- Parking view monitor is convenient, but it is not a substitute for correct reverse operation. When reversing, be sure to look around to check if the surrounding is safe and reverse slowly.
- Rear camera lens may enlarge and distort the view, so image on display is different from real object or it cannot reflect the real object accurately, and there is also blind spot and a little delay.

Panoramic View Monitor System (If Equipped)

Panoramic view monitor system collects surrounding images of vehicle through four cameras, and displays the surrounding images and lane guideline on multimedia display, so as to assist the driver to park safely and easily.

Camera layout

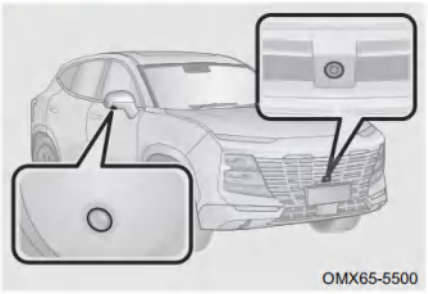

Installation position of front camera: Intake grille of front bumper.

Installation position of left/right camera: Bottom of left/right outside rear view mirror.

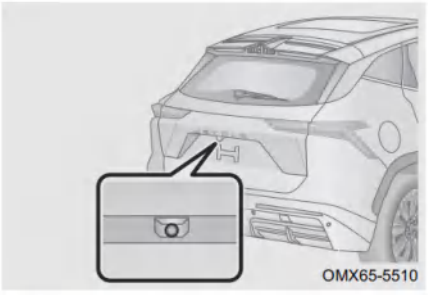

Installation position of rear camera: Upper middle part of rear license plate.

Usage methods

Turn vehicle power to ON mode, and vehicle speed is lower than 20 km/h:

Method 1: Move gear position to R to enter panoramic view monitor system; Move gear position out from R to exit panoramic view monitor system.

Method 2: Click button on main screen of multimedia display to enter panoramic view monitor system; Under panoramic view monitor screen, click exit button in the upper left corner to exit panoramic view monitor system.

Method 3: Through Voice command "Hello, Jetour. Turn on 360 panoramic view" to activate the system .

Method 4：After front parking radar obstacle distance signal is received, it enters panoramic view monitor (if equipped).

Method 5: Turn on the left/right turn signal light to enter AVM (it is necessary to turn on "operate turn signal lights to activate panoramic view monitor" in AVM setting); Turn off left/right turn signal lights to exit AVM.

Method 6: When the steering wheel angle is greater than 180°, the rear left/ right 3D view of the vehicle will be displayed.

Note: After turning vehicle power to OFF mode or vehicle speed is higher than 30 km/h, it exits panoramic view monitor system.

READ

The panoramic view monitor system provides driving assistance convenience, but the object in the image does not reflect the actual size and obstacle distance. Compared to the actual image, the image has a little delay and blind spot. Therefore, the panoramic view function is not a substitute for driver's operation and judgment. Driver should pay attention to the surroundings and drive safely during turning on/off and using the function.

Switching view

OMX65-5530

- Click to switch to 2D/3D view.
- Click to switch to front/rear wide angle view.
- Click to switch to birds-eye view.
- Click to enter panoramic view monitor setting screen.

READ

- According to the configuration of the vehicle, panoramic view monitor view displays different. Please refer to the actual vehicle configuration.
- The panoramic view monitor system is very helpful for parking and safety driving. It is recommended that you should be familiar with this function in advance in an open and convenient area.

⚠ CAUTION

- Do not scratch the lens when cleaning dirt or snow on the camera surface.
- Do not place any object on the camera of panoramic view monitor system.
- The object distance seen from the panoramic view monitor system is different from the actual distance.
- Before using panoramic view monitor system, make sure to extend outside rear view mirrors and close the back door firmly.
- Do not remove/install the panoramic view monitor system and change the camera installation position and angle without permission, otherwise, it may affect the function and effect of panoramic view monitor system.
- The panoramic view monitor system provides driving assistance convenience, but the object in the image does not reflect the actual size and obstacle distance. Compared to the actual image, the image has a little delay and blind spot. Therefore, the panoramic view function is not a substitute for driver's operation and judgment. Driver should pay attention to the surroundings and drive safely during turning on/off and using the function.

Panoramic view monitor setting

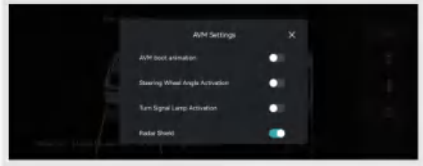

OMX65-5550

- [AVM boot animation]: ON/OFF.
- [Steering Wheel Angle Activation]: ON/OFF.
- [Turn Signal Lamp Activation]: ON/ OFF.
- [Radar Shield]: ON/OFF.
- [Auto View Zoom-in]: ON/OFF.
- [Front view auxiliary line display]: ON/OFF.
- [Body Transparency]: Set 0%-100%.
- [Restore defaults]: Set restore defaults.

Parking Radar System

Parking radar system is a radar detection device, adopts radar sensors to detect if there are obstacles from front/rear of vehicle and distance from obstacles. The driver is prompted by the multimedia display, sound alarm, etc., so as to assist the driver to park safely and easily.

Usage methods

Turn vehicle power to ON mode and move gear position to R position to activate parking radar system; When a radar sensor detects an obstacle, multimedia display displays distance from obstacle (red, yellow, green areas) accompanied by alarm sound.

Note: When radar sensor is malfunctioning, the buzzer keeps sound for 2 seconds, meanwhile, exclamation mark is displayed.

READ

- Monitoring distance is the shortest vertical distance between obstacle and radar sensor.
- If obstacles are detected by multiple radar sensors, the distances between each radar sensor and obstacles are displayed on multimedia display simultaneously, and system sounds according to nearest obstacle.

⚠ CAUTION

- For obstacles out of detection range, radar sensors will not alarm.
- When vehicle is moving, be aware that the reverse radar sensors on the other side may get close to other obstacles.

Function limit

■ Parking radar system may not work normally in the following conditions:

- When vehicle is on a steep slope.
- When driving in jelly-like snow or rain.
- Low objects such as rocks, etc. cannot be detected.
- Objects higher than bumper cannot be detected.
- Thin objects such as wires, fences and ropes, etc. cannot be detected.
- When vehicle is equipped with a high frequency radio or antenna is in use.
- When the surface of the radar sensor is frozen.
- Radar sensors may not operate properly in hot or cold weather.
- When radar sensors are covered by dirt, snow or mud, they may not detect obstacles.
- Objects that easily absorb ultrasonic waves (such as soft snow, cotton, sponge) cannot be detected.

- When there is noisy near the vehicle, such as vehicle horns, motorcycle engines, air brakes of large vehicles, or other loud noises producing ultrasonic waves.

Cleaning radar sensor

OMX65-6111

When washing vehicle, use a soft cloth or water (low water pressure) to wash off foreign matter such as snow, mud, and dust on the surface of radar sensor.

High pressure water flow such as water guns or large external force may cause damage to the radar sensors. Do not pinch or impact the radar sensors, as this may cause radar sensor to fail to operate normally.

When washing vehicle, use a soft cloth or water (low water pressure) to wash off foreign matter such as snow, mud, and dust on the surface of radar sensor.

High pressure water flow such as water guns or large external force may cause damage to the radar sensors. Do not pinch or impact the radar sensors, as this may cause radar sensor to fail to operate normally.

6-1. Basic Knowledge of Vehicle Emergency

Hazard Light..... 154

Reflective Vest..... 154

Warning Triangle..... 154

Spare Tools..... 155

6-2. Vehicle Emergency Handling

Tire Change Operation..... 155

If Engine Coolant Temperature is High 159

If Battery is Depleted 160

If Your Vehicle Cannot Start Normally..... 162

6-3. Towing

Towing Vehicle..... 163

Emergency Towing Vehicle 164

Installing Towing Eyelet..... 165

6-4. Fuse

Fuse Box 166

Checking Fuse..... 167

Replacing Fuse..... 167

6-1. Basic Knowledge of Vehicle Emergency

Hazard Light

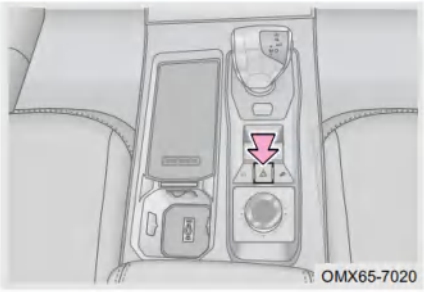

Press hazard light switch, turn signal lights flash and the turn signal indicator on instrument cluster flashes at the same time; press the switch again, turn signal lights and indicator will turn off.

In case of vehicle failure or traffic accident etc., please turn on the hazard lights to warn other vehicles, so as to avoid the secondary accident.

READ

- The hazard lights can still work when the vehicle power is turned to OFF mode.
- The hazard lights are automatically activated when the airbag is operating.

Emergency braking strobing function

Turn on the emergency braking strobing by multimedia display. Emergency braking will be applied when the vehicle speed is higher than 50 km/h, and the hazard light will flash more than 3 times to remind vehicles behind to take caution, avoiding rear-end collision. Release the brake pedal, press the hazard light switch, depress accelerator pedal or turn vehicle power to OFF mode, the hazard light and turn signal indicator on instrument cluster will stop flashing.

Reflective Vest

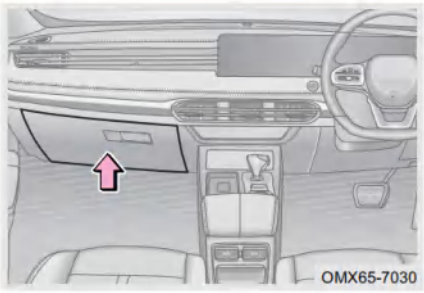

The vehicle is equipped with a reflective vest. It is recommended to place the reflective vest in the glove box.

In case of vehicle failure or traffic accident etc., wear the reflective vest with reflective strip facing outwards. It can warn other vehicles to avoid secondary accidents.

Warning Triangle

Warning triangle is located under the luggage compartment carpet.

In case of vehicle failure or traffic accident etc., the reflective performance of warning triangle can warn other vehicles to avoid secondary accidents.

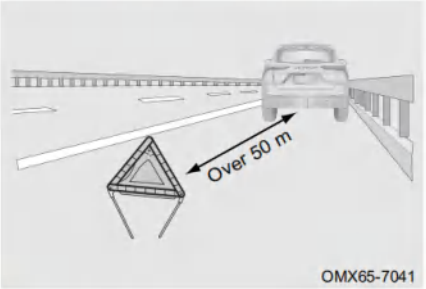

On a normal road, place the warning triangle at a distance of more than 50m behind the vehicle.

On the highway, place the warning triangle at a distance of more than 150m behind the vehicle.

In rain or when steering, place the warning triangle at a distance of over 150m behind the vehicle.

Spare Tools

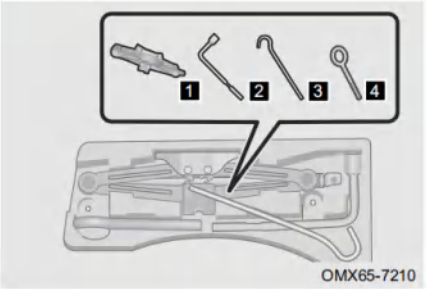

Spare tools are located under the luggage compartment carpet.

1 Jack

2 Wheel bolt wrench

3 Jack rocker

4 Towing eyelet

6-2. Vehicle Emergency Handling

Tire Change Operation

If a tire goes flat during driving, slow down gradually, grip the steering wheel with two hands and keep driving straightly. Stop vehicle to a safe place away from the traffic road.

1. Preparations before replacing flat tire.

Step 1: Stop vehicles on solid, level ground;

Step 2: Apply the parking brake and shift the shift lever to P;

Step 3: Turn vehicle power to OFF mode, and turn on hazard lights;

Step 4: Have everyone get out of vehicle, pull over and stay away from traffic;

Step 5: Wear reflective vest, and place the warning triangle at a distance of 50 m - 150 m behind the vehicle (depending on actual condition).

⚠ CAUTION
Do not continue driving with a flat tire. Driving even a short distance can damage the tire beyond repair.

2. Take out the spare tire.

Step 1: Open back door, and lift the luggage compartment carpet;

Step 2: Turn the cap counterclockwise to remove it and take out the spare tire.

3. Remove the flat tire.

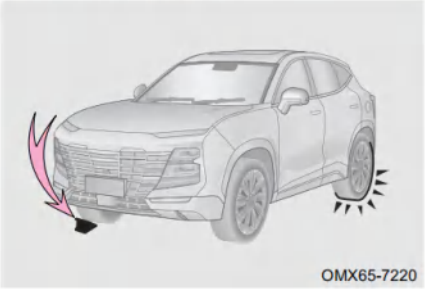

OMX65-7220

Step 1: Put a block under the tire diagonally opposite to flat tire to prevent vehicle from rolling.

Flat Tire	Wheel Block Position
Front left wheel	Behind rear right wheel
Front right wheel	Behind rear left wheel
Rear left wheel	Behind front right wheel
Rear right wheel	Behind front left wheel

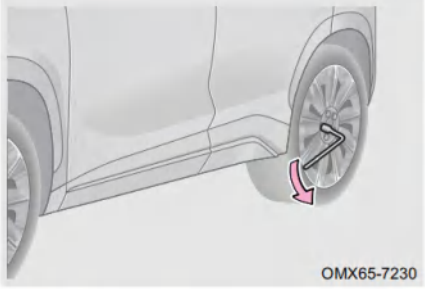

OMX65-7230

Step 2: Fit wheel bolt wrench to wheel bolt of flat tire, set the handle on left side, hold the end of wrench handle and push it downward, loosen each bolt of flat tire about one-half turn.

⚠ CAUTION

When removing wheel bolts with the wrench, be careful not to drop them as they can be damaged easily.

⚠ WARNING

Do not remove the bolts completely. Otherwise, wheel may drop off because of the vehicle pressure, causing personal injury.

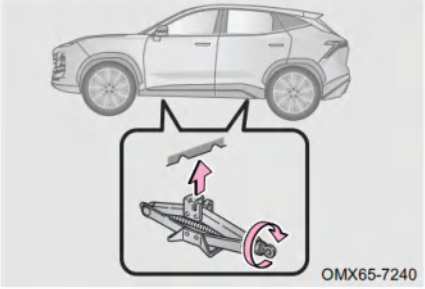

OMX65-7240

Step 3: Place jack on firm and level ground, turn jack handle clockwise by hand, making the notch of jack contact with the correct jacking-up point.

READ

- Jack rated load: 1,000kg.
- Jack the vehicle to a proper height at which tire can be replaced.

⚠ WARNING

Never put any part of body under the vehicle when vehicle is jacked up to avoid personal injury.

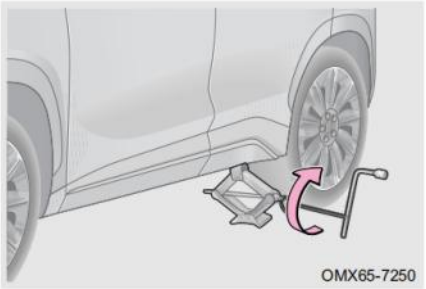
OMX65-7250

Step 4: When the notch of jack contacts correct jacking-up point, fit jack rocker into jack, and then fit wheel bolt wrench into jack rocker, and turn the wheel bolt wrench clockwise to jack up the vehicle.

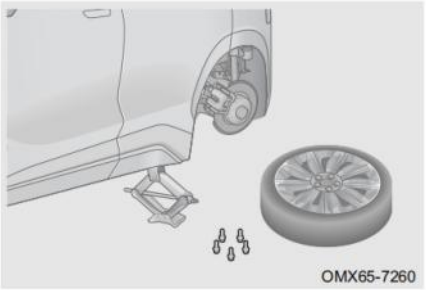
OMX65-7260

Step 5: Remove the wheel bolts of flat tire counterclockwise with the wheel bolt wrench, and remove the flat tire.

⚠ CAUTION

Place the flat tire on ground with rim facing upward, avoid scratching the rim surface.

4. Install the spare tire.

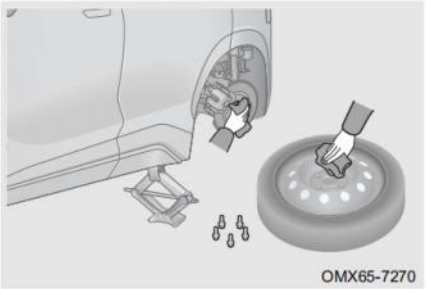
OMX65-7270

Step 1: Remove any attachments from mounting surface. Make sure wheel hub well contacts with wheel surface, and install spare tire.

READ

Dynamic electronic stability control system alarms abnormally after replacing with the non-full size spare tire. After using the normal size tire and driving for 1 km, it will automatically return to normal.

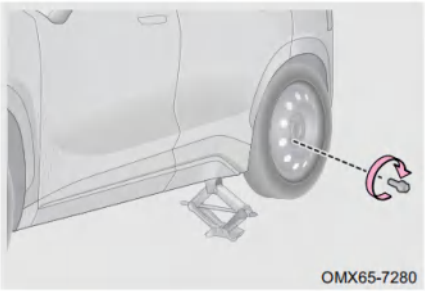
OMX65-7280

Step 2: When installing wheel bolts, screw into all wheel bolts clockwise by hand. Then straighten the spare tire, and pretighten all wheel bolts with wheel bolt wrench.

CAUTION

Do not apply oil or grease to wheel bolts.

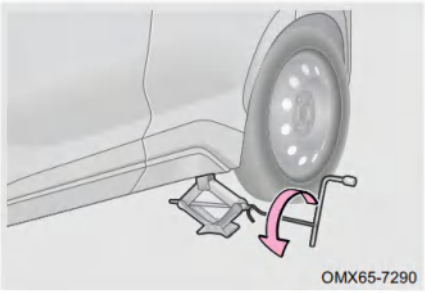
OMX65-7290

Step 3: Make sure all persons around the vehicle stay in the safe area, fit jack rocker into jack, and wheel bolt wrench into jack rocker, and turn wheel bolt wrench counterclockwise to lower the vehicle.

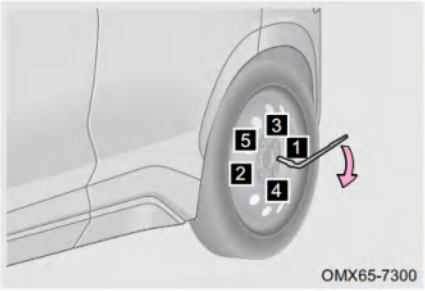

OMX65-7300

Step 4: Using wheel bolt wrench, tighten bolts in sequence shown in illustration. Repeat the process 2 to 3 times to ensure that wheel bolts are tightened in place.

Step 5: Stow the flat tire and place jack, warning triangle and spare tools in original place.

Step 6: When the inflation pressure of replaced spare tire is insufficient, drive vehicle slowly to the nearest Jetour authorized service station to inflate the tire to correct pressure.

⚠ WARNING

- Drive at specified speed of 80 km/h (50mph) or less with a non-full size spare tire, it is not designed for driving at high speeds. Failure to observe this precaution may lead to an accident causing death or serious injury.
- Tighten wheel bolts to 130 ± 10 N·m after replacing the non-full size spare wheel. Drive slowly to the nearest authorized service station (advised distance: ≤ 80 km) to replace with a standard tire. Otherwise, the wheels may fall off due to loose bolts.
- The vehicle becomes lower when driving with non-full-size spare tire compared to when driving with standard tires. Be careful when driving over uneven road surfaces.
- Spare tire is designed only for emergency use and should be used only for very short periods. It should never be used for long drives or extended periods.
- Remember that the non-full-size spare tire provided is specifically designed for use with your vehicle. Do not use your spare tire on another vehicle.
- Do not use more than one spare tires simultaneously.
- Replace the spare tire with a standard tire as soon as possible.
- Avoid sudden acceleration, abrupt steering, sudden braking and shifting operations that cause sudden engine braking.

If Engine Coolant Temperature is High

If the engine coolant temperature is high during driving, and engine coolant temperature gauge approaches H area or "" red indicator on instrument cluster comes on, please stop vehicle to a safe place away from the traffic road.

Step 1: Stop vehicles on solid, level ground;

Step 2: Apply the parking brake and shift the shift lever to P;

Step 3: Turn off A/C system (water dripping from air conditioning after use is normal);

Step 4: Turn vehicle power to OFF mode after idling for several minutes, and turn on hazard lights;

Step 5: Before opening the hood, check whether there is steam or coolant overflow or leakage. Only open the hood when there is no steam or coolant overflow or leakage, otherwise, burns may occur;

Step 6: Check the coolant level, if the cause cannot be determined, please contact Jetour authorized service station for inspection and repair.

> ⚠ CAUTION
>
> - If engine overheats frequently, please contact Jetour authorized service station for inspection and repair immediately.
> - If the coolant level is low, pure water can be used temporarily, please go to Jetour authorized service station to replace coolant as soon as possible.

If Battery is Depleted

Symptom when battery is depleted

1. The starter makes "click" sounds, and fails to operate. Even if it operates, the force is weak, and engine cannot be started.
2. The headlight is dimmer than normal.
3. The horn does not sound or volume is weak.

Jump-starting

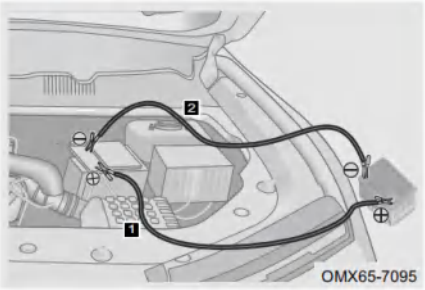

Step 1: Turn vehicle power to OFF mode, and connect jumper cables;

1 Connect one end of positive cable to positive terminal (+) of battery on discharged vehicle, and the other end to the positive terminal (+) of battery on rescue vehicle.

2 Connect one end of negative cable to negative terminal (-) of battery on rescue vehicle, and the other end to unpainted metal part on discharged vehicle.

Step 2: Start the engine of rescue vehicle, slightly increase engine speed and maintain for approximately 5 minutes to temporarily charge the battery on discharged vehicle;

Step 3: If the discharged vehicle is still unable to start, check whether the jumper cable is connected normally, and then charge the battery;

Step 4: Once the engine is started on discharged vehicle, remove jumper cables in the reverse order of connection (negative cable first and then the positive cable).

⚠ CAUTION

- If the battery is lack of power frequently, please go to Jetour authorized service station for inspection and repair as soon as possible.
- The negative terminal of battery on rescue vehicle should not be directly connected to negative terminal of battery on discharged vehicle.
- Do not jump start unless you are sure that the battery voltage for jump starting is 12 - 13 V.
- When connecting and removing jumper cables, ensure that they do not become entangled in fan, belt, etc.
- Ensure that the jumper cables are properly connected and keep a certain distance between terminals, to prevent the jumper cables from touching each other or touching other metal parts of the vehicle.
- Do not start vehicle by pushing or pulling the vehicle.

⚠ WARNING

- The specified jumper cables should be used.
- Do not smoke, use matches, cigarette lighters or open flames near the battery.
- If you are unsure about how to follow the procedure, Chery Commercial Vehicle Co., Ltd. strongly recommends that you seek help from professional serviceman or at a Jetour authorized service station.

Replacing battery

Step 1: Turn vehicle power to OFF mode;

Step 2: Open the hood;

Step 3: Remove the negative (-) battery terminal cable;

Step 4: Remove the positive (+) battery terminal cable;

Step 5: Remove the battery;

Step 6: Install a new battery that has the same specification as the used one;

Step 7: Install the new battery properly in the reverse order of removing.

Note: The new battery should have the same specifications with the genuine one. We recommend that you should go to a Jetour authorized service station for battery replacement.

ENVIRONMENTAL PROTECTION

Battery contains acid which is poisonous and corrosive. Please deal with it according to the local regulations and provisions regarding environmental protection.

⚠ CAUTION

While removing battery, be careful to avoid the metal tool contacting both battery terminals or touching the positive (+) battery terminal and body at the same time.

⚠ WARNING

- Do not leave battery within the reach of children.
- Always wear gloves and safety glasses during operation, as battery contains acid which is poisonous and corrosive. Do not lean on the battery.
- If acid spills on your skin or clothes, the liquid must be neutralized with alkaline water (such as: soap water) immediately, and then wash it with clean water. Get emergency medical attention immediately if necessary.

If Your Vehicle Cannot Start Normally

If your vehicle cannot start normally, first make sure you have followed the correct starting procedures and check if fuel is sufficient.

■ Starter speed is too low, but vehicle cannot start normally

Step 1: Check if battery terminals are tight and clean;

Step 2: Turn on headlights. If the light is dim, it indicates that the battery is discharged. Please try jump starting;

Step 3：Try to start engine again, if it still cannot start normally, the starting system may be malfunctioning. Please contact Jetour authorized service station for inspection and repair immediately.

■ Starter speed is normal, but vehicle cannot start normally

Step 1: Turn vehicle power to OFF or ACC mode, try to start the engine again;

Step 2: If the engine still cannot be started normally, it may cause excessive fuel in cylinder due to repeat starting. Turn vehicle power to OFF mode, try to start engine again after a few minutes;

Step 3: Try to start engine again, if it still cannot start normally, please contact Jetour authorized service station for inspection and repair immediately.

⚠ CAUTION

- To avoid damage to the starter, starting operation should not exceed 15 seconds each time.
- If vehicle becomes difficult to start or stalls frequently, please go to Jetour authorized service station for inspection and repair as soon as possible.

6-3. Towing

Towing Vehicle

Towing must comply with local laws about towing.

Before towing vehicle, release the parking brake and shift the shift lever to N.

Correct towing methods

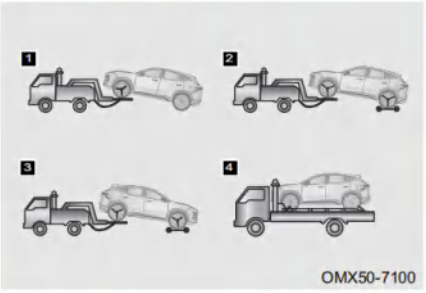

1 For front-wheel drive vehicles: Tow with a wheel lift-type truck from front, and secure the vehicle firmly.

2 For front-wheel drive, rear-wheel drive and 4WD vehicles: When towing with a wheel lift-type truck from front, use a towing dolly under the rear wheels, and secure the vehicle firmly.

3 For front-wheel drive, rear-wheel drive and 4WD vehicles: When towing with a wheel lift-type truck from behind, use a towing dolly under the front wheels, and secure the vehicle firmly.

4 For front-wheel drive, rear-wheel drive and 4WD vehicles: When towing with a flatbed truck, secure the vehicle firmly.

⚠ CAUTION

- It is recommended to use flatbed truck for 4WD vehicles.
- Use a flatbed truck if the vehicle's wheels or axles are damaged.
- Ensure that there is a proper clearance between the wheels not lifted and ground. Otherwise, the bumper and chassis of the towed vehicle will be damaged during towing.

Wrong towing methods

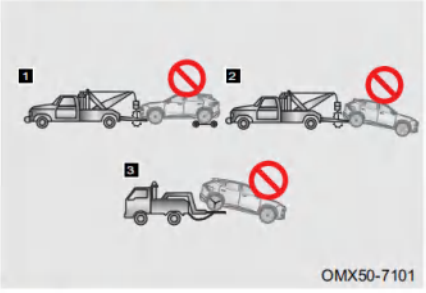

1 Tow with sling-type truck from front of the vehicle.

2 Tow with sling-type truck from rear of the vehicle while front wheels are on the ground.

3 Tow with wheel lift-type truck from rear of the vehicle while front wheels are on the ground.

⚠ CAUTION

Do not tow with a sling-type truck to prevent body damage.

Emergency Towing Vehicle

If tow truck is not available in an emergency, your vehicle may be temporarily towed using a towing cable or chain secured to the emergency towing eyelet. This should only be attempted on hard surfaced road for short distances at low speed.

Driver must be in towed vehicle to operate steering wheel and brake pedal, and vehicle's wheels, drive train, axle, steering system and braking system must be in good condition.

⚠ CAUTION

- Do not perform emergency towing for long periods of time.
- Never tow a vehicle heavier than this vehicle, otherwise the vehicle may be damaged.
- Secure a towing cable, chain or lever to the vehicle towing eyelet.
- Both drivers must be familiar with the towing process, otherwise they cannot carry out towing work.
- Tow vehicle as straightly ahead as possible, do not tow vehicle from side to avoid damaging vehicle.
- If engine is not started, assist system will not work, therefore, braking and steering will be more difficult than usual. Operate carefully.
- For towing of A/T models, Chery Commercial Vehicle Co., Ltd strongly recommends that you seek help from professional serviceman or Jetour authorized service station.
- If towed vehicle still cannot move, do not forcibly continue towing to avoid secondary damage to vehicle. Chery Commercial Vehicle Co., Ltd. Ltd strongly recommends that you seek help from professional serviceman or Jetour authorized service station.

⚠ WARNING

- To avoid personal injury, people other than driver should stay away from the vehicle when it is towed.
- When towing vehicle, avoid sudden starting or erratic driving maneuvers, doing so would apply excessive force on the towing eyelet, cable, chain or lever. The towing eyelet, cable, chain or lever may break and cause vehicle damage or serious personal injury.

Installing Towing Eyelet

Front towing eyelet

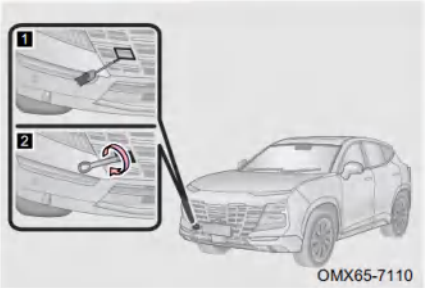

Step1: Take out the towing eyelet from luggage compartment.

Step 2: Use a screwdriver with its tip wrapped with tape to remove the front towing eyelet hole cover.

Step 3: Install towing eyelet into eyelet hole in a clockwise direction. Then tighten towing eyelet firmly with wheel bolt wrench or similar hard metal rod.

Rear towing eyelet

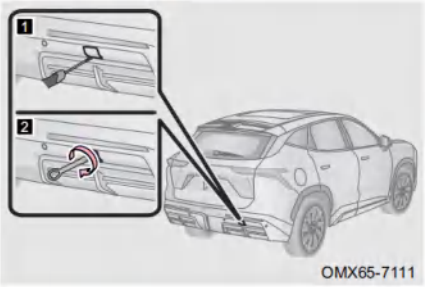

Step1: Take out the towing eyelet from luggage compartment.

Step 2: Use a screwdriver with its tip wrapped with tape to remove the rear towing eyelet hole cover.

Step 3: Install towing eyelet into eyelet hole in a clockwise direction. Then tighten towing eyelet firmly with wheel bolt wrench or similar hard metal rod.

⚠ CAUTION

- Only use specified towing eyelet. Otherwise, vehicle may be damaged.
- Drive the vehicle slowly and smoothly when towing. Impact due to excessive tension may damage the vehicle.
- Towing rope or towing bar can be installed only when towing eyelet is installed in place.

⚠ WARNING

- Do not secure the towing cable or chain to the suspension component to avoid vehicle damage.
- Make sure that towing eyelet is installed securely. Otherwise, the towing eyelet may come loose when towing, which may cause an accident, resulting in serious injuries or death.
- When towing vehicle with towing cable or chain, avoid sudden starting, doing so would apply excessive force to the towing eyelet, cable, or chain. The towing eyelet, cable or chain may break and debris may hit others, resulting in serious personal injury.

6-4. Fuse

Fuse Box

Fuses are used to protect electrical components and circuits to avoid short circuit or overload. If fuse is blown, the protected components and systems will not work properly.

Front compartment fuse box

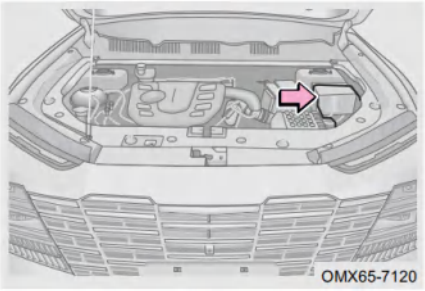
OMX65-7120

Step 1: Turn vehicle power to OFF mode;

Step 2: Disconnect the negative battery terminal cable;

Step 3: Open the hood, remove front compartment fuse box cover to inspect or replace fuse.

Instrument panel fuse box

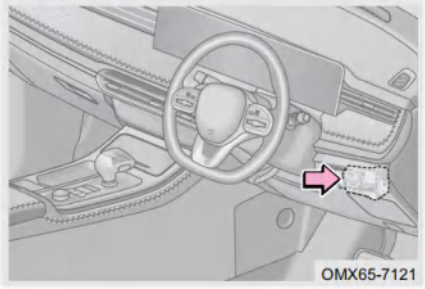
OMX65-7121

Step 1: Turn vehicle power to OFF mode;

Step 2: Disconnect the negative battery terminal cable;

Step 3: Remove instrument panel lower left protector to inspect or replace fuse.

READ

- Check suspected fuses according to the fuse and relay layout.
- The fuse box must be clean, keep it away from dampness when opening, as moisture may damage the electrical system.
- To prevent damage, be careful when removing/installing the instrument panel lower left protector. Please contact Jetour authorized service station as necessary.

Checking Fuse

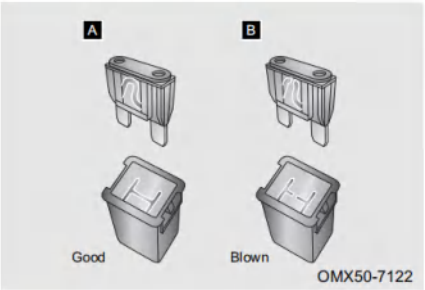

A Good fuse.

B Blown fuse.

READ

If the fuses are blown, they must be replaced.

Replacing Fuse

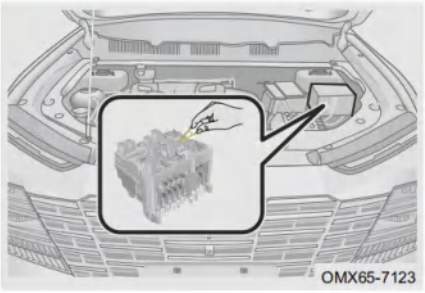

Step 1: Turn vehicle power to OFF mode;

Step 2: Check fuses according to the fuse and relay layout;

Step 3: Pull the suspected fuse out by a fuse remover;

Step 4: Check if the fuse is blown. If you are not sure whether the fuse has blown, replace the suspected fuse with spare fuse that has the same amperage rating. You can see the amperage rating on the schematic diagram inside the fuse box cover.

READ

If the spare fuse is unavailable, you can use a fuse with same specification from other unimportant electrical appliances in case of emergency. It is better to purchase a set of spare fuses and put them in vehicle for emergency use.

⚠ CAUTION

- Do not modify fuse or fuse box.
- Only install a fuse that has the same amperage rating as used one. Never replace a fuse with a wire, even as a temporary replacement. Otherwise, this may cause serious damage to electrical appliances, or even fire.

7-1. Repair and Maintenance

Repair and Maintenance ... 170

Jetour Authorized Service Station Provides Service for You 170

7-2. Normal Maintenance

Normal Maintenance 170

Checking Oil Level 171

Checking Brake Fluid Level 173

Checking Coolant Level 174

Checking Windshield Washer..... 174

Checking Radiator and Condenser 175

Checking Battery..... 175

Checking Drive Belt 175

Checking Tires..... 176

Tire Rotation..... 178

Checking Air Conditioning Filter 178

Checking Wiper Blades..... 178

7-3. Regular Maintenance

First Maintenance Card..... 181

Maintenance Schedule 183

Technical Data..... 188

Safety Protection System Record 188

7-1. Repair and Maintenance

Repair and Maintenance

There are two types of repair and maintenance: One is normal maintenance, which can be done by the customers; the other is regular maintenance, inspection and repair, which need to be completed by Jetour authorized service station.

For the details of regular maintenance, inspection and repair methods, please refer to this section; Regular maintenance can be helpful for you to find and eliminate potential dangers in time to prevent malfunctions. Scheduled maintenance of your vehicle is essential. Please strictly follow the maintenance schedule of "User Manual" to perform maintenance, ensuring that your vehicle maintains the best performance and good operating conditions, thus effectively extending the service life of the vehicle.

Please use the oil fluid recommended by Chery Commercial Vehicle Co., Ltd or your vehicle may be damaged.

Jetour Authorized Service Station Provides Service for You

Genuine spare parts and materials help to extend the service life of your vehicle. Please pay special attention here: Chery Commercial Vehicle Co., Ltd. provides genuine spare parts to Jetour authorized service station located throughout the country. It is recommended that you go to Jetour authorized service station to replace genuine spare parts. Jetour authorized service station is the only professional service station authorized by Chery Commercial Vehicle Co., Ltd the staff is trained professionally and strictly by Chery Commercial Vehicle Co., Ltd they will wholeheartedly provide the best after-sales service for you.

ENVIRONMENTAL PROTECTION
Used engine oil, brake fluid, coolant, batteries and tires should only be disposed of by qualified waste disposal agencies or after consultation with manufacturers, and should not be taken out with household waste or disposed of into the communal drainage system.

7-2. Normal Maintenance

Normal Maintenance

Be sure to follow the correct maintenance procedures given in this section if you perform do-it-yourself maintenance.

This section only lists the simple maintenance instructions which can be performed by customers. However, there are still many items that have to be maintained by qualified technicians with special tools.

⚠ CAUTION

- Check for any tools or cloths that may have been left behind before closing the hood.
- Do not drive vehicle with the air filter removed, otherwise, excessive engine wear may be caused.
- Correctly add fluid to the appropriate level. If some fluid splashes onto the vehicle body, be sure to immediately wash it off with a wet cloth, avoiding damaging painted surface.

⚠ WARNING

- If the engine is very hot, do not open the coolant reservoir cap to prevent scalding injury.
- When the engine is running, keep hands, clothing and tools away from engine drive belts and cooling fan.
- Do not smoke near fuel filler or battery, otherwise, it may cause sparks or open flames, resulting in a fire.
- There is a high voltage in the electronic ignition system. Do not touch these components while the engine is running or the vehicle power is in ON mode.
- The vehicle that just stopped, engine, radiator, exhaust manifold and cylinder head will be very hot, so never touch them. Prevent any loose clothing from getting caught in the fan and causing personal injury because the cooling fan may automatically start and run at any time.

Checking Oil Level

Checking engine oil

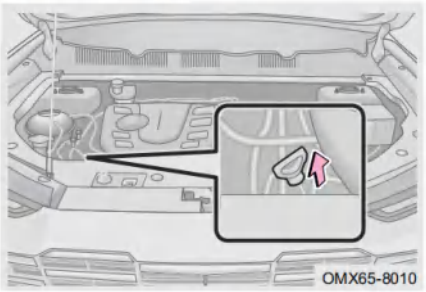

With the engine turned off and cooled down, check the oil level with dipstick.

Step 1: Warm up the engine and then stop the vehicle on a level ground. Wait about 5 minutes after turning off engine.

Step 2: Open the hood, pull out the dipstick and wipe it with a clean cloth.

Step 3: Fully reinsert the dipstick.

Step 4: Leave the vehicle as is for approximately 3 seconds, pull out the dipstick again and check if oil level is correct.

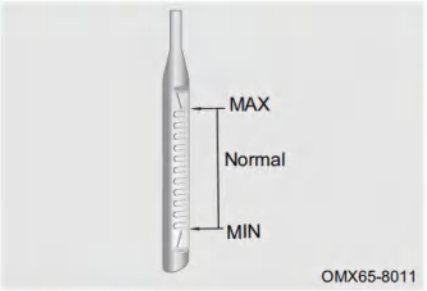

Put a cloth under the dipstick to avoid spilling oil onto engine or vehicle body.

Do not check the oil level immediately after the engine warms up, and wait until the oil returns into the bottom of engine.

Adding engine oil

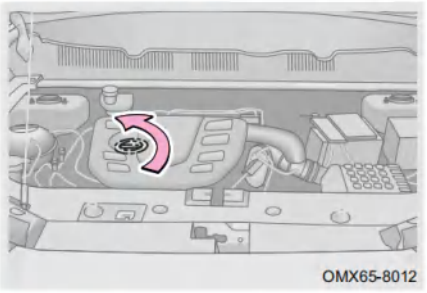

Step 1: Turn the oil filler cap counterclockwise to remove it.

Step 2: Use the funnel to add a small amount of engine oil several times and check the oil level with dipstick again.

Step 3: When the level reaches the correct range, turn the engine oil filler cap clockwise to tighten it.

ENVIRONMENTAL PROTECTION

Do not discard the waste engine oil and filter in household waste, down the drain or spill on to the ground. Otherwise, it will cause serious environmental pollution. Please dispose it according to the local regulations regarding environmental protection.

⚠ CAUTION

- Do not overfill oil, or it may cause damage to engine.
- Only engine oil recommended by Chery Commercial Vehicle Co., Ltd. can be used. Otherwise, all the direct or indirect losses incurred are at customer's own risk.
- If oil is accidentally spilled on the surface of the engine during refueling, clean the spilled oil with canvas and other tools before tightening the engine oil filler cap.
- The engine oil filler cap cannot be placed up side down after removal to prevent misjudgment caused by oil backflow, and prevent oil flowed through seal ring from overflowing by itself after assembly again, which results in an illusion of oil leakage from the engine oil filler cap.

Checking Brake Fluid Level

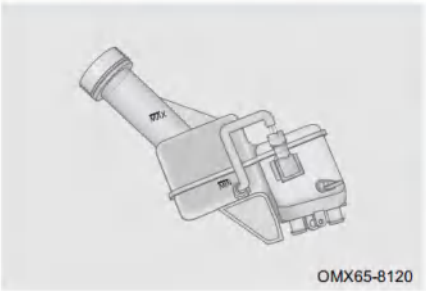

OMX65-8120

Add brake fluid to make the level is between MIN and MAX marks. If brake fluid is insufficient, low brake fluid level indicator " (!) " on instrument cluster comes on, please add brake fluid in time. The level should not be lower than MIN mark. If the indicator does not go off after adding, please contact Jetour authorized service station for inspection and repair.

⚠ CAUTION

- As the brake fluid is highly absorbent, do not leave the brake fluid reservoir cap open for a long period of time.
- If brake fluid contacts with painted surface, wipe it with clean tissue or dry cloth immediately and rinse with large amount of plain water. Never allow the fluid contact with skin or eyes. If this occurs, please flush the affected area with a great quantity of water and get emergency medical attention immediately.
- Only brake fluid recommended by Chery Commercial Vehicle Co., Ltd. can be used. Otherwise, all the direct or indirect losses incurred are at customer's own risk.

⚠ WARNING

- Used or improper brake fluid will affect braking efficiency and even result in brake system failure.
- Original brake fluid specified by our company and new brake fluid must be used.
- Brake fluid specifications can be found on the package, please use brake fluid with correct specifications.
- Brake fluid is poisonous substance. Never store the brake fluid in empty food container, drink bottle or any non-original container, to prevent the brake fluid from being eaten by mistake, resulting in poisoning.
- Always store the brake fluid in a sealed original container and put it in a safe place where is far away from children, beware of poisoning.
- Brake fluid must be replaced every 2 years. If the mileage exceeds 60,000 km even if it is less than 2 years, the brake fluid also must be replaced. Otherwise, air-resistance will occur in system when braking, this may reduce braking efficiency and driving safety, even result in brake system failure, which can easily cause an accident.

Checking Coolant Level

Checking coolant

When engine is cold, the coolant level should be between the MIN and MAX marks. If the level is at or below the MIN mark, add coolant.

Adding coolant

Step 1: When the engine is cold, open the coolant reservoir cap and add coolant until reaching MAX mark.

Step 2: Start and run the engine to a normal temperature. Observe the coolant level in the coolant reservoir all the time. If the level falls below MIN mark, add coolant to an appropriate level until the coolant level does not fall down further.

Step 3: Turn off engine and check if coolant level is correct after engine cools down. If not, repeat above operations until level is normal.

Step 4: Install the coolant reservoir cap in place.

⚠ CAUTION

- If coolant spills, be sure to wash it with water to prevent damage to parts or paint surface.
- If the coolant level drops soon after coolant is added, check the radiator, water hose, water pump, etc. for leakage. If no leakage is found, please contact Jetour authorized service station for inspection and repair.
- Only coolant recommended by Chery Commercial Vehicle Co., Ltd. can be used. Otherwise, all the direct or indirect losses incurred are at customer's own risk.

⚠ WARNING

Do not remove the engine coolant reservoir cap or radiator cap when engine becomes hot. There may be pressure inside cooling system. If the cap is removed, hot coolant may be ejected, resulting in serious injuries such as scalding.

Checking Windshield Washer

If the windshield washer does not work, the washer fluid reservoir may be empty. Please open washer fluid reservoir cap and add washer fluid.

⚠ CAUTION

- Do not use soapy water or engine antifreeze instead of washer fluid, otherwise the paint surface may be damaged.
- Never mix water with washer fluid. Water is easy to freeze, and will damage the washing system components. Using non-special washer fluid may also damage to washing system components.

Checking Radiator and Condenser

After driving for a period of time, check radiator and condenser and remove all foreign matters.

Condenser: With engine turned off and cooled down, clean the condenser by blowing compressed air from rear to front through the radiator.

Radiator: It is recommended to clean the radiator surface every year. With engine turned off and cooled down, use compressed air or water to clean the radiator fins and remove foreign matters. Air and water pressure should not exceed 150 kPa. Otherwise, the radiator fins could be damaged.

⚠ CAUTION

- Do not touch the radiator or condenser when engine becomes hot, because they are very hot and may cause serious injuries such as scalding.
- The material of radiator fins has good thermal conductivity, which is used to cool the coolant; Do not brush the fins, or it may cause damage to the fins, affecting the cooling effect.

Checking Battery

Check and make sure that the battery terminals are not corroded and that there are no loose connections, external cracks, or loose fixing clamps.

Checking Drive Belt

Drive belt will be extended after using a period of time, and the belt tension is not enough, which may damage the vehicle, so it is necessary to regularly check the belt tension.

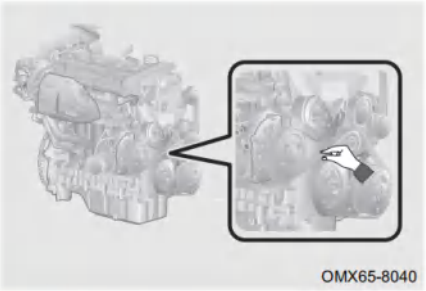
OMX65-8040

Step 1: Turn vehicle power to OFF mode;

Step 2: Twist the belt with your fingers to check the rotation angle of belt;

Step 3: If rotation angle is more than 90°, please go to Jetour authorized service station for inspection and repair.

Checking Tires

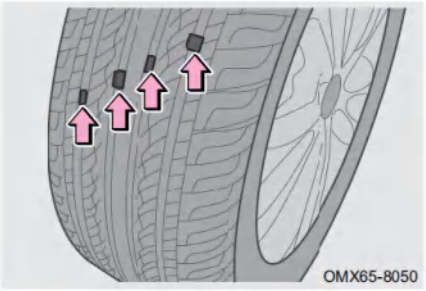
OMX65-8050

Check the tire tread by the tread wear mark. When tread wear reaches its limit, tread will be in the same plane as the wear band. If such condition occurs, it indicates that performance and safety of tire is seriously decreased, and replacement is necessary.

ENVIRONMENTAL PROTECTION

Always discard a used tire carefully. It should be handled according to the local regulations regarding to environmental protection.

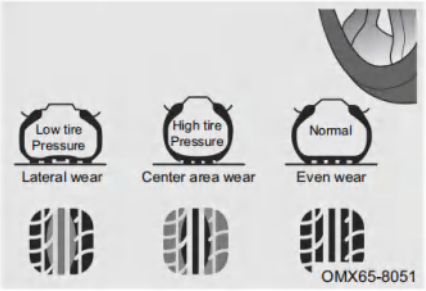

OMX65-8051

Incorrect tire inflation pressure will lead to excessive fuel consumption, shorten the tire service life and reduce the vehicle stability. Therefore, you should drive the vehicle with proper tire pressure (For provisions about the tire inflation pressure, please refer to the tire pressure label on driver side B pillar). When cold tire inflation pressure is higher than specified value or economic tire pressure is used, driving comfort will be reduced accordingly. Please adjust it according to your needs.

Observe the following precautions. Failure to do so may lead to an accident, resulting in death or serious injury:

- Do not use tires that were used on another vehicle.

- Do not mix tires with remarkably different tread wear.
- Do not use tires if you do not know how they were used previously.
- Do not mix tires from different manufacturers, of different models or tread patterns.
- Do not mix differently constructed tires (such as: radial, bias-belted or bias-ply tires).
- Speedometer is affected by tire size. If the tire size (diameter) is different from the genuine one, it will not display accurate speed, and may result in accidents, such accidents loss are not covered by the warranty.

Be sure to keep proper tire inflation pressure. Otherwise, the following conditions may occur and result in death or serious injury:

- Excessive wear.
- Poor handling.
- Uneven wear.
- Poor sealing of the tire bead.
- Wheel deformation or tire separation.
- Possibility of blowouts resulting from overheated tires.
- A greater possibility of tire damage caused by poor road conditions.

⚠ CAUTION

- It is normal that the tire inflation pressure increases after driving for a period of time.
- If the tire needs to be inflated frequently, please go to Jetour authorized service station for inspection and repair as soon as possible.
- If a tire often leaks or cannot be properly repaired due to a cut or other damages, it should be replaced.
- Use a tire pressure gauge to check cold tire inflation pressure. Visual inspection of a tire may cause inaccurate estimation on inflation pressure.
- If air leakage occurs while driving, do not continue to drive. Driving even a short distance can damage a tire beyond repair.
- Be sure to install tire valve caps properly. Otherwise, dirt could get into the valve core and cause blockage. If the caps are lost, install new ones as soon as possible.
- Make sure that the tire inflation pressure is within the specified range before driving under heavy load and at high speed. Insufficient tire inflation pressure will reduce braking stability, increase rolling resistance and accelerate tire wear, which is very likely to cause traffic accidents.

Tire Rotation

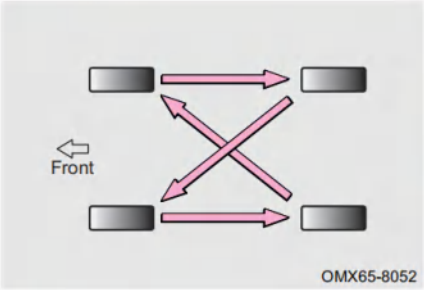

To equalize tire wear and extend tire service life, Chery recommends that four tires are rotated every 10,000 km (best adjustment range is 5,000 - 7,000 km); the tire rotation cycle may vary according to driver's driving habits and road surface conditions.

READ

Tire rotation should be performed by professionals, please contact Jetour authorized service station.

Checking Air Conditioning Filter

Air conditioning filter can prevent outside dust from entering vehicle through air conditioning outlets when driving for a long period of time, and it may be blocked after being used for a long time. If efficiency of air conditioning decreases significantly, check filter and replace it as necessary.

READ

- Inspection/replacement of air conditioning filter should be performed by professionals, please contact Jetour authorized service station.
- Using air conditioning with filter removed may result in degradation of dustproof performance, affecting efficiency of air conditioning.

Checking Wiper Blades

Check the roughness of wiper blade by sliding on its edge using your finger. If it is too rough, the wiper blade will not work effectively.

⚠ CAUTION

- Do not use the wiper blades to remove frost or ice covered on the windshield.
- If there are any chips on the windscreen from gravel, please repair quickly.
- In winter, make sure that the wipers are not frozen to the glass before operating them to avoid damaging the wiper blades.
- Butter, silicone and fuel may cause the wiper blades to operate improperly, and it is recommended to clean the wiper blades with washer fluid.
- When the blades are lifted for maintenance, the center connector position of the blades should be properly picked up, it is required to enter maintenance mode for some models (for details, please refer to "Wiper System").

Maintaining wiper blades

1. Do not use high-pressure water jet to directly wash the wiper blades while washing the vehicle, otherwise the wiper blades could be deformed.
2. In order to prevent the formation of build up that obscures view, it is recommended to clean wiper blades using glass detergent regularly once a week.
3. For safety, it is recommended to replace the wiper blades 1 to 2 times a year, the wiper blades can be purchased at Jetour authorized service station.
4. Apply pure water to rinse the windshield and blades after washing the vehicle in the automatic car washer, which can remove the remaining wax layer.
5. Do not operate wiper blades when windshield is dry. Doing so may scratch glass, resulting in permanent damage to wiper blades.
6. Do not clean the windshield with fuel, nail polish remover, paint thinner or similar liquid, which can damage the wiper blades.
7. Avoid using glass plating agent and hydrophobic agent on the front and rear windshields. The hydrophobic layer will fall off slowly after using, resulting in uneven friction of windshield and abnormal noise of wiper shaking.
8. When the windshield surface is frosted or frozen, or when dry soil, insect, sticker or other solid particles are attached to the windshield surface, clean them with a wet cloth in time. Do not use a dry cloth or remove them with wiper blades directly, otherwise it will damage the windshield and wiper blades.

Using wipers

1. Do not swing the wiper arm manually, otherwise it may damage the wiper.
2. When there is snow, leaves, branch and other objects, they should be cleaned before operating the wiper.
3. Washer fluid should be added as soon as is needed, please use the windshield washer fluid as specified in this manual, and do not use tap water instead.
4. In cold weather, always check if the wiper blades are frozen on the windshield before using. If they are frozen on the windshield, always unfreeze them before using. Use air conditioning heating and ventilation device to warm up. Do not pour hot water directly to blades, otherwise, windshield may break or wiper blades may deform.

7-3. Regular Maintenance

First Maintenance Card

Maintenance card for the first 5,000 km (within 6 months after purchasing vehicle)(for general area)	
Date	
Mileage	
Using properties	
License plate number	
Owner information	
Name	
Address	
Telephone number	
Job	
E-Mail	
Delivery date	
License plate number	
Vehicle data	
Vehicle Identification Number (VIN)	
Engine number	
Transmission number	
Options	
Authorized service station seal	
Owner signature	

Maintenance card for the first 5,000 km (within 3 months after purchasing vehicle)(for general area)				
Date				
Mileage				
Check Items	1	Check lubrication system, cooling system and fuel system for leakage.	Y☐	N☐
	2	Replace engine oil and oil filter.	Y☐	N☐
	3	Check transmission fluid level and color. Add if necessary.	Y☐	N☐
	4	Check coolant level. Add coolant or adjust concentration if necessary.	Y☐	N☐
	5	Check transmission for leakage.	Y☐	N☐
	6	Check steering tie rod boot for damage.	Y☐	N☐
	7	Check propeller shaft constant velocity universal joint boot for damage.	Y☐	N☐
	8	Check brake fluid for leakage and brake pipes for damage.	Y☐	N☐
	9	Check if brake sub cylinders work normally.	Y☐	N☐
	10	Check if tire inflation pressure is as specified.	Y☐	N☐
	11	Check belt tension of alternator and A/C compressor. Adjust tension if necessary.	Y☐	N☐
	12	Check hood hinge and tab.	Y☐	N☐
	13	Check A/C system for leakage.	Y☐	N☐
	14	Check installation condition for steering universal joint boot and check for damage.	Y☐	N☐
	15	Check if gears of transmission shift smoothly.	Y☐	N☐
	16	Check coupling bolts between chassis and vehicle body for looseness.	Y☐	N☐
	17	Check seat belts for correct operation.	Y☐	N☐
	18	Check engine working condition, electronic injection parameters and emission while idling.	Y☐	N☐
	19	Check if mechanisms function properly by testing driving.	Y☐	N☐
	20	Check and clean panoramic moon roof drain hole for foreign matter blockage.	Y☐	N☐

Maintenance Schedule

The maintenance schedule lists vehicle maintenance items that need to be carried out. Please go to Jetour authorized service station for maintenance according to mileage in maintenance schedule.

For general area, maintenance interval is 10,000 km or 6 months (whichever comes first) after first maintenance is performed.

If you vehicles always used in severe driving conditions,you should follow the maintenance requirement each 5,000 km or 6 months (whichever comes first).

For severe driving conditions*											
Maintenance Item	Months	6	12	18	24	30	36	42	48	54	60
	Km×1,000	5	10	15	20	25	30	35	40	45	50
For general driving conditions*											
Maintenance Item	Months	12	24	36	48	60	72	84	96	108	120
	Km×1,000	10	20	30	40	50	60	70	80	90	100
Water Content of Brake Fluid		I	I	I	I	I	I	I	I	I	I
Engine Oil And Oil Filter		R	R	R	R	R	R	R	R	R	R
Engine Oil Level		I	I	I	I	I	I	I	I	I	I
Automatic Transmission Fluid		Replace every 4 year or 60,000 km (whichever comes first)									
Transmission Fluid Level		I	I	I	I	I	I	I	I	I	I
Fuel Filter		External fuelfilter: Replace every 2 year or 20,000 km (whichever comes first); Internal fuel filter: The integrated fuel pump is maintenancefree type(troubleshoot the cause of failure)									
Battery Voltage		I	I	I	I	I	I	I	I	I	I
Shock Absorber		I	I	I	I	I	I	I	I	I	I
Propeller Shaft and Boot		I	I	I	I	I	I	I	I	I	I
Torque of Chassis Bolt		I	I	I	I	I	I	I	I	I	I
Steering Gear		I	I	I	I	I	I	I	I	I	I
Steering Column		I	I	I	I	I	I	I	I	I	I
Steering Link, Ball and Boot		I	I	I	I	I	I	I	I	I	I
Tire Appearance		I	I	I	I	I	I	I	I	I	I
Tire Pattern		I	I	I	I	I	I	I	I	I	I
Tire Inflation Pressure		I	I	I	I	I	I	I	I	I	I
Spare Tire Inflation Pressure		I	I	I	I	I	I	I	I	I	I
Torque of Wheel Bolt		I	I	I	I	I	I	I	I	I	I
Panoramic moon roof		I	I	I	I	I	I	I	I	I	I

For severe driving conditions*											
Maintenance Item	Months	6	12	18	24	30	36	42	48	54	60
	Km×1,000	5	10	15	20	25	30	35	40	45	50
For general driving conditions*											
Maintenance Item	Months	12	24	36	48	60	72	84	96	108	120
	Km×1,000	10	20	30	40	50	60	70	80	90	100
Tire Rotation		It is recommended to rotate your tires every 10,000 km (the optimal adjustment range is 5,000 - 7,000 km).									
Spark Plug		Inspect every 20,000 km, and replace every 30,000 km.									
Accessory Belt		Inspect every 30,000 km, and replace every 60,000 km.									
Brake Plate		I	I	I	I	I	I	I	I	I	I
Air Filter		Inspect every 5,000 - 8,000 km, and replace every 10,000 - 15,000 km.									
Drive Belt		I	I	I	I	I	I	I	I	I	I
Engine Oil Pan and Drain Bolts		I	I	I	I	I	I	I	I	I	I
Transmission Housing Body		I	I	I	I	I	I	I	I	I	I
Related Fluid Line (such as steering, brake, fuel etc.) and Wire Harness		I	I	I	I	I	I	I	I	I	I
Refueling Hose of Fuel		I	I	I	I	I	I	I	I	I	I
Fuel Vapor Rubber Pipe		I	I	I	I	I	I	I	I	I	I
Charcoal Canister Filter (If Equipped)		Replace every 3 years or 60,000 km (whichever comes first).									
Timing Chain		Maintenance-free (except for the cause of failure).									
Battery		Maintenance-free (except for the cause of failure).									
Throttle Valve		It is recommended to clean every 15,000 km.									
Four-wheel Alignment		Check four-wheel alignment every 20,000 km and adjust if necessary.									
*: We recommend that you ask your Jetour authorized service station for the actual maintenance schedule applied to your vehicle.											

READ

- The frequency of scheduled inspection and maintenance services in the table is minimal. However, it may be necessary that they be performed more frequently depending on road conditions, weather, atmospheric conditions and vehicle usage. These conditions may differ from one country to another. Therefore, there may be special requirement in your country. We recommend that you ask your Jetour authorized service station for the actual maintenance schedule applied to your vehicle.
- Continue periodic maintenance beyond 100,000 km or 60 months by returning to the third column of the maintenance schedule and adding 100,000 km or 120 months to the column headings.
- For special area, there may be special maintenance specifications. We recommend that you ask your Jetour authorized service station for the actual maintenance specifications applied to your vehicle.

⚠ CAUTION

- The engine oil and oil filter should be replaced more frequently if the vehicle drives under severe conditions mentioned in the following examples*.
- It should be checked every 5,000 km or 6 months (whichever comes first) if the vehicle drives under severe conditions mentioned in the following examples*.
- The lubricant should be replaced every 5,000 km or 6 months (whichever comes first) if the vehicle drives in the following areas.
  - High humidity areas.
  - Mountainous areas.
  - Extremely cold and hot areas.
  - Drive on rough roads (bumpy roads, gravel roads, snow, etc.) for a long time.
  - Drive on mountain roads, uphill/downhill for a long time.
  - Drive the vehicle for a short distance frequently.
  - In many cases, drive in high temperature (higher than 32℃), heavy traffic urban road.
  - When used as a police car, taxi, commercial vehicle, trailer, etc.
- The air filter and air conditioning filter should be replaced more frequently if the vehicle drives under severe conditions mentioned in the following examples*.

*Examples of severe driving conditions:

- Drive in extremely cold and hot weather (only for engine oil, engine oil level, steering and suspension system).
- Drive the vehicle for a short distance frequently (only for engine oil, engine oil level, disc brake pads and discs /front and rear axle boots and axle shaft joint portions, brake lining and drums).
- Drive on dusty roads (only for air cleaner element, disc brake pads and discs /front and rear axle boots and axle shaft joint portions, brake lining and drums, air filter element for the climate control system).
- Drive on rough and/or muddy roads (only for disc brake pads and discs /- front and rear axle boots and axle shaft joint portions, brake lining and drums, air filter element for the climate control system).
- Drive in areas where road salt or other corrosive materials are used (only for fuel system, lines and connections, disc brake pads and discs/front and rear axle boots and axle shaft joint portions, brake lining and drums,

⚠ CAUTION

inspect brake lines and check operations of parking and service brake system, steering and suspension system).

- In the coastal areas (only for fuel system, lines and connections, disc brake pads and discs /front and rear axle boots and axle shaft joint portions, brake lining and drums, inspect brake lines and check operations of parking and service brake system, steering and suspension system).

Technical Data

Type	Model	Capacity
Engine Oil (Including Filter) (SQRE4T15C)	API SM and above SM 5W-30	4.2 ± 0.2 L
Automatic Transmission (626DHA)	DCTF-GS	3.4 ± 0.1 L (specific is subject to inspection)
Cooling System	Red, Organic, -40°C	9.5 L
Brake Fluid	DOT4	820 ± 50 ml
Refrigerant	R134a	600 ± 25g

⚠ CAUTION

- Filling amount is equal to discharging amount when there is no oil leakage for automatic transmission, please go to Jetour authorized service station for details.
- Only Chery genuine parts and fluids can be used, otherwise your claim rights will be affected.
- For engine oil and transmission fluid, only use brands and specifications recommended by Jetour authorized service station.
- The above filling amount is only for reference. The specific filling amount should be based on the actual vehicle measurement.

Safety Protection System Record

If your vehicle equips airbag system, the system must be replaced 10 years from the date of vehicle purchase. The system must be replaced by Jetour authorized service station.

To make sure airbag system operates normally, please always replace the airbag system at Jetour authorized service station within the specified time.

If airbag system is replaced before the specified date (such as after an accident), please fill the replacement record for future reference.

Note: Your vehicle may not be equipped with the following safety system components.

Airbag System Replacement Record	
☐	Driver airbag
☐	Front passenger airbag
☐	Left curtain (if equipped)
☐	Right curtain (if equipped)
☐	Left seat airbag (if equipped)
☐	Right seat airbag (if equipped)
☐	Airbag control module
☐	Airbag harness
☐	Pre-tensioner seat belt (if equipped)
☐	Other components
1	
2	
3	
4	
Date	
Signature of dealer of sales & service:	

Airbag System Replacement Record	
☐	Driver airbag
☐	Front passenger airbag
☐	Left curtain (if equipped)
☐	Right curtain (if equipped)
☐	Left seat airbag (if equipped)
☐	Right seat airbag (if equipped)
☐	Airbag control module
☐	Airbag harness
☐	Pre-tensioner seat belt (if equipped)
☐	Other components
1	
2	
3	
4	
Date	
Signature of dealer of sales & service:	

SPECIFICATION

8-1. Label Location

Vehicle Identification Number (VIN) 192

Manufacturer Name Plate 192

Engine Number..... 193

Microwave Window 193

8-2. Vehicle Specifications

Vehicle Dimensions 194

Vehicle Type..... 195

Vehicle Performance 195

Fuel System 196

Vehicle Weight..... 197

Engine..... 198

Transmission..... 199

Wheel Alignment..... 199

Wheel and Tire 200

Brake System..... 201

Suspension System..... 201

Steering System 201

Battery..... 201

Measurement Range of Vehicle Overall Size Excluding Following Components..... 201

8-1. Label Location

Vehicle Identification Number (VIN)

Vehicle Identification Number (VIN) on actual vehicle

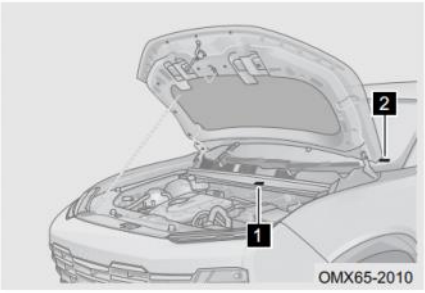

1 Vehicle identification number is engraved on lower of engine compartment drip channel garnish.

2 Vehicle identification number is located on upper left of driver side instrument panel, and can be seen from the outside through the windshield.

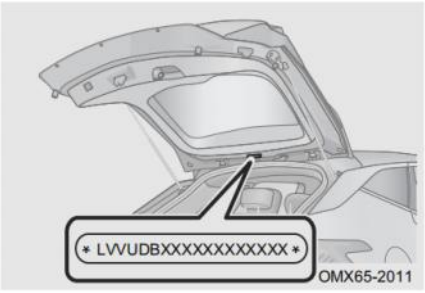

Vehicle identification number label is located on back door as shown in the illustration.

> ⚠ CAUTION
>
> It is forbidden to cover, paint, weld, cut, drill or remove vehicle identification number and areas around it.

Manufacturer Name Plate

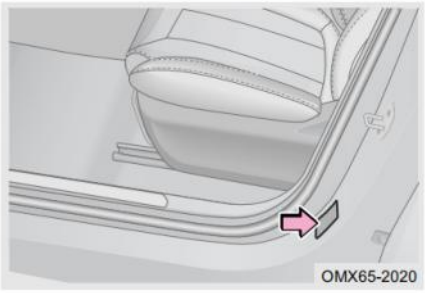

As shown in the figure, the manufacturer name plate is located on right quarter outer panel.

Vehicle model and vehicle identification number are marked on manufacturer name plate.

Engine Number

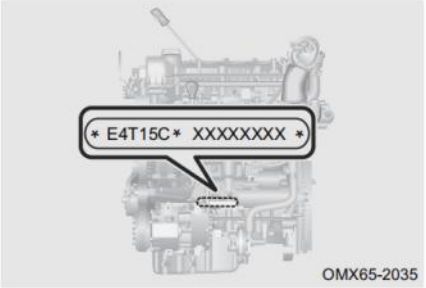

OMX65-2035

Engine number is located on engine block.

Microwave Window

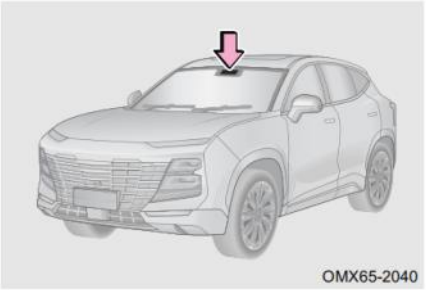
OMX65-2040

The microwave window is located on the inner side of the front windshield and at the right side to the back of the inside rear view mirror, where is for wireless RF signal transmission and installation of automotive electronic identification.

8-2. Vehicle Specifications

Vehicle Dimensions

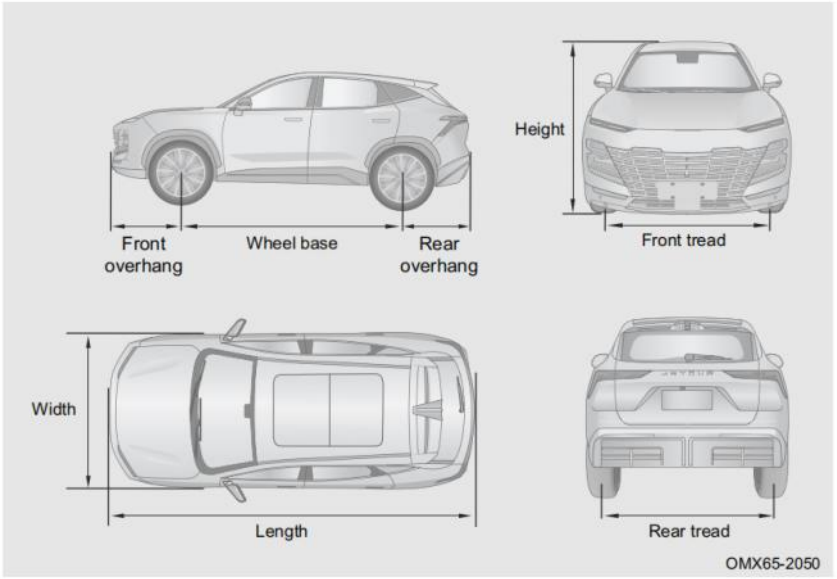

Overall Size	Length (mm)	4590
	Width (mm)	1900
	Height (mm)	1685
Wheel Base (mm)		2720
Tread	Front (mm)	1610
	Rear (mm)	1615
Overhang	Front (mm)	948
	Rear (mm)	922

Vehicle Type

Vehicle Type	4 × 2 front-wheel drive, front-wheel steering, transverse front-engine, two-compartment, five-door, five-seat, integral body,right-hand drive
Engine Model	SQRE4T15C
Engine Type	Vertical, 4-cylinder in-line, water-cooled, 4-stroke, double overhead camshaft, turbocharging, intercooler
Fuel Supply Type	Multiport sequential electronic injection
Transmission Model	626DHA

Vehicle Performance

Passing Performance	Minimum Ground Clearance (mm)	160
	Minimum Turning Diameter (m)	12
	Approach Angle (°) (Unladen)	20
	Departure Angle (°) (Unladen)	26
Power Performance	Maximum Vehicle Speed (km/h)	180
	Maximum Gradeability (%)	43.6

Fuel System

Fuel system parameters are shown in following table.

Engine Model	SQRE4T15C
Fuel Type*1	Unleaded gasoline with an octane number of 91 or higher
	Unleaded gasoline with an octane number of 92 or higher
	Unleaded gasoline with an octane number of 95 or higher (unleaded super gasoline)
	E22-E100
Fuel Tank Type	Plastic fuel tank
Fuel Tank Total Capacity	57 L
Fuel Pump	Electric fuel pump

*1: Please use the fuel recommended by Jetour authorized dealers.

READ

Vehicle with catalytic converters can only use unleaded gasoline. In order to avoid the accident of filling wrong fuel type, the fuel filler pipe adopts a neck-type fuel filler port design, and only the standard unleaded gasoline fuel gun can be used for fueling operation.

⚠ CAUTION

- Only use fuel type recommended by Jetour.
- The use of off-specification gasoline may cause damage to the engine and such damage is not covered under warranty.
- Using leaded gasoline will cause three-way catalytic converter to lose its effectiveness and emission control system to function improperly.
- If you accidentally fill leaded gasoline to the oil tank and start the engine (-even if only a small amount is filled), it will cause permanent damage to the catalytic converter. Therefore, if you accidentally fill leaded gasoline, please go to Jetour authorized service station for inspection and repair immediately.

Vehicle Weight

Items		Parameters		
Curb Weight (kg)		1513	1541	1553
Curb Axle Weight	Front Axle (kg)	862	883	889
	Rear Axle (kg)	651	658	664
Weight Under Driving State (kg)		1888	1916	1928
Weight Axial Load Distribution Under Driving State	Front Axle (kg)	969	990	996
	Rear Axle (kg)	919	926	932
Number of Passengers		5		

⚠ WARNING

Please follow the vehicle load specified in the instruction manual and do not exceed the allowable total weight. Otherwise, the brake and handling performance of the vehicle may change and could cause an personal injury and accident.

Engine

Engine Model	SQRE4T15C
Engine Type	Vertical, 4-cylinder in-line water-cooled, turbocharging, multiport sequential electronic injection, double overhead camshaft
Cylinder Bore Diameter (mm)	77
Piston Stroke (mm)	80.5
Displacement (mL)	1498
Compression Ratio	9.5 : 1
Rated Power (kw)	115
Rated Power Speed (r/min)	5500
Maximum Torque (N·m)	230
Maximum Torque Speed (r/min)	1750 - 4000

Transmission

Transmission Model		626DHA
Type		6 gears, AT
Gear Position	1st Gear	4.538
	2nd Gear	2.350
	3rd Gear	1.302
	4th Gear	1.021
	5th Gear	0.907
	6th Gear	0.702
	R Gear	3.661
	Final Reduction Gear Ratio	1st/2nd/5th/6th gear: 4.158 3rd/4th/R gear: 4.648

Wheel Alignment

Front Wheel	Front Wheel Camber	-25′ ± 45′
	Kingpin Caster Angle	4°30′ ± 60′
	Kingpin Inclination Angle	11°30′ ± 60′
	Front Wheel Toe-in	left:3′ ±3′ right:7′ ±3′
Rear Wheel	Rear Wheel Camber	-42′ ± 30′
	Rear Wheel Toe-in	6′ ± 10′

Wheel and Tire

Tire Model		235/60R18; 235/55R19
Rim Model		18×7J; 19×7 1/2J
Cold Tire Inflation Pressure (kPa)	Front Wheel	230 (Unladen) 250 (Laden)
	Rear Wheel	230 (Unladen) 250 (Laden)
	Spare Tire	420
Tightening Torque of Wheel Bolts		130 ± 10 N·m
Wheel Dynamic Balance Requirements		Allowable residual dynamic balance mass: Clamp balance block side ⩽ 8 g, paste balance block side ⩽ 10 g

READ

The tire inflation pressures listed in the table above apply only to cold tires. The pressure increases slightly when the tire is heated, but it is unnecessary to lower the pressure.

⚠ CAUTION

- Tire pressure should be checked at least once a month and is particularly important if driving at high speeds.
- In order to facilitate you to find the specified value for inflation pressure, there is tire pressure label on the driver doorsill, which is marked with the specified value for cold tire inflation pressure.

Brake System

Foot Brake	Front Wheel	Disc brake
	Rear Wheel	Disc brake
Brake Booster		Vacuum booster
Parking Brake		Electric parking brake for rear wheel
Brake Pedal Free Play		5.6 - 12 mm
Max Brake Pedal Play		118.8 mm
Reasonable Range of Use for Brake Friction Material		Thickness of front friction material: 11.6 mm Thickness of rear friction material: 10.1 mm Valid thickness of front friction material: 9.6 mm Valid thickness of rear friction material: 8.1 mm

⚠ WARNING

- In the case of heavy load, the brake fluid should be replaced at the same time as the replacement of brake pads.
- When adding brake fluid, make sure it is absolutely clean. If any dirt gets into the brake system, it may result in loss of braking performance.

Suspension System

Front Suspension	Macpherson type independent suspension
Rear Suspension	Multi-link type independent suspension

Steering System

Power Steering Type	Electric boost
Steering Gear Type	Rack & pinion steering gear

Battery

Battery Model	12 V, 60 Ah

Measurement Range of Vehicle Overall Size Excluding Following Components

Components not included in vehicle length measurement range

The following devices do not have laden function and do not exceed the front or rear end of the vehicle by more than 50 mm, and fillet radius of edge and corner is no less than 5mm:

— Wiper and washer

— Outer identification, including registered trademark, manufacturer name, origin, model name and type, engine emission, transmission type, drive mode and other distinguishing identification of the vehicle

— Lights and light signal device

— Anti-collision rubber block and equivalent

— External sunshade device

— Customs sealing device and its protective device

— Device used to fixed raincloth and its protective device

— Locking device, hinge, handle, controller, switch

— Step plate (or ladder), vehicle climbing step plate on top of bumper used for cleaning windows

— Rear emblem plate with LOGO

— Removable trailer or towing device

— Exhaust tail pipe

Components not included in vehicle width size:

— Indirect view device

— School bus stop plate in inoperative state

The following devices do not have laden function and their one side size exceeds the side of vehicle for no more than 50mm, and fillet radius of edge and corner is no less than 5mm:

— Outer identification, including registered trademark, manufacturer name, origin, model name and type, engine emission, transmission type, drive mode and other distinguishing identification of the vehicle

— Lights and light signal device

— Anti-collision rubber block and equivalent

— Customs sealing device and its protective device

— Device used to fixed raincloth and its protective device

— Local water drain slot: Refers to the water drain slot used to guide rain flow above driver door (or window) and passenger door, both sides of front windshield

— Flexible protruding part of splash proof system

— Retractable step plate, entering/exiting slope of bus, lifting platform and equivalent that is in the retract state

— Locking device, hinge, handle, controller, switch

— Tire failure signal device

— Tire pressure indicator

— Deformed part of tire wall directly above contact point between tire and ground

— Reversing assistance device

— Exhaust tail pipe

Components not included in vehicle height measurement range:

Soft part of antenna

Device without laden function:

— Intake duct

— Indirect view device

— Current collecting device of electric vehicle (including its fixing device)

— Vehicle rear removable or foldable air deflector, with the deployed length no more than 2000 mm and folded length no more than 200 mm

— Tailboard, entering/exiting slope and equivalent with a horizontal length no more than 300 mm in retract state

— Tail ladder

A

Adaptive Engine Control System 111
Adjusting Steering Wheel 35
After Starting Engine 15
Air Conditioning System 89
Airbag Position 129
Anti-lock Brake System (ABS) ... 124
Automatic Parking System (AUTO HOLD) 120
Automatic Transmission 113

B

Back Door Emergency Opening . 103
Before Starting Engine 14
Blind Spot Detection System (BSD) (Independent Control) (If Equipped) 142
Brake System 201

C

Check the Exhaust System 17
Checking Air Conditioning Filter . 178
Checking Battery 175
Checking Brake Fluid Level 173
Checking Coolant Level 174
Checking Fuse 167
Checking Oil Level 171
Checking Radiator and Condenser 175
Checking Tires 176
Checking Windshield Washer 174
Checking Wiper Blades 178
Child Lock 75
Child Restraint System 56
Correct Sitting Posture 47
Cruise Control System (CCS) (If Equipped) 140

D

Delivery Inspection Certificate 11
Door Lock Switch 72
Door Mechanical Switch 73
Door Open Warning System (DOW) (If Equipped) 144
Driving on Road Covered with Ice and Snow 21
Driving Through Water 19

E

Effective Range 68
Electric Parking Brake (EPB) System 118
Electric Power Steering System (EPS) 117
Electronic Stability Program (ESP) System 126
Emergency Towing Vehicle 164
Engine 198
Engine Number 193
ENGINE START STOP Switch ... 108
Extended Function 127
Exterior Lighting 43

F

First Maintenance Card 181
Fogging Instructions for Light 46
Foot Brake 122
Front 98
Front Seat 49
Fuel System 196
Function Definition 90
Fuse Box 166

H

Hazard Light 154
Head Restraint 48
Hill Descent Control (HDC) System (If Equipped) 142
Horn 34
How to Read This Manual 2
How to Save Fuel and Extend Life of Vehicle 13

I

If Battery is Depleted 160

If Engine Coolant Temperature is High 159
If You Have a Flat Tire While Driving 155
If Your Vehicle Cannot Start Normally 162
Immobilizer System 71
Index 2
Inside Rear View Mirror 36
Installation of Child Restraint System (ISOFIX) 59
Installing Towing Eyelet 165
Instrument Cluster Overview 24
Interior Lighting 45
Introduction of Airbag (SRS) 129

J

Jetour authorized service station provides service for you 170
Jetour Delivery Card 5

K

Keyless Entry 68

M

Maintenance Schedule 183
Manufacturer Name Plate 192
Measurement Range of Vehicle Overall Size Excluding Following Components 201
Microwave Window 193
Multimedia View 83

N

New Vehicle Break-in 12
New Vehicle Inspection 11
Normal Maintenance 170

O

Off-road Driving 18
Opening/Closing Fuel Tank Cap 104
Opening/Closing Hood 100
Opening/Closing Moon Roof 79
Opening/Closing Sunshade 80
Operation/Malfunction Indicator ... 30
Outside Rear View Mirror 37

P

Panoramic View Monitor System (If Equipped) 148
Parking on Slope 16
Parking Operations 15
Parking Radar System 151
Parking View Monitor System 146
Particulate Filter 112
Pedal 118
"Person-to-Person" Consultative Service Card 7
Phone-link (If Equipped) 87
Pictorial Index 2
Power Back Door (If Equipped) .. 101
Power Outlet 98

R

Rear 99
Rear Cross Traffic Alert System (If Equipped) 144
Reflective Vest 154
Refrigeration Function of Armrest Box on Auxiliary Fascia Console 93
Remote Start/Stop 67
Repair and Maintenance 170
Replacing Fuse 167
Replacing Smart Key Battery 65
Replacing Wiper Blade 41

S

Safety Check 14
Safety Protection System Record 188
Seat Belt 51
Seat Belt Pretensioner 55
Second Row Seat 50

Shift Paddle (If Equipped) 116
Smart Key 64
Spare Tools 155
Starting and Turning off Engine .. 108
Starting Engine 109
Steering System 201
Steering Wheel Buttons (If Equipped) 34
Storage Space 95
Sun Visors and Vanity Mirrors 99
Suspension System 201
Symbols in the Manual 3

T

Table of Contents 2
Technical Data 188
Tire Chains 21
Tire Pressure Monitoring System (TPMS) 145
Tire Rotation 178
Towing Vehicle 163
Transmission 199
Turning Off Vehicle 111

U

Unlocking Doors with Inside Handle 73
User Registration Certificate 4
Using Airbag Correctly 130

V

Vehicle Arming 70
Vehicle Dimensions 194
Vehicle Identification Number (VIN) 192
Vehicle Locating Mode 67
Vehicle Performance 195
Vehicle Type 195
Vehicle Weight 197

W

Warning Triangle 154
Welcome Function 69
Wheel Alignment 199
Wheel and Tire 200
When Driving 15
When Driving on Slippery Road Surfaces 18
Window Jam Protection Function . 77
Window Remote Control Function 77
Window Setting 76
Winter Driving Tips 20
Wiper Operation 39
Wireless Charging 93