Thank you very much for purchasing a new Jetour vehicle.

To know how to correctly operate and maintain your vehicle, please take the time to read this manual carefully.

After you read this manual, please leave it in the vehicle for future reference. Please leave this manual in the vehicle at the same time of resale, as the new owner will also need to read the information in it.

All the information and specifications in this manual are current at the time of printing. Chery Commercial Vehicle Co., Ltd. reserves the right to make changes in design and specifications at any time without notice.

Jetour service station is exclusively authorized by Chery Commercial Vehicle Co., Ltd. and will provide you with professional high-quality services. Remember that Jetour service station knows your vehicle best and has factory trained technicians and OEM parts which will guarantee your satisfaction. Do not use non-OEM parts or accessories to modify your vehicle. Modifying vehicle will affect the vehicle maneuverability, safety or durability.

Depending on specification of equipment and features of your vehicle, some descriptions and illustrations may differ from that on your vehicle.

All data, descriptions and illustrations provided in this manual cannot serve as the basis for lodging a claim.

All rights reserved. This document should not be reproduced or copied, in whole or in part, without the written permission of Chery Commercial Vehicle Co., Ltd.

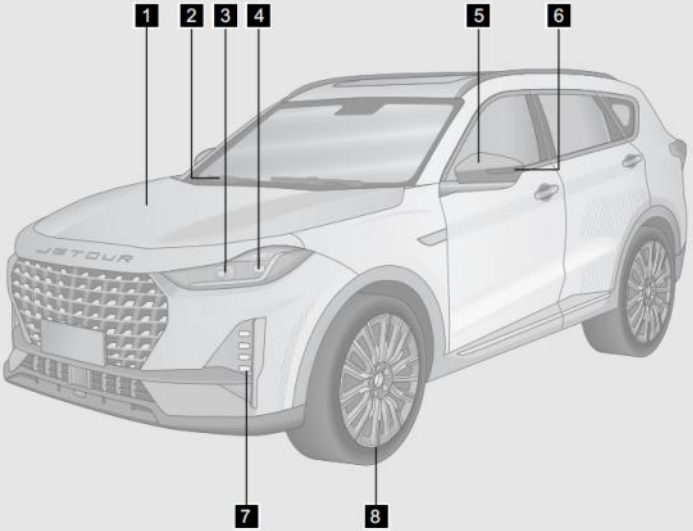

1 Hood P.99
2 Front Wiper Blade P.37
3 Turn Signal Light P.39
Position Light P.38
4 Low Beam Light/High Beam Light P.38
5 Outside Rear View Mirror P.34
6 Side Turn Signal Light P.39
7 Daytime Running Light P.40
8 Tire P.174

Note: For all configuration, please refer to the actual vehicle.

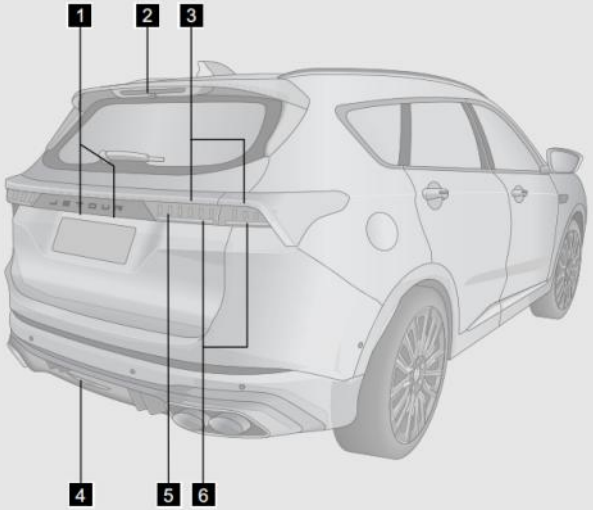

1 License Plate Light P.38
2 High Mounted Brake Light P.40
3 Position Light P.38
Brake Light P.40
4 Rear Fog Light P.40
5 Back-up Light P.40
6 Turn Signal Light P.39

Note: For all configuration, please refer to the actual vehicle.

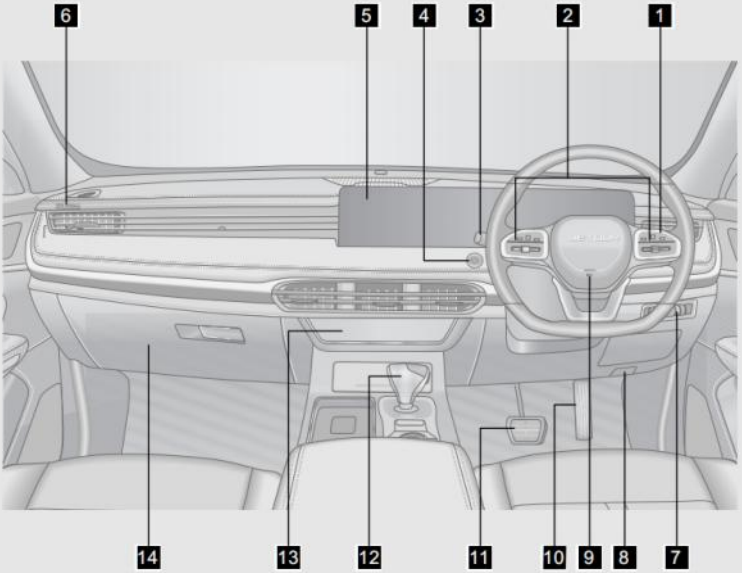

1 Headlight Combination Switch P.38
2 Steering Wheel Buttons P.31
3 Wiper Combination Switch..... P.35
4 ENGINE START STOP Switch..... P.106
5 Dual Display (Instrument Cluster) P.22
Dual Display (Audio System) P.80
6 Front Passenger Frontal Airbag..... P.126
7 Light Leveling Switch P.40
Power Back Door Switch..... P.100
8 Hood Release Lever..... P.99
9 Driver Frontal Airbag P.126
10 Accelerator pedal
11 Brake pedal
12 Shift Lever P.111
13 Air Conditioning Panel P.85
14 Glove Box..... P.94

Note: For all configuration, please refer to the actual vehicle.

1. INTRODUCTION

1-1. How to Read This Manual

How to Read This Manual....2
Table of Contents 2
Pictorial Index.....2
Index 2

1-2. Symbols in the Manual

Symbols in the Manual 2

1-3. "Face to face" Consultative Service Card

"Face to face" Consultative Service Card.....3

1-4. New Vehicle Inspection

New Vehicle Inspection 7
Delivery Inspection Certificate.....7

1-5. New Vehicle Break-in

New Vehicle Break-in.....8

1-6. How to Save Fuel and Extend Life of Vehicle

How to Save Fuel and Extend Life of Vehicle.....9

1-7. Precautions Before Driving Vehicle

Safety Check 10
Before Starting Engine 10
After Starting Engine..... 11
When Driving..... 11
Parking Operations..... 11
Parking on Slope..... 12
Check the Exhaust System 13

1-8. Off-road Driving Precautions

Off-road Driving..... 14

1-9. Precautions When Driving in the Rain

When Driving on Slippery Road Surfaces..... 15
Never Drive Through Flooded Water 15

1-10. Winter Driving Precautions

Winter Driving Tips 16
Driving on Road Covered with Ice and Snow..... 17
Tire Chains..... 17

1-11. Cybersecurity Notice

Cybersecurity Support Service Update or Termination Notice..... 18
Cybersecurity Notice for Scrapping or Resale 19

2. PREPARATION FOR DRIVING

2-1. Instrument Cluster

Instrument Cluster Overview..... 22
Conventional Display Interface 24
Driving Information Interface 25
Setting Interface..... 25
Operation/Malfunction Indicator..... 27

2-2. Steering Wheel

Horn..... 31
Steering Wheel Buttons..... 31
Adjusting Steering Wheel..... 32

2-3. Rear View Mirror

Inside Rear View Mirror..... 33

Outside Rear View Mirror..... 34

2-4. Wiper System

Wiper Operation..... 35
Replacing Wiper Blade..... 37

2-5. Lighting System

Exterior Lighting..... 38
Interior Lighting..... 41
Follow Me Home Function..... 41
Intelligent High Beam Assist (If Equipped)..... 42
Fogging Instructions for Light..... 42

2-6. Seat

Correct Sitting Posture..... 43
Head Restraint..... 44
Front Seat..... 45
Second Row Seat..... 46
Third Row Seat..... 48

2-7. Seat Belt

Seat Belt..... 48
Seat Belt Pretensioner (If Equipped)..... 53

2-8. Child Restraint System

Safety Instructions for Using Child Restraint System..... 54
Installing Child Restraint System..... 57
Front Passenger Airbag Label..... 62
Recommended Child Restraint System..... 62

3. INTERIOR FUNCTION

3-1. Key Information

Smart Key..... 66
Effective Range..... 69
Keyless Entry..... 70
Polling Function (If Equipped)..... 70
Vehicle Arming..... 71
Immobilizer System..... 72

3-2. Doors

Door Lock Switch..... 73
Unlocking Doors with Inside Handle..... 73
Door Mechanical Switch..... 73
Child Lock..... 74

3-3. Windows

Power Windows..... 75
Window Remote Control Function..... 76
Window Jam Protection Function..... 77

3-4. Panoramic Moon Roof

Panoramic Moon Roof..... 79
Moon Roof Jam Protection Function..... 80

3-5. Audio System

Audio View..... 80
Shortcut Menu..... 82
System Setting..... 82
Vehicle Control..... 82
Voice Assistant..... 83
Phone-link (If Equipped)..... 84

3-6. Air Conditioning System

Electric A/C..... 85
Air Conditioning Operation..... 87
Air Conditioning Cooling Operation..... 90
Air Conditioning Heating Operation..... 92
Air Outlets Airflow Control..... 92

3-7. Wireless Charging

Wireless Charging (If Equipped)..... 93

3-8. Storage Space

Storage Space 94

3-9. Power Outlet and USB Port

Power Outlet 97
USB Port 97

3-10. Sun Visors and Vanity Mirrors

3-11. Hood

Opening/Closing Hood 99

3-12. Back Door

Power Back Door (If Equipped) 99
Back Door Emergency Opening 103

3-13. Fuel Tank Cap

4. DRIVING VEHICLE

4-1. Vehicle Power Mode

ENGINE START STOP Switch 106

4-2. Starting and Turning off Engine

Normal Starting and Turning Off 107
Starting and Turning off in Emergency 108
Adaptive Engine Control System 109
limphome function 109

4-3. Gasoline Particulate Filter (GPF)

Gasoline Particulate Filter (GPF) (If Equipped) 110

4-4. Transmission

Automatic Transmission 110

4-5. Steering System

Electric Power Steering System (EPS) 113

4-6. Brake System

Electric Parking Brake System (EPB) 114
Automatic Parking System (AUTO HOLD) 116
Vacuum Booster 118
Foot Brake 118

4-7. Anti-lock Brake System (ABS)

Anti-lock Brake System (ABS) 120

4-8. Vehicle Body Dynamic Electronic Stability Program System

Vehicle Body Dynamic Electronic Stability Program System 122
Extended Function 124

4-9. Airbag (SRS)

Airbag (SRS) 125

5. ASSIST DRIVING

5-1. Cruise System

Cruise Control System (CCS) (If Equipped) 134

5-2. Hill Descent Control (HDC) System

Hill Descent Control (HDC) System 136

5-3. Blind Spot Detection (BSD) System

Blind Spot Detection (BSD) System (If Equipped) 136

Rear Cross Traffic Alert (RCTA) System (If Equipped) 138
Door Open Warning (DOW) System (If Equipped) 138
Rear Collision Warning (RCW) System(If Equipped) 139

5-4. Tire Pressure Monitoring System (TPMS)

Tire Pressure Monitoring System (TPMS) 139

5-5. Parking Assist System

Parking View Monitor System (If Equipped) 141
Panoramic View Monitor System (If Equipped) 143
Parking Radar System 146

6. IN CASE OF AN EMERGENCY

6-1. Basic Knowledge of Vehicle Emergency

Emergency Contact and Road Rescue (If Equipped) 150
Hazard Light 150
Reflective Vest 151
Warning Triangle 151
Spare Tools 152

6-2. Vehicle Emergency Handling

If You Have a Flat Tire While Driving 152
If Engine Coolant Temperature is High..... 157
If Battery is Depleted..... 158
If Your Vehicle Cannot Start Normally 160

6-3. Towing

Towing Vehicle 161
Emergency Towing Vehicle..... 162
Installing Towing Eyelet ... 163

6-4. Fuse

Fuse Box 163
Checking Fuse..... 164
Replacing Fuse 165

7. MAINTENANCE

7-1. Repair and Maintenance

Repair and Maintenance..... 168
Jetour Authorized Service Station Provides Service for You 168

7-2. Normal Maintenance

Normal Maintenance..... 168
Checking Oil Level..... 169
Checking Transmission Fluid Level..... 171
Checking Brake Fluid Level 171
Checking Coolant Level 172
Checking Radiator and Condenser 173
Check Drive Belt 173
Checking Tires..... 174
Tire Rotation..... 175
Check Battery..... 176
Checking Air Conditioning Filter 176
Checking Windshield Washer Fluid 176
Checking Wiper Blades ... 177

7-3. Regular Maintenance

First Maintenance Card ... 178
Maintenance Schedule.... 180

Safety Protection System Record 185

8. SPECIFICATION

8-1. Label Location

Vehicle Identification Number (VIN) 188
Vehicle Product Label 189
Engine Number 189
Microwave Window 189

8-2. Vehicle Specifications

Vehicle Dimensions 190
Vehicle Type 191
Vehicle Weight 191
Vehicle Performance 192
Fuel System 192
Engine 193
Transmission 194
Suspension System 194
Steering System 194
Brake System 194
Wheel Alignment 195
Wheel and Tire 195
Fluid Capacity and Specification 196
Battery 196
Measurement Range of Vehicle Overall Size Excluding Following Components 197

ALPHABETICAL INDEX

INTRODUCTION

1-1. How to Read This Manual

How to Read This Manual 2

Table of Contents 2

Pictorial Index.....2

Index.....2

1-2. Symbols in the Manual

Symbols in the Manual.....2

1-3. "Face to face" Consultative Service Card

"Face to face" Consultative Service Card 3

1-4. New Vehicle Inspection

New Vehicle Inspection 7

Delivery Inspection Certificate 7

1-5. New Vehicle Break-in

New Vehicle Break-in.....8

1-6. How to Save Fuel and Extend Life of Vehicle

How to Save Fuel and Extend Life of Vehicle 9

1-7. Precautions Before Driving Vehicle

Safety Check.....10

Before Starting Engine.....10

After Starting Engine..... 11

When Driving..... 11

Parking Operations..... 11

Parking on Slope..... 12

Check the Exhaust System 13

1-8. Off-road Driving Precautions

Off-road Driving 14

1-9. Precautions When Driving in the Rain

When Driving on Slippery Road Surfaces..... 15

Never Drive Through Flooded Water 15

1-10. Winter Driving Precautions

Winter Driving Tips 16

Driving on Road Covered with Ice and Snow 17

Tire Chains..... 17

1-11. Cybersecurity Notice

Cybersecurity Support Service Update or Termination Notice 18

Cybersecurity Notice for Scrapping or Resale 19

1-1. How to Read This Manual

How to Read This Manual

There are three ways for you to find the information you need in this manual. Here is a brief introduction of each one.

Table of Contents

The main Table of Contents will tell you which chapter of the Owner's Manual contains the information you need and what page to find it on.

Pictorial Index

The Pictorial Index is a helpful tool to find the required information quickly, especially if you are not familiar with the component name.

Index

This is the fastest method for you to find the information you need. The index contains a complete listing of all the important vehicle terminologies.

1-2. Symbols in the Manual

Symbols in the Manual

The following symbols are used in this manual to draw your attention to particularly important information. In order to minimize the risks as much as possible, please read the instructions on these symbols carefully before driving, and make sure to follow them.

⚠ WARNING
Indicates a potentially hazardous situation which, if not avoided, may result in damage to your vehicle, personal injury or even death.

⚠ CAUTION
Indicates something that, if not obeyed, could cause damage to or a malfunction in the vehicle or its equipment.

ENVIRONMENTAL PROTECTION
Indicates that the waste must be handled or disposed according to the local environmental protection regulations, otherwise, the environment will be contaminated.

READ
Indicates that the relevant chapter in this manual must be read before any operation.

WARNING and CAUTION relating to personal safety and vehicle safety in this manual are very important. Make sure everyone in the vehicle follows these instructions carefully in order to both enjoy your driving experience and to keep your vehicle in optimum condition.

1-3. "Face to face" Consultative Service Card

"Face to face" Consultative Service Card

Authorized service station will provide a dedicated service consultant when you purchase your vehicle. If you have any questions concerning your vehicle, please consult the consultant.

Sheet One (for User)

Name of User:	Date of Purchase:
Sales & Servicing Department:	Model:
Vehicle Identification Number (VIN):	
The following items should be confirmed by the user:	
1. Vehicle Delivery and Inspection (Mark a " √ " for " Yes " and a " × " for Other Conditions):	
□	Have introduced the basic operation of the vehicle to the user and performed the delivery inspection.
□	Have explained the warranty policies to the user.
□	Have explained the precautions of driving to the user.
□	Have explained the importance of regular maintenance and the recommended interval time/mileage for regular maintenance to the user.
□	Have explained to the user the importance of having regular maintenance or vehicle repairs done at authorized service station.
□	Have delivered the Owner's Manual to the users and reminded them to read it.
□	Have informed the user about the service hotline function and how to use it.
2. "Face to face" Consultative Service Mode Introduction (Mark a " √ " for " Yes " and a " × " for Other Conditions):	
□	If you have any questions or concerns, ask your service consultant.

☐	The service consultant is the only person authorized by the service station to answer the user's questions.
☐	Have assigned a dedicated service consultant to each user for "Person to- Person" service.
☐	If the user is not fully satisfied with the service consultant, the user can request another service consultant.
The following items should be confirmed by the user:	
3. Main Work Introduction on Service Consultant (Mark a " √ " for " Yes " and a " × " for Other Conditions):	
☐	Service reception during service and maintenance.
☐	Regular maintenance reminders.
☐	Answer the service/maintenance consultation.
☐	Service/maintenance booking.
☐	Annual inspection reminders.
☐	Regular check up and service reminders and holiday greetings.
☐	Other concerns from the user.
4. "Face to face" Consultative Service Relationship Establishment:	
Service consultant business card	
Signature of User/Date:	
Signature of Service Consultant/Date:	

Sheet Two (for Sales & Servicing Department)

Name of User:	Date of Purchase:
Sales & Servicing Department:	Model:
Vehicle Identification Number (VIN):	
The following items should be confirmed by the user:	
1. Vehicle Delivery and Inspection (Mark a " √ " for " Yes " and a " × " for Other Conditions):	
☐	Have introduced the basic operation of the vehicle to the user and performed the delivery inspection.
☐	Have explained the warranty policies to the user.
☐	Have explained the precautions of driving to the user.
☐	Have explained the importance of regular maintenance and the recommended interval time/mileage for regular maintenance to the user.
☐	Have explained to the user the importance of having regular maintenance or vehicle repairs done at authorized service station.
☐	Have delivered the Owner's Manual to the users and reminded them to read it.
☐	Have informed the user about the service hotline function and how to use it.
2. "Face to face" Consultative Service Mode Introduction (Mark a " √ " for " Yes " and a " × " for Other Conditions):	
☐	If you have any questions or concerns, ask your service consultant.
☐	The service consultant is the only person authorized by the service station to answer the user's questions.
☐	Have assigned a dedicated service consultant to each user for "face to face" service.
☐	If the user is not fully satisfied with the service consultant, the user can request another service consultant.
The following items should be confirmed by the user:	
3. Main Work Introduction on Service Consultant (Mark a " √ " for " Yes " and a " × " for Other Conditions):	
☐	Service reception during service and maintenance.
☐	Regular maintenance reminders.
☐	Answer the service/maintenance consultation.
☐	Service/maintenance booking.

☐	Annual inspection reminders.
☐	Regular check up and service reminders and holiday greetings.
☐	Other concerns from the user.
4. "Face to face" Consultative Service Relationship Establishment:	
Service consultant business card	
Signature of User/Date:	
Signature of Service Consultant/Date:	

1-4. New Vehicle Inspection

New Vehicle Inspection

Before delivering the vehicle to you, the Sales & Servicing department of your service station has inspected it according to regulations. The Sales & Servicing department of Auto should fill the delivery date in the inspection certificate and affix the official seal of service station.

The service station will familiarize you with your vehicle and verify it via the "-Delivery Card" which will be signed by both parties.

Delivery Inspection Certificate

In witness whereof, this vehicle has passed delivery inspection as regulated. and quality meets technical specification.

Vehicle Model	
Vehicle Identification Number (VIN)	
Engine Number or Transmission Number	
Vehicle Registration Number	
Official Seal of Sales & Servicing Department:	
Signature of Servicer:	
Delivery Date	
User	
Address	
E-mail	
Telephone	
Have provided and explained the following items for me: • VEHICLE • OWNER'S MANUAL • PRE-DELIVERY INSPECTION	
Signature of User:	
Signature of Servicer:	

1-5. New Vehicle Break-in

New Vehicle Break-in

Frictional resistance between the moving parts of a new vehicle is much more likely in the initial use of the vehicle than later on. Therefore, the initial use can have a greater impact on the vehicle's lifespan, operational reliability and economy. We advise that the use of a new vehicle must strictly follow the following guidelines and that the break-in period would be on average the first 3000 km driven.

■ Driving regulations of new vehicle break-in period

Within the first 1,000 km:

- Avoid driving at full speed;
- Driving speed should not exceed 100 km/h;
- Avoid driving at maximum speed in each gear.

Within the first 1,000 - 1,500 km:

- Driving speed can be gradually increased to the highest speed;
- Engine speed can be gradually increased to the maximum allowable speed.

■ Driving recommendations after break-in period

- When driving a vehicle, the maximum speed which engine allows to run in short time is 6,000 r/min. When shifting manually, shift to nearby high gear while the tachometer pointer reaches the red indicator zone.
- Engine speed should not be too low while driving, so it will be necessary to shift to the appropriate gear. Do not run the engine at maximum speed in neutral or other gears if the engine is cold.

■ Tire and wheel break-in recommendations:

When starting to use new tires, the best adhesion is not available. Therefore, new tires also need break-in, so the vehicle should be driven slowly and especially carefully within the first 100 km of driving.

■ Braking system break-in recommendations:

New brake lining also needs break-in. Because the brakes cannot provide the ideal brake friction during the first 200 km. If the braking efficiency is slightly worse at this stage, increase depression force on the pedal appropriately. This condition also applies to the each replacement of braking lining later.

ENVIRONMENTAL PROTECTION
Avoid running engine at unnecessary high speed. Switching to a high gear in time is helpful to save fuel, reduce operation noise and reduce environmental pollution.

1-6. How to Save Fuel and Extend Life of Vehicle

How to Save Fuel and Extend Life of Vehicle

Saving fuel is largely determined by vehicle conditions and driving habit. Do not overuse the vehicle, which also helps to extend vehicle's life.

The followings conditions are specific tips for fuel saving:

1. Make sure to maintain proper tire inflation pressure. Insufficient tire inflation pressure will lead to tire wear and fuel wastage.
2. The vehicle should not be loaded with unnecessary weight. Heavy loads increase the engine load, resulting in high fuel consumption.
3. Avoid warm-up idling for prolonged periods of time. The vehicle can be driven once the engine runs smoothly. The warm-up time in cold weather will be longer than other seasons.
4. Accelerate slowly and smoothly. Avoid sudden starting.
5. Avoid engine idling for prolonged periods of time. If you need to park vehicle and wait for prolonged periods of time, you should turn off the engine and turn it on again later.
6. Avoid out-of-gear or overspeed of engine. Select proper gears according to driving road conditions.
7. Avoid continuous acceleration and deceleration. Stop-and-go driving will waste the fuel.
8. Avoid unnecessary stopping and braking. You should keep a stable speed. Avoid excessive braking and frequent stops/starts to minimise fuel waste. Maintain a proper driving distance with other vehicles to avoid sudden braking, this will also reduce brake wear.
9. Avoid areas with heavy traffic or traffic jams as much as possible.
10. Do not hold your foot on clutch or brake pedals for prolonged periods of time. This will cause premature wear, overheating and high fuel consumption.
11. Keep a proper vehicle speed on the motorway. The faster the vehicle speed, the more fuel consumption. Decreasing vehicle speed will save fuel.
12. Keep proper front wheel alignment. Avoid collision with road curbs and reduce your vehicle speed when driving on rough road surfaces. Improper front wheel alignment will not only quicken tire wear, but also increase engine load.
13. Avoid contacting vehicle chassis with mud, etc.
14. Maintain vehicle in optimal working condition. Dirty air filter, improper valve clearance, dirty spark plugs, dirty oil and grease, brakes without proper adjustment, etc. can reduce engine performance and waste fuel. Regular maintenance will extend your vehicle's life and reduce your driving costs.

Your vehicle needs to be serviced more frequently if you regularly drive in severe conditions.

⚠ CAUTION
Never turn off engine when driving downhill. The power steering system and brake system will not operate normally when engine is not running.

1-7. Precautions Before Driving Vehicle

Safety Check

It is better to do a safety check before driving vehicle. A few minutes of checking can help ensure safe and pleasant driving.

⚠ WARNING
If you perform this check in an enclosed garage, make sure there is adequate ventilation.

Before Starting Engine

■ Outside vehicle

1. Tires (including spare tire): Check tire pressure with a tire pressure gauge and carefully check tires for cuts, damage or excessive wear.
2. Wheel bolts: Make sure no wheel bolts are missing or loose.
3. Fluid leaks: After the vehicle has been parked for a while, check underneath for leaking fuel, oil, coolant or other fluids (Water dripping from air conditioning after use is normal).
4. Lights: Make sure the headlights, daytime running lights, brake lights, fog lights, turn signal lights and other lights are working properly.
5. Intake grilles: Remove snow, leaves or other obstructions from the intake grilles in front of windshield.

■ Inside vehicle

1. Spare tools: Make sure you have spare tools, such as jack, wheel bolt wrench and spare tire.
2. Seat belts: Check if the buckles can be fastened securely. Make sure belts are not worn or frayed.
3. Instrument cluster and controls: Make especially sure the malfunction indicator lights, indicator lights, and controls are working properly.
4. Brakes: Make sure the pedal has enough clearance.

■ Engine compartment and engine

1. Spare fuses: Make sure spare fuses are available. All the fuses with amperage ratings designated on the fuse box cover should be provided.

2. Coolant level: Make sure coolant level is proper.
3. Battery and cables: Check for corroded or loose terminals and a cracked case. Check the cables for good condition and connections.
4. Wiring: Check for damaged, loose or broken wires.
5. Fuel lines: Check the lines for leaks or loose connections.

■ Hood

Make sure the hood is locked completely before driving. Otherwise, the hood may tilt up and block front view when vehicle is moving, which could lead to an accident.

After Starting Engine

1. Exhaust system: Listen for any leakage. Repair any leaks immediately if such condition occurs.
2. Engine oil level: Stop vehicle on level ground, turn off engine and wait for 5 minutes, pull out the dipstick to check if the engine oil level is proper.

When Driving

1. Gauges and meters: Make sure the gauges and meters are working properly.
2. Brakes: At a safe place, check that the vehicle does not pull to one side when the brakes are applied.
3. Other abnormal conditions: Check for loose parts and leaks. Listen for abnormal noises.

Parking Operations

Proper parking is an important part of safe driving. Vehicle should be parked in a place with wide road, good view and no impact on traffic. Parking operation steps are as follows:

1. Depress brake pedal until the vehicle is completely stopped.
2. Confirm that the electronic parking is enabled.
3. Move shift lever to "P" position.
4. Turn ENGINE START STOP switch to OFF mode.

⚠ CAUTION
When you leave vehicle, make sure to lock your vehicle and carry the keys with you.

Parking on Slope

Parking vehicle on a slope is mainly enabled by the force of the parking brake. Failing to apply park brake or any brake malfunction may cause the vehicle to slide down a slope and personal injury or damage to vehicle. When parking on a slope, it is better to face the tires towards one side of vehicle, to prevent vehicle from moving accidentally.

■ Parking on downhill with curb

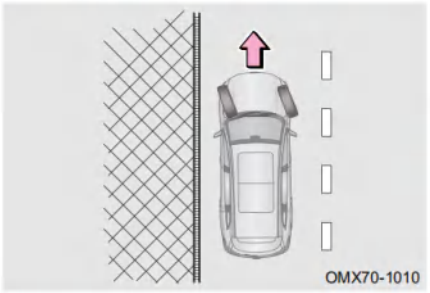

If there is a curb on the roadside, turn the steering wheel to the left to ensure that the front part of the front right wheel is close to or against the curb, to prevent the vehicle from sliding forward down the slope, then apply the parking brake.

■ Parking on uphill with curb

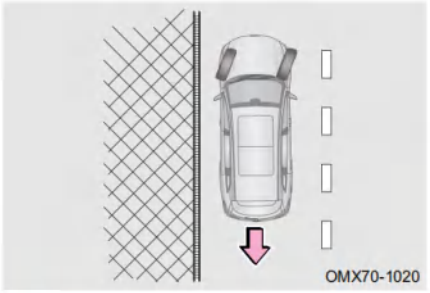

If there is a curb on the roadside, turn the steering wheel to the right to ensure that the rear part of the front right wheel is close to or against the curb, to prevent the vehicle from sliding back down the slope, then apply the parking brake.

■ Parking on uphill or downhill (without curb)

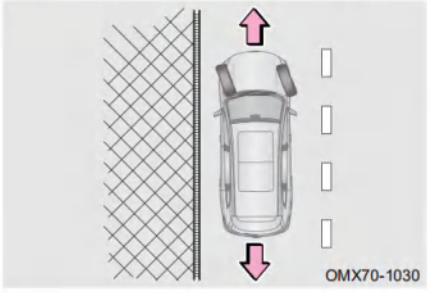

If there is no curb on the roadside, turn the steering wheel hard left to prevent the vehicle driving into the center of the road or sliding down the slope. Turn the steering wheel to the side of the road, so the vehicle is facing away from the center of the road when moving, then apply the parking brake.

■ Carrying passengers

Before driving, make sure all passengers sit in their seats with their seat belts properly fastened. Do not let the passengers sit in the places where there are no seats and seat belts, as they are likely to face serious injury during a collision.

■ Locking the vehicle

- When leaving the vehicle unattended, carry smart key with you and lock all the doors, even if parking the vehicle in the garage or on the road outside your house.
- Vehicle should be parked in bright and spacious places as much as possible, and do not expose valuable items.

■ Exhaust gas

- Avoid inhaling the engine exhaust gas. It contains carbon monoxide (CO), which is a harmful, colorless and odorless gas. It can cause unconsciousness or even death after inhaling.
- Make sure the exhaust system has no leakage holes or loose connections. The exhaust system should be checked regularly. If a change in exhaust gas sound is heard, please have the system checked immediately.
- Do not run the engine in a garage or an enclosed area , unless moving the vehicle in or out. The exhaust gas cannot escape, which may cause serious injury.
- Do not stay in a parked vehicle for prolonged periods of time with the engine running. If it is unavoidable, vehicle should be parked in a spacious area and adjust heating and cooling system to forcibly introduce outside air into vehicle.
- Keep the back door closed while driving. An open or unclosed back door may cause exhaust gas to enter the vehicle.
- To achieve proper operation of vehicle ventilation system, keep intake grilles free of snow, leaves, or other obstructions.
- If you smell exhaust fumes in vehicle, open windows to allow fresh air to enter and check vehicle condition.

Check the Exhaust System

The exhaust system should be checked in the following situations:

1. When you smell exhaust fumes;
2. When you notice a changed noise coming from the exhaust system;
3. When exhaust system is damaged due to vehicle collision;
4. When the vehicle is lifted for inspection and repair.

1-8. Off-road Driving Precautions

Off-road Driving

Always observe the following precautions to minimize the risk of serious personal injury or damage to your vehicle:

- Be careful when driving off road. Do not drive in dangerous areas.
- Place both hands on the outer ring of the steering wheel when driving off roads.
- Always check your brakes for effectiveness immediately after driving on roads covered with sand, mud, shallow water or snow.
- The driver and all passengers should fasten their seat belts whenever vehicle is moving.

⚠ WARNING

- After driving on road surfaces covered with tall grass, mud, gravel, sand, rivers, etc., check if there is grass, bush, paper, rags, stone, sand, etc. adhering to or trapped on underbody. Clear off any above materials from the underbody. If driving vehicle with those matters trapped on or adhering to the underbody, a breakdown or fire could occur.
- When driving off road or on rugged terrain, high speed driving, jumping, sharp turning and striking objects, etc. are forbidden. Failure to do so may cause loss of control or vehicle rollover, resulting in death or severe personal injury. You are also risking expensive damage to your vehicle's suspension and chassis.

1-9. Precautions When Driving in the Rain

When Driving on Slippery Road Surfaces

Drive carefully when it is raining, because visibility will be reduced, windows may become fogged-up and roads will be slippery.

- Do not drive at high speed when driving on a motorway in rain, because there may be a layer of water between tires and road surface, preventing steering system and brakes from operating properly.

⚠ CAUTION

- Sudden braking, acceleration and steering on slippery road surfaces may cause tire slippage and reduce your ability to control vehicle, resulting in an accident.
- Sudden changes in engine speed, such as sudden braking may cause vehicle to skid, resulting in an accident.
- After driving through a puddle, lightly depress brake pedal to make sure brakes are functioning properly. Wet brake lining may prevent brakes from functioning properly. If brake lining on one side is wet and not functioning properly, steering control may be affected, resulting in an accident.

Never Drive Through Flooded Water

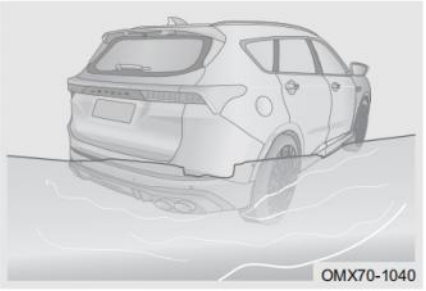
OMX70-1040

The vehicle could be seriously damaged when driving on a road that has flooded.

⚠ CAUTION

- Never drive through water that is deeper than wheel rim.
- Water intrusion into engine can cause it to stall, or cause serious internal damage.
- Water can wash the grease from the wheel bearing, causing rusting and premature abrasion.
- Driving through water may cause damage to your vehicle drive train components. Always visually inspect your vehicle's fluids (e.g. engine oil, transmission fluid, etc.) for signs of leakage after driving through water. Do not continue to operate vehicle if any fluid leaks, as this may result in further damage.
- Vehicle traction and braking performance will decrease while driving through water. The braking distance will increase. Sand and mud that have accumulated around the brake discs may affect the braking efficiency and may damage the brake system components. After driving through water, slightly depress the brake pedal several times to dry the brakes off.

1-10. Winter Driving Precautions

Winter Driving Tips

- Coolant: Make sure that coolant has anti-freezing function. Only use coolant recommended.
- Battery and cables: Low temperature will decrease power of battery. Sufficient power should be stored in battery for starting in winter.
- Oil: In winter, it is recommended to choose appropriate engine oil according to the local temperature condition. The lower viscosity at low temperature, the better fluidity at low temperature, indicating that the lower the ambient temperature at which the oil can be used.
- Door locks: Avoid door locks being frozen. Deicing agent or glycerin should be sprayed into door lock holes.
- Washer fluid: Use washer fluid containing antifreeze. This product is available at authorized service station and most vehicle component distributors.
- Mudguards: Avoid ice and snow accumulation under mudguards. Failure to do so may cause difficult steering. When driving in cold weather, you should often stop vehicle to check for ice and snow accumulation under mudguards. It is recommended that you should take some necessary emergency items with you according to different driving destinations. Items that need to be put in vehicle: Tire chains, window snow scraper, sand or salt bag, signal flasher, shovel, jumper cables, etc.

> ⚠ CAUTION
>
> - Do not use water as a substitute for coolant.
> - Do not use engine coolant or other alternative washer fluid, otherwise vehicle paint will be damaged.

Driving on Road Covered with Ice and Snow

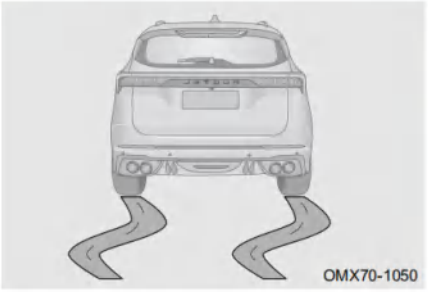
OMX70-1050

Rapid acceleration on slippery road surfaces, such as snow or ice covered roads, may cause the rear wheels slipping to right or left. Therefore, please drive at low speed and operate carefully.

It is possible to build up a layer of water film between the tire and road surface when driving on wet or slushy roads. This may prevent the steering and braking from operating properly. It is recommended that you enable ESP function on this occasion.

■ Driving out silt and ice and snow road

If drive wheel is stuck in silt or ice and snow, please attempt to shake vehicle at low speed and drive forward and backward repeatedly. Shift the shift lever between forward position and reverse position several times and depress accelerator pedal slightly. Avoid shifting the shift lever between forward position and reverse position for a long period of time, failure to do so may cause excessive transmission wear.

Tire Chains

Purchase a set of tire chains that match size of the vehicle tires. Pay attention to the following precautions when installing and removing chains:

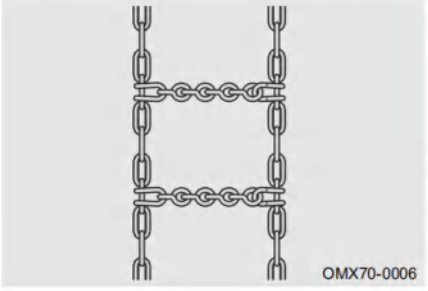
OMX70-0006

1. Follow local regulations when using chains;
2. Install and remove tire chains in a safe location;
3. Install tire chains by following the instructions provided;
4. Follow local regulations when using chains;

5. It is recommended to use the beef tendon chains or rubber chains with a thickness not exceeding 12 mm, otherwise, tires, rims, drive system, brake system and wheel guard plates may be damaged. Vehicle damages resulting from improper use of chains are not covered by warranty;
6. Please consult authorized service station for details about wheels, tire size.

⚠ CAUTION

Observe the following precautions to reduce the risk of accidents. Failure to do so may result in the vehicle unable to be driven safely, and may cause death or serious injury.

- Regulations regarding the use of tire chains vary according to location and type of road. Always check local regulations before installing tire chains;
- Be sure to use chains that are suitable for your vehicle. Installing chain will affect vehicle handling, please drive carefully. Using improper chains or improper installing of chains may cause an accident and lead to injuries;
- Please follow the instructions provided by the manufacturer of the chains to install and remove chains, vehicle should be parked in a safe place before installation and removal. Be sure to turn off the engine before installing chains (automatic transmission is in P position), place the traffic warning signs if necessary;
- Do not drive vehicle at more than 30 km/h when chains are installed on vehicle, or refer to the vehicle speed limit specified by the manufacturer of chains, whichever is lower. It should avoid dangerous road conditions such as bumps, potholes, sharp turns etc. when installing chains, do not turn steering wheel sharply, lock brake urgently, accelerate or decelerate suddenly etc.

1-11. Cybersecurity Notice

Cybersecurity Support Service Update or Termination Notice

The company has provided cybersecuritysupport services in the corresponding software and equipment of the Internet of Vehicles service, and regularly or irregularly updates or terminates this service.

We can notify customers through website announcements, emails, in-vehicle systems, mobile phone text messages, voice calls, etc. according to the specific content of the notification.

Email, SMS, and voice calls will be sent to the email address and mobile phone listed in the customer's account registration information.

Cybersecurity Notice for Scrapping or Resale

Before you resell or scrap the vehicle, that is, when you no longer hold the vehicle, you should clear the personal information in the vehicle terminal by yourself.

The company does not assume any responsibility if the personal information of the vehicle terminal is leaked to a third party due to improper operation.

2-1. Instrument Cluster

Instrument Cluster Overview 22

Conventional Display Interface 24

Driving Information Interface 25

Setting Interface..... 25

Operation/Malfunction Indicator 27

2-2. Steering Wheel

Horn..... 31

Steering Wheel Buttons 31

Adjusting Steering Wheel 32

2-3. Rear View Mirror

Inside Rear View Mirror..... 33

Outside Rear View Mirror 34

2-4. Wiper System

Wiper Operation..... 35

Replacing Wiper Blade..... 37

2-5. Lighting System

Exterior Lighting..... 38

Interior Lighting..... 41

Follow Me Home Function 41

Intelligent High Beam Assist (If Equipped) 42

Fogging Instructions for Light..... 42

2-6. Seat

Correct Sitting Posture 43

Head Restraint..... 44

Front Seat..... 45

Second Row Seat 46

Third Row Seat 48

2-7. Seat Belt

Seat Belt..... 48

Seat Belt Pretensioner (If Equipped) 53

2-8. Child Restraint System

Safety Instructions for Using Child Restraint System 54

Installing Child Restraint System 57

Front Passenger Airbag Label..... 62

Recommended Child Restraint System..... 62

2-1. Instrument Cluster

Instrument Cluster Overview

1 Speedometer
2 Outside temperature
3 Time
4 Tachometer
5 Fuel gauge
6 Driving Mode
7 Gear position information
8 Total mileage
9 Engine coolant temperature gauge

Speedometer

Speedometer: The driving speed of vehicle (unit: km/h).

> ⚠ CAUTION
>
> Speedometer is affected by tire size used in vehicle. Only tires of original size can be used (for details, refer to "Vehicle Specifications"), otherwise the speedometer will not indicate the correct speed.

Tachometer

Tachometer: Current engine speed (unit: x1000 rpm).

After break-in period of vehicle, it is allowed to reach the high engine speed range of 6000 - 8000 rpm. Do not drive vehicle within this range for prolonged periods of time.

⚠ CAUTION

- Do not run engine at high speed during break-in period.
- Do not keep engine speed at 6000 rpm or more for a long time, or engine may be seriously damaged.

Fuel gauge

Fuel gauge: Remaining fuel of fuel tank.

When fuel gauge indication is near E or the low fuel level warning indicator remains on, it indicates that remaining fuel is insufficient. Please add fuel as soon as possible.

READ

When the vehicle is accelerating, braking urgently, turning sharply or driving on a slope, the fuel gauge reading might be inaccurate.

Engine coolant temperature gauge

Engine coolant temperature gauge: Current engine coolant temperature.

Low temperature range: Near C or in C area

When engine coolant temperature gauge is near C or in C area, it indicates that engine coolant temperature is low. Within this temperature range, do not run engine at high speed and the engine load should not be excessive.

Overheating range: Near H or in H area

When engine coolant temperature gauge is near H or in H area, it indicates that engine coolant temperature is high. Stop vehicle at a safe place away from major traffic, turn vehicle power to OFF mode after idling for several minutes. Please go to Jetour authorized service station for inspection and repair immediately.

⚠ CAUTION

- If engine coolant temperature gauge indication remains in low temperature range for a long time, please go to Jetour authorized service station for inspection and repair immediately.
- Never open the coolant reservoir cap if engine coolant temperature gauge indication is in overheating range. Check if coolant level is too low after engine cools down. Never run engine when coolant level is too low, or the engine will be seriously damaged.

Total mileage

Total mileage: The total mileage of the vehicle (common unit: km).

Driving mileage

Driving mileage: The estimated maximum distance that can be driven with remaining fuel (common unit: km).

READ

Driving mileage is calculated by the on-board computer and can only be used as a reference.

Gear position information

Gear position information: The currently selected gear position information (in manual mode or current gear position).

READ

For details about gear position information, refer to "Transmission".

Driving mode

Driving mode: The currently selected driving mode (SPT or NOR).

READ

For details about driving mode, refer to "Transmission".

Conventional Display Interface

The conventional display interface includes the following interfaces. Slide the touch button "□" on steering wheel left and right to scroll through the following interfaces (In order: radio/multimedia/Bluetooth phone/navigation/ maintenance & fault information/setting/ADAS interface).

Driving Information Interface

In ADAS interface, slide the touch button "□" on steering wheel up and down to scroll through the following interfaces (In order: ADAS interface/tire pressure information interface/on-board computer interface).

Setting Interface

Warm tips

Step 1: In the setting interface, slide the touch button "□" on steering wheel up and down to scroll to the warm tips;

Step 2: Press the touch button "□" on steering wheel to enter the warm tips setting interface;

Step 3: In the warm tips interface, slide the touch button "□" on steering wheel up and down to adjust the reminder time.

READ

The default reminder time is 1 hour, and the reminder time can be set from 1 hour to 4 hours.

Backlight adjustment

OMX70-3014

Step 1: In the setting interface, slide the touch button "▢" on steering wheel up and down to scroll to the backlight adjustment;

Step 2: Press the touch button "▢" on steering wheel to enter the backlight adjustment setting interface;

Step 3: In the backlight adjustment interface, slide the touch button "▢" on steering wheel up and down to set backlight brightness.

Information clear

OMX70-3015

Step 1: In the setting interface, slide the touch button "▢" on steering wheel up and down to scroll to the information clear;

Step 2: Press the touch button "▢" on steering wheel to enter information clear setting interface;

Step 3: In the information clear interface, slide the touch button "▢" on steering wheel up and down to scroll to trip mileage clear/driving time clear/ average speed clear/ average fuel consumption clear, and press the touch button "▢ "on steering wheel to confirm the corresponding selection.

Default setting resetting

Step 1: In the setting interface, slide the touch button "▢" on steering wheel up and down to scroll to the default setting resetting;

Step 2: Press the touch button "▢" on steering wheel to enter default setting resetting interface. "Are You Sure to Reset Default Settings" pops up, then select OK.

Overspeed alarm (if equipped)

Step 1: In the setting interface, slide the touch button "▢" on steering wheel up and down to scroll to the overspeed alarm;

Step 2: Press the touch button "□" on steering wheel to enter the overspeed alarm setting interface;

Step 3: In the overspeed alarm interface, slide the touch button "□" on steering wheel up and down to adjust the speed limit value.

READ

- The default speed limit value is 120 km/h, and the speed limit value can be set from 30 - 170 km/h.
- During overspeed alarm, the red icon flashes; After overspeed is 10%, the speed on instrument cluster changes to red.
- In order to prevent the user from repeatedly activating the alarm, the instrument cluster interface switches repeatedly between red and normal; When the speed rises more than 10%, the instrument cluster dial changes to red rapidly. When the speed drops below the speed limit value, the instrument cluster switches to normal.

Operation/Malfunction Indicator

When vehicle power is turned to ON mode, some malfunction indicators will come on for a short time, indicating that system is performing self-check. If one system malfunction indicator remains on or flashes after starting the engine, please go to Jetour authorized service station for inspection and repair immediately.

The operation indicator is used to alert driver the operating condition of a certain vehicle's system and the corresponding operation indicator will remain on.

Malfunction indicator is used to alert driver that a certain system of the vehicle is malfunctioning and the corresponding malfunction indicator will remains on or flash.

Name	Indicator	Description
Daytime running light indicator		Daytime running light indicator remains on when engine is started.
Position light indicator		When the position lights are turned on, the indicator remains on.
Turn signal indicator		When the left or right turn signal lights are turned on, the corresponding turn signal indicator flashes. When hazard light switch is turned on, both left and right turn signal indicators will flash simultaneously.

High beam light indicator		When the high beam lights are turned on or when the high beam lights flash, the indicator remains on.
Rear fog light indicator		When rear fog lights are turned on, the indicator remains on.
Seat belt indicator		This indicator is used to alert the driver that the seat belt is not buckled or fastened firmly. Wear seat belt and drive safely. Note: The front passenger seat belt alarm function is not standard. Please refer to the actual vehicle.
Brake system malfunction indicator		This indicator is used to alert the driver that brake fluid level is low or brake system is malfunctioning. Please go to Jetour authorized service station for inspection and repair immediately.
Electric Parking Brake (EPB) system indicator		This indicator remains on to indicate that the vehicle's EPB is in operating condition currently. The indicator flashes during sudden braking, it is normal and no need to deal with. If it flashes in other cases, it indicates that the system is malfunctioning. Please go to Jetour authorized service station for inspection and repair as soon as possible.
Electric Parking Brake (EPB) system malfunction indicator		This indicator is used to alert the driver that EPB is malfunctioning. Please go to Jetour authorized service station for inspection and repair as soon as possible.
Anti-lock Brake System (ABS) malfunction indicator		This indicator is used to alert the driver that Anti-lock Brake System (ABS) is malfunctioning. Please go to Jetour authorized service station for inspection and repair as soon as possible.

Vehicle body dynamic electronic stability program system indicator		This indicator flashes to indicate that the vehicle body dynamic electronic stability program system is in operating condition currently. This indicator remains on to alert the driver that vehicle body dynamic electronic stability program system is malfunctioning. Please go to Jetour authorized service station for inspection and repair as soon as possible.
Vehicle body dynamic electronic stability program system OFF indicator		When vehicle body dynamic electronic stability program function is turned off, vehicle body dynamic electronic stability program system OFF indicator will remain on, indicating that vehicle body dynamic electronic stability program system is in disabled condition.
Gasoline Particulate Filter (GPF) indicator		This indicator remains on to alert the driver that Gasoline Particulate Filter (GPF) is full, please increase the speed and clean it.
Gasoline Particulate Filter (GPF) malfunction indicator		This indicator remains on to alert the driver that Gasoline Particulate Filter (GPF) is malfunctioning. Please go to Jetour authorized service station for inspection and repair as soon as possible.
Charging system indicator		This indicator is used to indicate the operating condition of charging system. If this indicator does not remain on when vehicle power is turned to ON mode, or indicator remains on after engine starts, please go to Jetour authorized service station for inspection and repair as soon as possible.
High coolant temperature warning indicator		This indicator is used to alert the driver that engine coolant temperature is high. Drive vehicle to a safe area and stop, turn vehicle power to OFF mode after idling for several minutes. Please contact Jetour authorized service station for inspection and repair immediately.
Low fuel level warning indicator		This indicator is used to alert the driver that vehicle is running out of fuel. Please add fuel as soon as possible.

Airbag (SRS) malfunction indicator		This indicator is used to alert the airbag (SRS) is malfunctioning. Please go to Jetour authorized service station for inspection and repair as soon as possible.
Tire Pressure Monitoring System (-TPMS) malfunction indicator		This indicator is used to alert the driver that tire pressure is malfunctioning. Please check if tire pressure is abnormal or temperature is too high. If tire pressure is normal, please contact Jetour authorized service station for inspection and repair as soon as possible.
Electric Power Steering (EPS) system malfunction indicator		This indicator is used to alert the driver that electric power steering system is malfunctioning. Please go to Jetour authorized service station for inspection and repair immediately.
Low engine oil pressure warning indicator		This indicator is used to alert the driver that engine oil pressure is low. Drive vehicle to a safe area and stop. Please go to Jetour authorized service station for inspection and repair immediately.
EPC malfunction indicator		This indicator is used to alert the driver that engine system is malfunctioning. Please contact Jetour authorized service station for inspection and repair immediately.
Engine malfunction indicator		This indicator is used to alert the driver that engine is malfunctioning. Please contact Jetour authorized service station for inspection and repair immediately.
Transmission malfunction indicator		This indicator is used to alert the driver that transmission system is malfunctioning. Please contact Jetour authorized service station for inspection and repair immediately.

2-2. Steering Wheel

Horn

To sound the horn, press area near horn mark on the steering wheel.

READ
Obey local regulations regarding usage of vehicle horns.

Steering Wheel Buttons

: Press the button and go back to the previous menu of instrument cluster.

: Slide up/down and select instrument cluster menu, press it to confirm.

Move the button to " " once to enter pre-cruising mode; exit cruising mode (in cruising mode).

Move the button to " " once to exit cruising mode temporarily.

Move the button to "RES/+" once: Restore cruising mode; increase cruising speed (in cruising mode); move and hold to increase cruising speed (in cruising mode) continuously.

Move the button to "SET/-" once: Enter cruising mode; reduce cruising speed (in cruising mode); move and hold to reduce cruising speed (in cruising mode) continuously.

OMX70-3022

: Shortly press this button to enter the audio Bluetooth dialing interface and answer the call.

: Slide touch button up/down/left/right to select instrument cluster menu, and press it to confirm.

: Press the button and go back to the audio home page.

Move the button to "MODE/" once: Switch sound source mode/one-button snapshot (it is required to set in audio system).

Move the button to "" once: Switch to previous station/song; Move and hold to fast rewind music.

Move the button to "" once: Switch to next station/song; move and hold to fast forward music.

READ
Depending on the vehicle configuration, steering wheel buttons are different, please subject to the actual vehicle.

Adjusting Steering Wheel

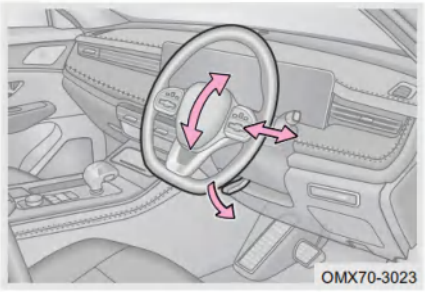
OMX70-3023

Stop vehicle at a safe place away from major traffic, turn vehicle power to OFF mode:

Step 1: Push down adjustment lever and release it;

Step 2: Adjust steering wheel upward and downward/forward and backward to a comfortable angle;

Step 3: Hold steering wheel steady and push adjustment lever to original position;

Step 4: Check if the steering wheel is shaking. Repeat operations of step 3 if shaking.

⚠ WARNING

- Do not adjust steering wheel while driving, otherwise it may cause accidents and personal injury.
- Make sure the steering wheel is securely locked before driving, otherwise it may cause accidents and personal injury.

2-3. Rear View Mirror

Inside Rear View Mirror

Adjusting inside rear view mirror position

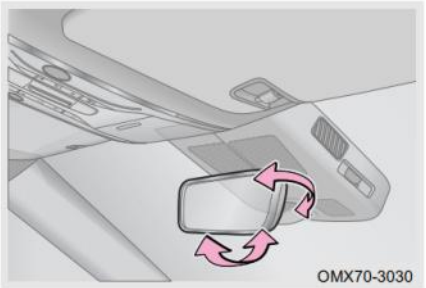
OMX70-3030

Adjust inside rear view mirror to a proper position before driving, to make sure that driver can achieve an optimum view.

Adjusting anti-glare manually (if equipped)

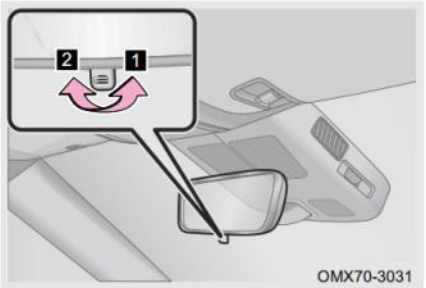

OMX70-3031

Before driving at night, adjust the inside rear view mirror lever to the anti-glare position, which can reduce the reflected light from the headlights of vehicles behind.

1 Anti-glare position

2 Normal position

Adjusting anti-glare automatically (if equipped)

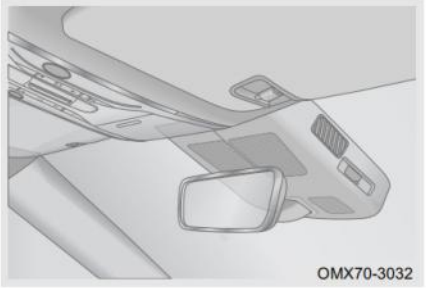
OMX70-3032

When driving at night, the brightness of inside rear view mirror is automatically detected and adjusted by the light sensor, which can reduce the reflection of the headlights of vehicles behind.

Outside Rear View Mirror

Adjusting outside rear view mirror electrically

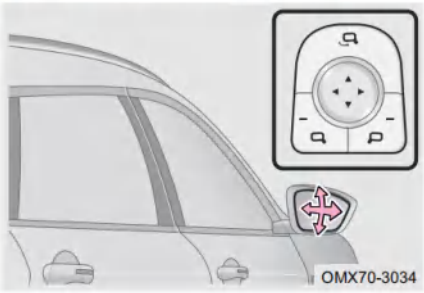

Stop vehicle at a safe place away from major traffic, turn vehicle power to ON mode:

Press "" button to adjust position of left outside rear view mirror lens.

Press "" button to adjust position of right outside rear view mirror lens.

Press "▲"/"▼"/"◀"/"▶" button to adjust angle of outside rear view mirror lens.

⚠ WARNING

- Do not adjust outside rear view mirror while driving, otherwise it may cause accidents and personal injury.
- Image displayed on outside rear view mirror may differ from the actual, so always drive carefully.

Folding/extending outside rear view mirror

■ Power outside rear view mirror

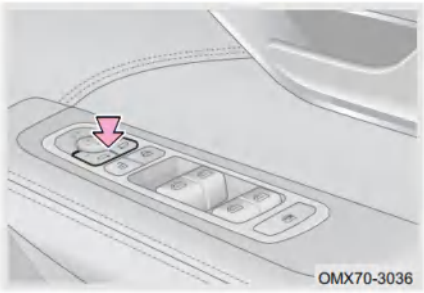

Operate using switch: When vehicle power is turned to ON mode, press " " button to automatically fold outside rear view mirror; press "" button again to extend outside rear view mirror automatically.

Operate using key: In disarming/ arming mode, outside rear view mirror will fold/extend automatically.

READ

- When the vehicle speed is higher than 10 km/h, the power outside rear view mirrors can not fold automatically but can extend automatically.
- Outside rear view mirror automatic folding needs to be set in audio system. For details, refer to "Audio System".
- According to visual field requirements, folding angles of the left and right outside rear view mirrors are different. Therefore, when power outside rear view mirrors automatically fold, the left and right outside rear view mirrors are not synchronized, which is normal.

⚠ CAUTION

- Do not fold/extend the power outside rear view mirror manually, otherwise it may cause the folding function to fail.
- When folding/extending the outside rear view mirror, do not touch its surface to prevent damage to it with excessive force.
- In cold winter, it is recommended to turn off the outside rear view mirror automatic folding function. This will prevent the outside rear view mirror from being frozen in folding position due to accumulated snow or rain.

2-4. Wiper System

Wiper Operation

Wiper combination switch

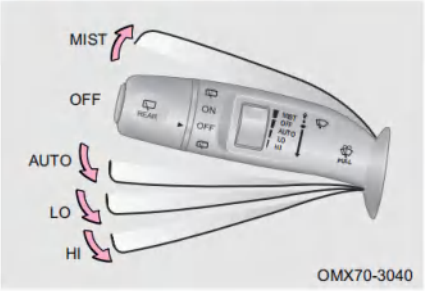

OMX70-3040

Turn vehicle power to ON mode, move the wiper combination switch:

Mist mode "MIST": Wiper will stop after wiping once.

Low speed mode "LO": Operate slowly and continuously.

High speed mode "HI": Operate quickly and continuously.

Stop mode "OFF": Operate automatically at low speed until wipers return to stop position.

OMX70-3041

Auto mode "AUTO": The rain sensor control the wiping speed of the wiper according to amount of rainfall.

If the rain sensor is malfunctioning, the auto mode will wipe in intermittent mode (even if it doesn't rain). This function is not a standard configuration, please refer to the actual vehicle.

If you need to adjust the mode sensitivity, you can adjust the button with 4 gears.

READ

If rain sensor is damaged, the "AUTO" mode cannot work normally. Please go to Jetour authorized service station for inspection and repair as soon as possible.

⚠ CAUTION

- Do not operate wiper when the windshield is dry, as this may damage wiper blade and scratch the windshield.
- Do not operate wipers if there are obstacles on windshield, as this may scratch the windshield and damage wiper motor.
- In cold winter, always check if wiper blade is frozen onto windshield before using wipers. If so, defrost it before using, otherwise it may damage wiper blade and wiper motor.

Front washer operation

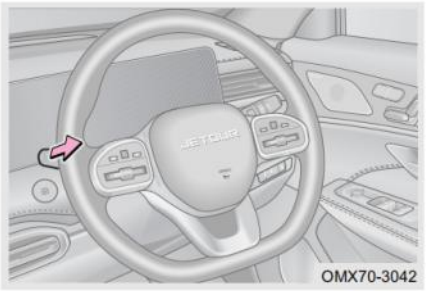

Turn vehicle power to ON mode, pull and hold wiper combination switch towards the steering wheel side, front washer sprays water, and front wiper operates simultaneously. After releasing, front washer stops working and wiper will still operate several times.

Rear washer operation

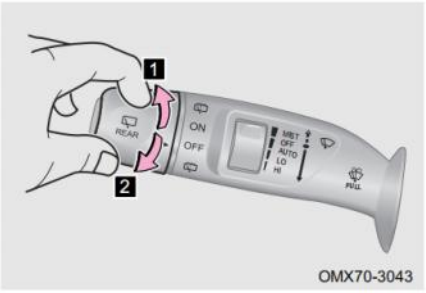

OMX70-3043

1 Turn vehicle power to ON mode and rotate wiper combination switch "REAR" to "ON" position, rear wiper operates. Rotate it to "OFF" position, rear wiper is turned off.

2 Turn vehicle power to ON mode and rotate wiper combination switch "REAR" to "" position and hold, rear washer sprays water, and rear wiper operates simultaneously. After releasing, they stop working.

⚠ CAUTION

- When operating wiper combination switch to spray water, do not exceed 10 seconds at a time.
- Do not operate wiper combination switch when there is no washer fluid in reservoir.
- The antifreeze will corrode any painted surface, so be careful when adding washer fluid.
- Do not try to clear a nozzle with a pin or other objects when it becomes blocked, or it will be damaged.
- Do not mix water with the washer. Water may cause the solution to freeze and damage the washing tank and other parts of the washer system.

Replacing Wiper Blade

Replacing front wiper blade

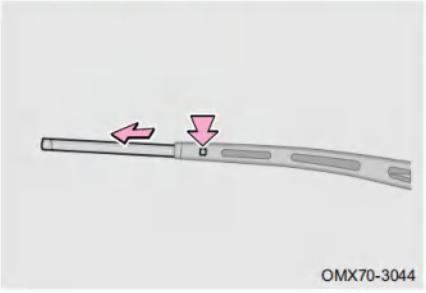

OMX70-3044

Step 1: Move wiper combination switch to mist mode "MIST" for several seconds within 3 seconds after turning vehicle power to OFF mode, it will enter repair mode;

Step 2: Lift the front wiper arm and hold;

Step 3: Push up wiper blades while pressing the lock button, so as to remove the blades;

Step 4: Install the new wiper blades in reverse order, and make sure that the fixing clamp is locked firmly;

Step 5: Check that front wipers operate properly.

Replacing rear wiper blade

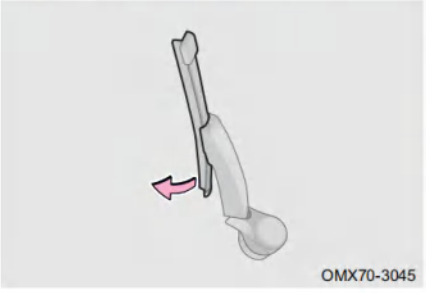

OMX70-3045

Step 1: Lift the rear wiper arm and hold;

Step 2: Separate the wiper blade by hand as shown in the illustration;

Step 3: Install the new wiper blades in reverse order, and be sure to install them in place;

Step 4: Check that rear wipers operate properly.

READ

It is recommended that you have wiper blades replaced by someone at Jetour authorized service station to ensure correct fitting.

CAUTION

Make sure that the wiper arm returns to its original position before driving. otherwise it may damage the vehicle and cause an accident.

2-5. Lighting System

Exterior Lighting

Headlight combination switch

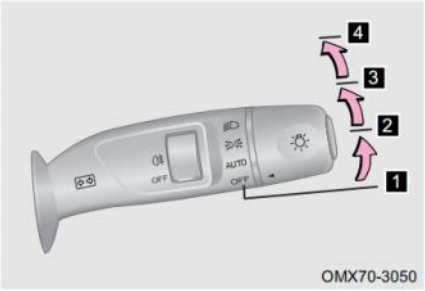

OMX70-3050

Turn vehicle power to ON mode, rotate headlight combination switch:

1. Turning off "OFF": Turn off headlight.
2. Auto-sensing headlight "AUTO": Automatically sense the intensity of external light, turn on lights automatically.
3. Position lights "": Turn on position lights, license plate lights.
4. Low beam lights "": Turn on low beam lights and keep position lights coming on.

READ

When parking vehicle for a long time or before leaving vehicle, make sure that headlight combination switch is turned off to prevent the battery from being depleted. Failure to do so may cause that the vehicle cannot be started.

Headlight high beam

■ High beam lights

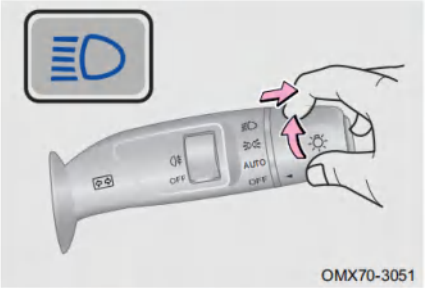

OMX70-3051

Turn vehicle power to ON mode, when turning on low beam lights, pull headlight combination switch away from steering wheel side and release, headlight high beam comes on; Pull headlight combination switch towards steering wheel side and release to turn off headlight high beam.

■ High beam lights flash

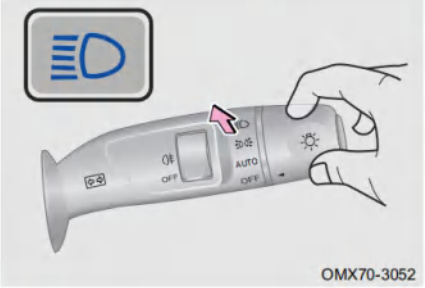

OMX70-3052

Turn vehicle power to ON mode, pull headlight combination switch towards the steering wheel and release it to flash the high beam lights once. At the same time, headlight high beam indicator in instrument cluster flashes once.

READ
High beam lights can flash when the low beam lights are off.

Turn signal light

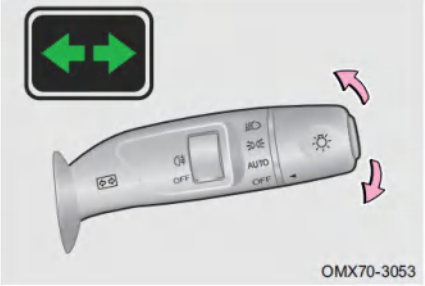

OMX70-3053

Turn vehicle power to ON mode:

Dial headlight combination switch upward, right turn signal light is turned on; Dial headlight combination switch downward, left turn signal light is turned on.

Note: When the turn signal light is damaged, the turn signal indicator on instrument cluster flashes twice more than the normal frequency.

■ Lane change assist lighting

When turning on low beam light, turn on turn signal light, daytime running lights will turn on automatically to make front area brighter to assist steering.

Rear fog light

When turning vehicle power to ON mode and low beam light on, move the button to "⧄"once to turn on rear fog light; move button to "⧄"once again to turn off rear fog light.

READ

- When turning off low beam lights, rear fog lights is turned off at the same time.
- Obey local regulations regarding usage of fog lights.

Light leveling adjustment

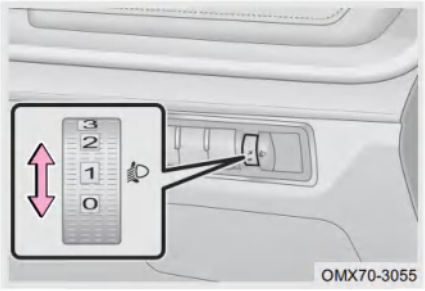

Turn vehicle power to ON mode, with the low beam light on, headlight beam leveling can be adjusted according to occupant quantity and vehicle load.

Headlight beam leveling adjusting switch includes 4 positions (0/1/2/3), when switch is at 0, the headlight beam is at the highest position. If it is moved too fast, it may not work.

Daytime running light

When starting engine, the daytime running light will turn on automatically; when low beam light is turned on, the daytime running light will turn off automatically.

Welcome lights (if equipped)

Turn on the welcome mode through audio system. When the vehicle is locked, the welcome light will be turned on automatically.

Brake light

Depress the brake pedal, brake light and high mounted stop light turn on.

Back-up light

Turn vehicle power to ON mode, shift the shift lever to R, back-up light turns on.

Interior Lighting

Front dome light

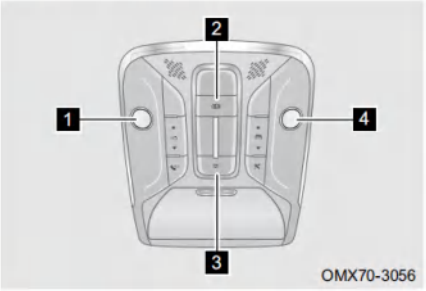

1. Touch the left illumination light and it comes on.
2. Press the door control button, when any door is opened, interior light comes on.
3. Press the dome light button, interior light comes on.
4. Touch the right illumination light and it comes on.

Second row dome light

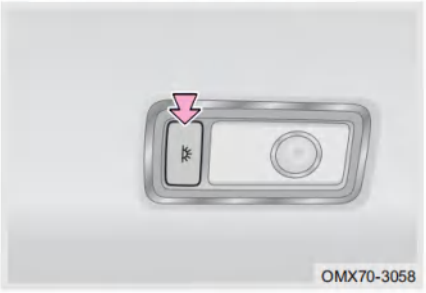

Press second row dome light switch, the second row map light comes on; press the switch again to turn off light.

Luggage compartment light

Open back door and luggage compartment light comes on; close back door and luggage compartment light turns off; if back door keeps opening, the light keeps on for 3 minutes and then turns off automatically.

Follow Me Home Function

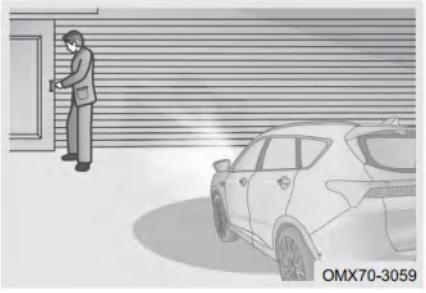

ON: Turn vehicle power to OFF mode, pull the headlight combination switch towards steering wheel side and release within 2 minutes, the follow me home function is activated. The low beam lights and position lights will come on. Each time the headlight combination switch is operated, the low beam lights and position lights will come on for 30 seconds/60 seconds (It needs to be set in audio system), which can be activated up to 8 times continuously.

OFF: Turn vehicle power to ON mode or pull the headlight combination switch towards steering wheel side and hold for more than 2 seconds, the follow me home function will be turned off manually; When the set operating time is reached, the follow me home function will be turned off automatically, low beam lights and position lights will turn off immediately.

Intelligent High Beam Assist (If Equipped)

Intelligent high beam assist activation

Intelligent high beam assist can be turned on through audio system. The white indicator " " on instrument cluster remains on. Turn vehicle power to ON mode, turn headlight combination switch to "AUTO" position. When low beam light comes on, the vehicle speed is higher than 40 km/h. The green indicator " " on instrument cluster remains on, intelligent high beam assist light is activated; At this time, the intelligent high beam assist light automatically turns headlight high beam on/off according to road conditions, such as meeting, following, and overtaking.

Intelligent high beam assist indicator

When it is activated, " " green indicator on instrument cluster remains on.

When there is a fault, " " yellow indicator on instrument cluster remains on.

READ
When the intelligent high beam assist is malfunctioning, the function cannot work normally, please go to Jetour authorized service station for inspection and repair as soon as possible.

Function limit

■ In the following conditions, intelligent high beam assist may exit automatically:

1. Ambient brightness is high.
2. Vehicle speed is lower than 30 km/h.
3. There are more than 3 street lamps on the driving road.
4. There are other traffic participants in front of driving road.
5. Under the condition with glare (such as fog weather, fog light on, wiper over 2 level).

Fogging Instructions for Light

When the weather is cold or humid, the inner side of lights will fog up due to the difference in temperature between the inside and outside. After lights turn on for a period of time, the fog inside the lens will gradually disappear, and there may still be some fog at the edge of the lens. This is normal. This fog has no effect on service life of lighting system. The vehicle lights generate fog,

which gradually begins to disappear in the inner surface of lens for headlight within 30 minutes after the low and high beam lights are turned on. After a period of lighting, the fog disappears naturally. This is normal.

⚠ WARNING

- Following guidelines for driving through water (for example: water depth, speed, etc.) to avoid any water entering the lights.
- After opening light dust cover, reinstall it in place at the end of operation, otherwise water may enter the lights.
- When replacing a bulb, strictly check installation of various light components to make sure that they are installed correctly and sealed properly. When installing rear cover, check its seal ring and keep it clean! Otherwise, it will lead to water and dust entering lights!
- It is strictly forbidden to flush the engine compartment with a high pressure water gun, in particular, the lights cannot be flushed. Due to high pressure of high pressure water gun, accessories on lights may lose or fall off, vent hole and wire harness connector may damp, resulting in water infiltration or moisture not dispersing for a long time, and even severe condensation.

2-6. Seat

Correct Sitting Posture

The seats, head restraints, seat belts and airbags are helpful to protect passengers. Using them correctly will provide you with more protection.

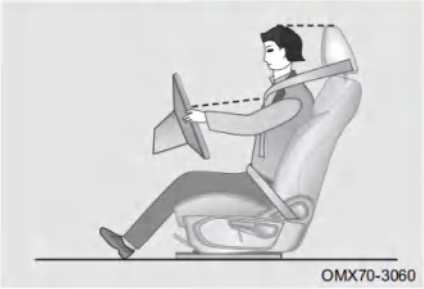
OMX70-3060

When sitting, sit slightly inclined backwards (25° backward is ideal) and well back on seatback.

The front seats must not be too close to the instrument panel. The driver should hold the steering wheel with slightly bent arms during driving. His/her feet should also be bent slightly so that he/she can fully depress the pedal. Adjust head restraints properly so that the top of the head restraint is closest to the top of your head.

OMX70-3061

The shoulder belt should be over the center of the shoulder and close to the chest, kept away from the neck, the lap belt should lie over the hips but not stomach.

Head Restraint

Adjusting head restraint

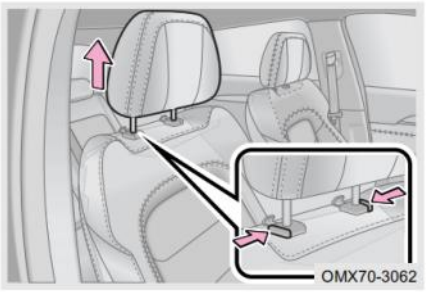
OMX70-3062

Adjust head restraint: Press the unlock button on the outside of head restraint to unlock, then adjust the head restraint upwards/downwards.

Remove head restraints: Press and hold 2 unlock buttons at the same time until unlocked, then lift the head restraint straight up and pull it out completely.

Install head restraints: Align the head restraint with the installation holes and push it down to lock position.

Note: Only one unlock button is equipped for second row seat/third row seat (if equipped).

⚠ WARNING

- Do not adjust head restraint while driving, otherwise it may cause accidents and personal injury.
- Make sure that the head restraint is securely locked before driving, otherwise it may cause accidents and personal injury.

Front Seat

Manual seat

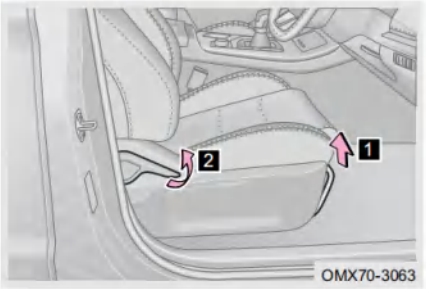

1 Adjusting seat forward and backward

Pull grip up and move the seat back and forth to adjust the seat position forward and backward. After adjusting seat to a desired position, release the grip. Then, shake the seat forward and backward to make sure that the seat is locked properly.

2 Adjusting seatback angle

Lean your body against seatback, and then pull seatback adjustment lever upward. Adjust seatback to desired angle by changing tilt angle of your body and release the lever. After that, apply force backward against the seatback to make sure that the seatback is locked properly.

Power seat

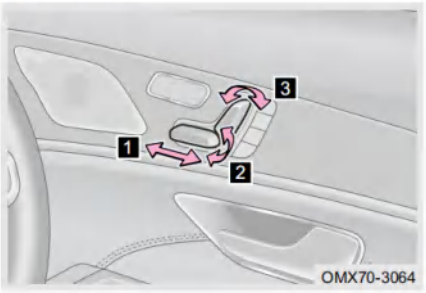

1 Adjusting seat forward and backward

Move button forward, backward, parallel to adjust seat forward and backward.

2 Adjusting seat height (only driver side)

Move rear end of button upward and downward to adjust seat upward and downward.

3 Adjusting seatback angle

Move upper end of button forward and backward to adjust seatback angle.

Note: When the front seatback is at design position, it can be adjusted 190mm forward and 30mm backward; when it is at design angle, it can be adjusted 30° forward and 50° backward; When it is at design height, it can be adjusted 40 mm upward and 20 mm downward.

⚠ CAUTION
Do not place any items under the seat while moving the seat, otherwise, it will damage the seat.

> ⚠ WARNING
>
> - Do not adjust seat while driving, otherwise it may cause accidents and personal injury.
> - Avoid reclining seatback any more than needed, the seat belts provide maximum protection in a frontal or rear collision when the driver and the front passenger sit inclined slightly backwards and well back in their seats.

Seat Memory Function (If Equipped)

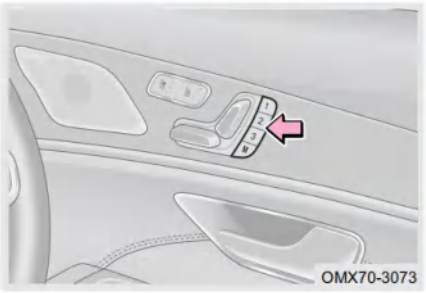
OMX70-3073

Seat memory switch setting: Press any button of memory buttons 1/2/3 while pressing the memory button "M" within 3 seconds, the corresponding position is stored to the memory position 1/memory position 2/memory position 3, at this time, seat position and outside rear view mirror position will be memorized; If the current memory position is not satisfied, perform this operation again.

Seat memory switch recalling: Press any button of memory buttons 1/2/3, seat and outside rear view mirror will be automatically adjusted to the corresponding position.

Second Row Seat

■ Adjusting seatback

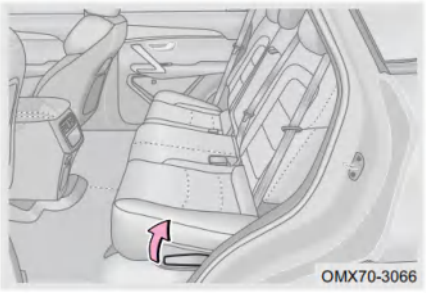
OMX70-3066

Step 1: Lean on the seatback first, then pull seatback adjustment lever upwards;

Step 2: Adjust seatback to the desired angle by body leaning and release the lever;

Step 3: Apply force backward against the seatback to ensure that the seatback is locked properly.

■ Folding seatback

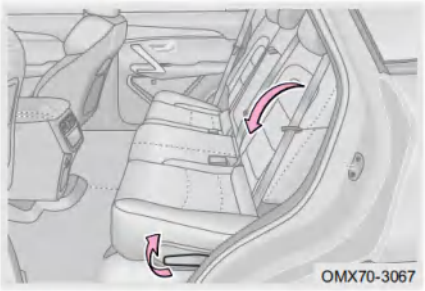

Step 1: Adjust the front seat position forward;

Step 2: Adjust the height of second row seat head restraints, and fold up center armrest;

Step 3: Pull seatback adjustment lever upwards, and slowly lower the seatback with your hand.

■ Adjusting seat forward and backward (if equipped)

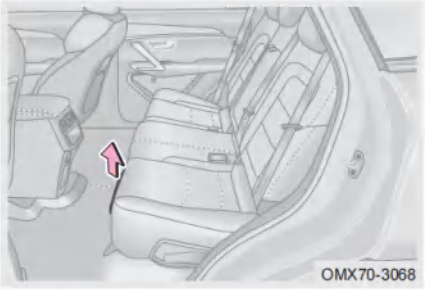

Step 1: Pull adjusting grip on front and rear positions of seat upward;

Step 2: Adjust the seat to desired position and release grip;

Step 3: Shake the seat forward and backward to make sure that the seat is locked properly.

■ Seat easy entry (only right side) (if equipped)

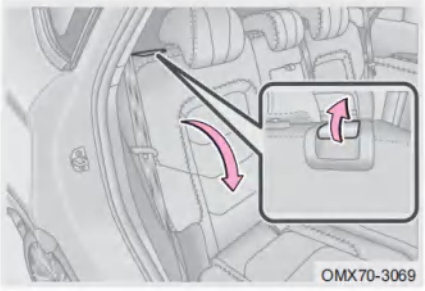

Step 1: Pull up seat easy entry operation handle at upper part of seatback;

Step 2: Fold the second row seatback and push the seat to foremost position;

Step 3: After entering and leaving the third row seat, slide the second row seat to rearmost position and pull the seatback backward until it is locked;

Step 4: Shake the seat forward and backward, apply force backward against the seatback to make sure that the seat is locked properly.

Note: When second row seatback is at designed position, it can be adjusted 170mm forward; When it is at designed angle, it can be adjusted 104° forward and 16° backward.

READ
When folding seatback, make sure that outer seat belt passes around the seatback to avoid damaging the belt.

> ⚠ WARNING
>
> Do not adjust seat while driving, otherwise it may cause accidents and personal injury.

Third Row Seat

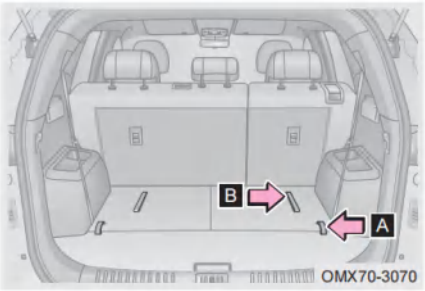

Step 1: Adjust height of third row seat head restraints;

Step 2: Pull "A", and slowly lower the seatback with your hand, the rear seatback is flush with back door carpet after folding;

Step 3: Pull "B", and slowly pull up the seatback with your hand, apply force backward against the seatback to ensure that the seatback is locked properly.

> READ
>
> When folding seatback, make sure that outer seat belt passes around the seatback to avoid damaging the belt.

> ⚠ WARNING
>
> Do not adjust seat while driving, otherwise it may cause accidents and personal injury.

2-7. Seat Belt

Seat Belt

We strongly recommend the driver and passengers to wear their seat belts correctly at all times. Failure to do so could increase possibility and severity of injury in case of an accident. Check the seat belt regularly. If any seat belt function failure is found, please contact Jetour authorized service station for inspection and repair immediately.

Seat belt unfastened alarm reminder

OMX70-3095

Turn vehicle power to ON mode, when vehicle speed is less than 15 km/h and seat belt is not fastened or not fastened firmly, the corresponding safety indicator on instrument cluster flashes; When vehicle speed is no more than 15 km/h and seat belt is not fastened or not fastened firmly, the corresponding red indicator on instrument cluster flashes, accompanied by sound alarm.

Using seat belt correctly

Step 1: Adjust the height of front seat belts;

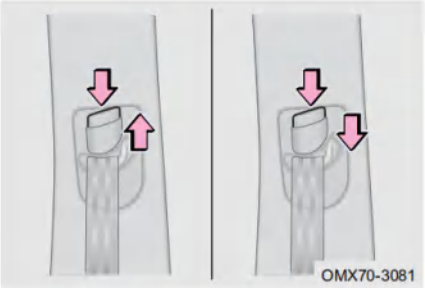

OMX70-3081

Adjust downward: Push seat belt adjuster downward while pressing adjusting button.

Adjust upward: Push seat belt adjuster upward while pressing adjusting button.

Step 2: Fasten/release seat belt;

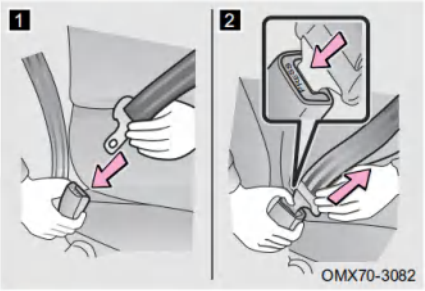

OMX70-3082

1 Fasten seat belt: Push the tab into the buckle until a "click" sound is heard.

2 Release seat belt: Press the release button to retract seat belt. If the belt cannot retract smoothly, pull it out and check for kinks or twists. Make sure that seat belt can retract smoothly.

READ

- Each seat belt shall be used by one person only. Do not use a seat belt for more than one person at one time, including children.
- The seat belt will lock when it is pulled out quickly or the vehicle is on a slope, but it will not lock when pulling it out slowly.

⚠ CAUTION

- Make sure that seat belt buckle position is correct and is locked safely, otherwise it may cause personal injuries.
- Do not use any seat belt with a loose buckle, otherwise, the seat belt will not protect the passengers in the event of sudden braking or a collision.

Step 3: Adjust the position of seat belts.

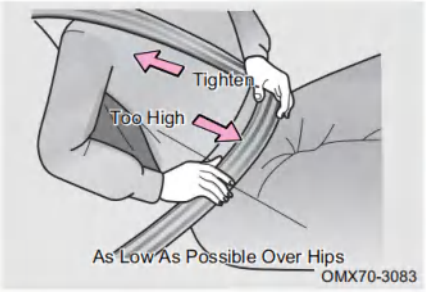

To adjust the seatback angle, sit up straightly and well back in the seat. Position the lap belt as low as possible on your hips — not on your waist, then pull the shoulder belt upward so that it comes fully over the shoulder, but does not come into contact with the neck or slide off the shoulder.

⚠ CAUTION

- Avoid loose fitting clothes when driving. These can prevent the seatbelt fitting correctly and can affect the protection offered.
- Both high-positioned lap belts and loose-fitting belts could cause death or serious injuries during a collision.
- Do not recline seat more than necessary to achieve a comfortable ride. Seat belts are most effective when passengers are sitting up straight and well back in their seats.
- Make sure the shoulder belt is positioned across your shoulder. Do not place the shoulder belt under your arm. The belt should be kept away from your neck, but not falling off your shoulder. Failure to do so could reduce the protection effect of seat belt in an accident.
- We recommend that children be seated in the second row seat. Use seat belt or child restraint system with ISOFIX function according to the child's height. Never fix child restraint system with seat belt only. Always use standard fixing device for child restraint system on second row seat.

Maintaining seat belt

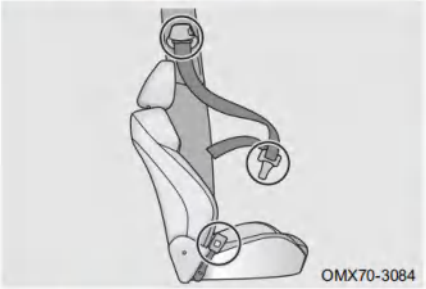

Regularly check if seat belts is cut, worn, loose and stretched (such as after a traffic accident). If the belt is damaged, please contact Jetour authorized service station for inspection and repair immediately.

⚠ CAUTION

- Do not allow water to penetrate belt retractor or buckle mechanism.
- Do not use chemical detergent, boiling water, bleach or dye to wash the seat belt.
- The seat belt should be washed with mild cleanser or warm water and dry naturally. Never clean it with artificial heat.
- Do not try to repair or lubricate retractor or buckle mechanism of seat belt, or repair seat belt in any way, otherwise, the Chery Commercial Vehicle Co., Ltd. will not be responsible for any problem caused thereby.

⚠ WARNING

- If your vehicle has been involved in a serious accident and even if seat belt is not obviously damaged, please contact Jetour authorized service station for inspection and repair.
- Ensure that the belt can function properly and the belt is not twisted. If the seat belt does not function properly, please contact Jetour authorized service station for inspection and repair immediately.
- Do not attempt to install, remove, modify, disassemble or dispose of the seat belts. If there is any need above, have any necessary service carried out by Jetour authorized service station.

Seat belt precautions

■ Precautions for using seat belt by a child

The seat belts of your vehicle are principally designed for persons of adult size. Use a child restraint system (for details, refer to "Child Restraint System") appropriate for the child, until the child becomes large enough to properly wear the vehicle seat belt. When the child becomes large enough to properly wear the vehicle seat belt, follow the instructions regarding seat belt usage. If a child is too large to use a child restraint system, the child should sit in the second row seat and must be restrained using the vehicle seat belt.

OMX70-3085

Make sure the shoulder belt is positioned across the center of child's shoulder. The belt should be kept away from child's neck, but not falling off child's shoulder. Otherwise, the child is at risk of serious injury or even death during a collision.

Failure to use a child restraint system (for example: let a child stand or kneel on seats; let a child sit on an adult's laps; holding a child in arms). This may cause death or serious injuries during a collision or unintended events.

■ Precautions for using seat belt by a pregnant woman

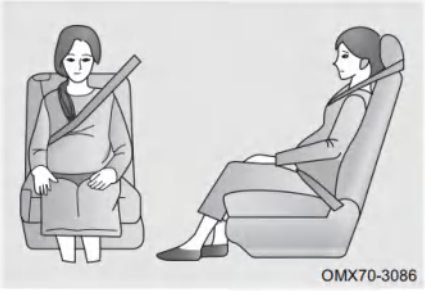
OMX70-3086

Obtain medical advice and wear the seat belt properly. Women who are pregnant should position the lap belt as low as possible over the hips in the same manner as other occupants. Extend the shoulder belt completely over the shoulder and across the chest, avoid belt contact with the rounding of the abdominal area. If the seat belt is not worn properly, it may cause serious injuries or death during a collision.

⚠ WARNING

- Do not insert coins, clips, etc. into the buckle to prevent from properly latching tab and buckle.
- After inserting the tab, make sure that the tab and buckle are locked and that the lap belt and shoulder belt are not twisted.
- It is not allowed to insert the non-genuine seat belt tab into buckle. Long-term use will easily lead to damage of the seat belt buckle and make it unusable.
- If the seat belt does not function normally, it cannot protect passengers from death or serious injury, please contact Jetour authorized service station for inspection and repair immediately.

Seat Belt Pretensioner (If Equipped)

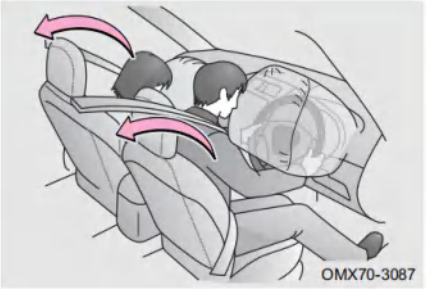

1. Seat belt pretensioner is designed to assist front airbag (SRS) in the event of a severe impact.
2. In the event of a minor impact or side impact, pretensioner may not activate.
3. During a severe impact, seat belt pretensioner may be activated even if there is no occupant in front seat.
4. When seat belt pretensioner is activated, retractor quickly tightens seat belt to tightly restrain occupant.
5. When seat belt pretensioner is activated, it may make a working sound and release a small amount of non-toxic gas. The produced gas does not cause a fire and is generally harmless.

⚠ WARNING

- When seat belt pretensioner is activated, the airbag (SRS) malfunction indicator remains on, and seat belts cannot be retracted/pulled out. Please contact Jetour authorized service station for inspection and repair immediately.
- Do not modify, remove, hit or open the seat belt pretensioner assembly, airbag (SRS) sensor and assembly wire. Otherwise, it may cause death or serious injuries during a collision.

Function limit

■ In the following cases, the seat belt pretensioner may not work properly:

1. Modify suspension system.
2. Modify front body section.
3. Repair the seat belt pretensioner or any assembly nearby.
4. Seat belt pretensioner assembly or its surrounding area is damaged.
5. Install grill guard or any other device to front body.

2-8. Child Restraint System

Safety Instructions for Using Child Restraint System

In order to avoid serious injury caused by incorrect riding of children in an accident, children must sit in child restraint system when riding in vehicle.

Before installing and using child restraint system, please read the instruction manual of child restraint system carefully. In addition, local laws and regulations on children riding in vehicle should be observed.

For safety, it is recommended that the child restraint system is installed on the rear seat.

⚠ WARNING
When using the child restraint system, be sure to read the installation instructions contained therein and ensure that it is firmly installed.

Classification of child restraint system

Child restraint system purchased by user in Australia should comply with AS/NZS1754 standard, while those in Asean countries should comply with UN R44/UN R129 standard

Child restraint systems are divided into the following weight groups:

Mass Groups	Child Weight
Group 0	0 to 10 kg
Group 0+	0 to 13 kg
Group 1	9 to 18 kg
Group 2	15 to 25 kg
Group 3	22 to 36 kg

- Mass group 0/O+: Apply to Grade 0/O+ or Grade 0/I rear-facing infant seat;
- Mass group I: Apply to Grade I or Grade II child restraint system with built-into seat belt system;
- Mass group II/III: Grade II applies to child restraint system with seatback, Grade III applies to child restraint system without seatback.

Applicable child restraint system for passenger seat:

Mass Group	Front Passenger Seat	Second Row Outside Seat	Second Row Center Seat
Group 0 (0 to 10 kg)	X	L	X
Group 0+ (0 to 13 kg)	X	L	X
Group 1 (9 to 18 kg)	X	L	X
Group 2 (15 to 25 kg)	X	UF, L	X
Group 3 (22 to 36 kg)	X	UF, L	X

- L: If the vehicle is listed in applicable model list of the child restraint system manufacturer, it is suitable for child restraint systems of "semi-universal" categories approved for use in this mass group;
- U: Suitable for child restraint systems of "universal" categories approved for use in this mass group;
- UF: Suitable for front-facing child restraint systems of "universal" categories approved for use in this mass group;
- X: Not suitable for installing any type of child restraint systems in this mass group.

ISOFIX child restraint system

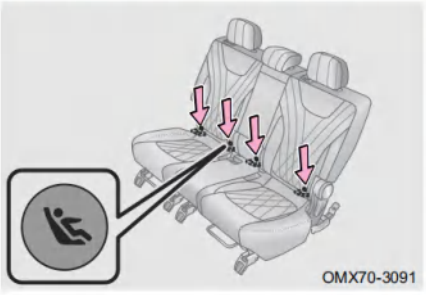

ISOFIX fixing point is an installation system for child restraint system based on ECE R145 standard.

Fixing point of ISOFIX child restraint system is located below the back of rear outside seatback. When connecting child restraint system to ISOFIX fixing point, follow the instruction manual provided by the child restraint system manufacturer.

Size class of ISOFIX

Use the child restraint system size class suitable for the ISOFIX interface to help users choose the correct type of child restraint system.

Size Class	Fixing Device	Description
A	ISO/F3	Full-height front-facing CRS for toddlers
B	ISO/F2	Reduced-height front-facing CRS for toddlers
B1	ISO/F2X	Reduced-height front-facing CRS for toddlers
C	ISO/R3	Full-size rear-facing CRS for toddlers
D	ISO/R2	Reduced-size rear-facing CRS for toddlers
E	ISO/R1	Rear-facing CRS for infant
F	ISO/L1	Left-facing CRS (portable bed)
G	ISO/L2	Right-facing CRS (portable bed)

Applicable type for ISOFIX:

Weight Groups	Size Class	Fixing Device	Seat Position		
			Front Passenger Seat	Second Row Outside Seat	Second Row Center Seat
Portable bed	F	ISO/L1	X	X	X
	G	ISO/L2	X	X	X
		(1)			
Group 0 (Up to 10 kg)	E	ISO/R1	X	IL	X
	/	(1)	/	/	/
Group 0+ (Up to 13 kg)	E	ISO/R1	X	IL	X
	D	ISO/R2	X	IL	X
	C	ISO/R3	X	IL	X
	/	(1)	/	/	/
Group 1 (9 to 18 kg)	D	ISO/R2	X	IL	X
	C	ISO/R3	X	IL	X
	B	ISO/F2	X	IL, IUF	X
	B1	ISO/F2X	X	IL, IUF	X

Weight Groups	Size Class	Fixing Device	Seat Position		
			Front Passenger Seat	Second Row Outside Seat	Second Row Center Seat
	A	ISO/F3	X	IL, IUF	X
	/	(1)	/	/	/
Group 2 (15 to 25 kg)	/	(1)	/	/	/
Group 3 (22 to 36 kg)	/	(1)	/	/	/

- X: Not suitable for ISOFIX child restraint system;
- IL: Suitable for ISOFIX child restraint systems of "specific vehicles" or "semi-universal" categories approved for use in this mass group;
- IUF: Suitable for front-facing child restraint systems of "universal" categories approved for use in this mass group;
- (1): Child restraint system without ISO/xx weight group mark (A to G). For more details about applicable mass group, please check model list for ISOFIX child restraint system.

Installing Child Restraint System

TOP TETHER upper fixing point

■ SUV and hatchback model

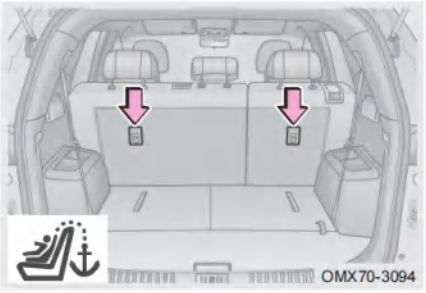

The vehicle is equipped with 3 upper fixing points (TOP TETHER) for child restraint system. These upper fixing points are located on the back of rear seat as shown in the figure above

Before using, please remove the head restraint where the child restraint system to be installed, and then hang the hook of child restraint system to the upper fixing point to avoid the strap of the hook directly over the top of the head restraint.

After the upper strap hook is hung into the upper fixing point, be sure to tighten the strap and not loosen. For detailed methods of fixing and tightening the

upper strap of child restraint system, please refer to the instruction manual provided by the child restraint system manufacturer.

> ⚠ WARNING
>
> - Do not allow upper strap to stride or bypass head restraint and always fasten strap after installing, incorrect installation may cause serious injury to child.
> - Always remove the luggage cover before installing the child restraint system to the fixing point.

■ Rear-facing infant seat

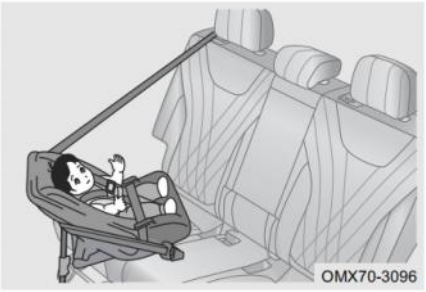

The rear-facing infant seat should be installed facing direction opposite to that of vehicle traveling. In an accident, if an infant faces front windshield, it is likely to hurt his/her vulnerable central spine and spinal cord. Facing vehicle rear, infant's head, neck and torso can be protected by the seat. It is recommended for group 0: Up to 10 kg; Group 0+: up to 13 kg.

■ Front-facing child restraint system

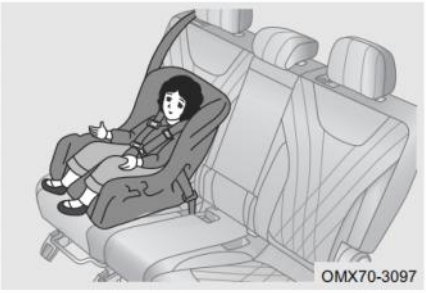

The front-facing child restraint system should be installed facing vehicle traveling direction. It is recommended for group I: 9 - 18 kg.

■ Heightening child restraint system

For the expandability of child restraint system function, a separate booster cushion can be used. When the child is shorter and lighter, a booster cushion can be used to increase the child's line of sight in vehicle and secure child properly. (- Vehicle seat belt that meets international standards is designed according to body size of person over 1.5 m. If any one under 1.5 m uses seat belt, the belt could hurt his/her neck seriously in case of an accident). It is recommended for group II: 15 to 25 kg; It is recommended for Group III: 22 to 36 kg.

Installing child restraint system (ISOFIX)

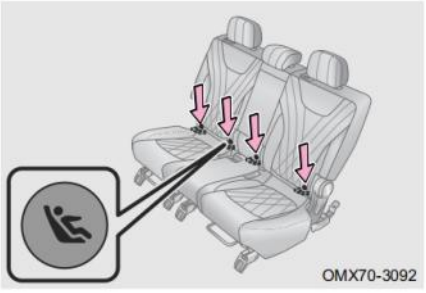

Step 1: Find the lower retaining ring used to secure child restraint system;

Step 2: Put the child restraint system on rear seat;

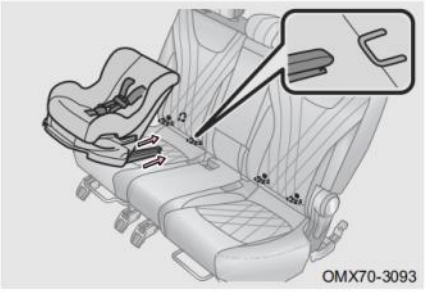

Step 3: Insert and secure lower hook of child restraint system to lower retaining ring.

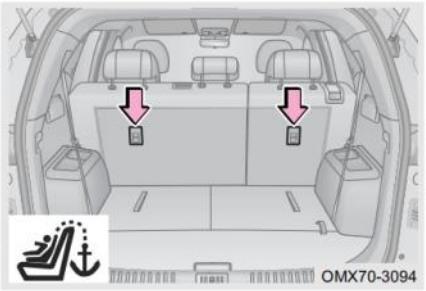

Step 4: Pull out the child restraint system upper belt and secure it to the seat rear anchor (the anchor bracket is located behind the second row seatback).

⚠ WARNING

- Child restraint system must be installed in rear seat.
- After installing a child restraint system, never adjust the seat.
- Ensure that the belt and tab are locked in place and the belt is not twisted.
- Never fix more than one child restraint system on a set of retaining rings.
- If the child weighs more than 22 kg, it is not allowed to fix the child restraint system using retaining rings.
- If retaining ring device is damaged or overloaded during an accident, please contact Chery authorized service station for inspection and repair immediately.
- Do not use child restraint system anchor bracket to secure items other than child restraint system. Otherwise, the Chery Automobile Co., Ltd. will not be responsible for any problem caused thereby.
- If the child restraint system is not correctly fixed in place, the child or passengers may be seriously injured or even death during a collision or other unintended events.
- Make sure the top strap is securely latched, and check if the child restraint system is secured by pushing and pulling it in different directions. Follow the installation instructions provided by the child restraint system manufacturer. If the child restraint system is not correctly installed, the child may be seriously injured or even death during a collision or other unintended events.
- If the child restraint system interferes with locking device of front seat, do not install child restraint system in rear seat. The child and front passenger may be seriously injured or even death during a collision or other unintended events.
- Do not allow child to play with the child restraint system lock function belt. If a belt twists around a child's neck, it may not be released, leading to chocking, other serious injuries or even death. If this occurs and the buckle cannot be released, scissors should be used to cut the belt.
- When the child restraint system is not in use, it should also be fixed properly on the seat. Do not place unfixed child restraint system in the passenger cabin.
- If it is necessary to remove child restraint system, take it out after removing or store it properly in luggage compartment. Otherwise, it may cause serious injuries during a collision or other unintended events.

Front Passenger Airbag Label

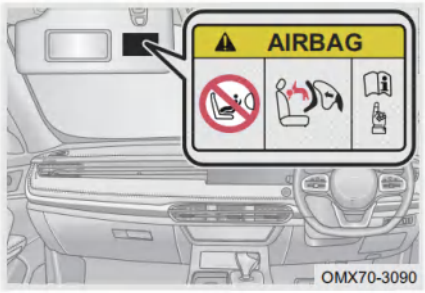

The label is located on the front and back of front passenger side sun visor

The front passenger airbag warning label is located on the front and back of sun visor as shown in the figure above, and contains important information about front passenger airbag.

⚠ WARNING

- Do not let children stand or sit in front of the front passenger seat.
- Front passenger position is equipped with front airbag. Do not use the rear-facing child restraint system in this seat.
- Failure to follow these above recommendations may endanger life or result in serious injury.

Recommended Child Restraint System

1. Child restraint system purchased by user in Australia should comply with AS/NZS1754 standard, while those in Asean countries should comply with UN R44/UN R129 standard;
2. When using the child restraint system, please read the instructions of the child restraint system manufacturer carefully, install it in strict accordance with the installation method described in the instructions, and confirm that the child restraint system is installed firmly and stably;
3. Remove head restraint if child restraint system interferes with the vehicle seat head restraint during installing the child restraint system;

4. The following table recommends the use of child restraint system for Australia:

Type Group	Manufacturer	Model	Installation Direction	Fixing Method
Type A	Britax	Britax Safe n Sound Unity ISOFIX	Rearward facing	Vehicle seat belt/ISOFIX mode
Type A4	Britax	Britax Safe n Sound Graphene	Rearward facing	Vehicle seat belt/ISOFIX mode
Type B	Britax	Britax Safe n Sound Graphene	Forward facing	Vehicle seat belt/ISOFIX mode
Type E	Britax	Maxi Cosi RodiAP	Forward facing	Vehicle seat belt
Type F	Britax	Britax Safe n Sound KidGuard	Forward facing	Vehicle seat belt

5. The following table recommends the use of child restraint system for Asean countries:

Weight group	Child weight	Manufacturer	Model	Installation Direction	Installation Method
Group 0	Up to 10 kg	Joie	Joie Spin 360	Rear-facing	ISOFIX with support leg
Group 0+	Up to 13 kg	Joie	Joie Spin 360	Rear-facing	ISOFIX with support leg
Group 1	9 to 18 kg	Joie	Joie Spin 360	Front-facing	ISOFIX with support leg
Group 2	15 to 25 kg	Britax Römer	Britax Römer KidFix 2S/ 2R	Front-facing	ISOFIX and vehicle seat belt
Group 3	22 to 36 kg	Britax Römer	Britax Römer KidFix 2S/ 2R	Front-facing	ISOFIX and vehicle seat belt

3-1. Key Information
Smart Key 66
Effective Range 69
Keyless Entry 70
Polling Function (If Equipped) 70
Vehicle Arming 71
Immobilizer System 72

3-2. Doors
Door Lock Switch 73
Unlocking Doors with Inside Handle 73
Door Mechanical Switch 73
Child Lock 74

3-3. Windows
Power Windows 75
Window Remote Control Function 76
Window Jam Protection Function 77

3-4. Panoramic Moon Roof
Panoramic Moon Roof 79
Moon Roof Jam Protection Function 80

3-5. Audio System
Audio View 80
Shortcut Menu 82
System Setting 82
Vehicle Control 82
Voice Assistant 83
Phone-link (If Equipped) 84

3-6. Air Conditioning System
Electric A/C 85
Air Conditioning Operation 87
Air Conditioning Cooling Operation 90
Air Conditioning Heating Operation 92
Air Outlets Airflow Control 92

3-7. Wireless Charging
Wireless Charging (If Equipped) 93

3-8. Storage Space
Storage Space 94

3-9. Power Outlet and USB Port
Power Outlet 97
USB Port 97

3-10. Sun Visors and Vanity Mirrors

3-11. Hood
Opening/Closing Hood 99

3-12. Back Door
Power Back Door (If Equipped) 99
Back Door Emergency Opening 103

3-13. Fuel Tank Cap

3-1. Key Information

Smart Key

Smart key is used to unlock/lock doors remotely, open back door and perform smart vehicle locating within about 20 m (within clear view) of the vehicle.

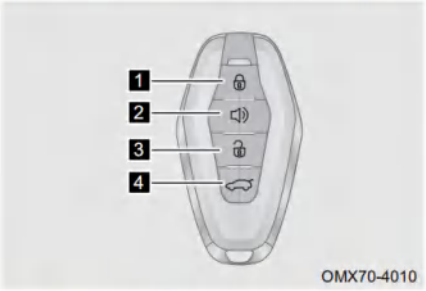

1 Lock button
2 Vehicle locating button
3 Unlock button
4 Back door opener button

Vehicle Locating Mode

Press the vehicle locating button on smart key, the horn sounds twice, the turn signal lights flash for 8 seconds, and the position lights come on for 8 seconds, this allows you to find your vehicle easily.

Function limit

■ In the following conditions, the smart key may not work properly:

1. There are more than one smart keys being used nearby.
2. The distance between vehicle and smart key is over 20 m.
3. The smart key is in contact with, or is covered by a metallic object.
4. The smart key is placed near an electrical appliance (such as mobile phone or personal computer).
5. The key is near wireless communication devices that have the similar frequency with the remote control key (such as portable radio).
6. The key is near facilities that generate strong radio waves (such as TV tower, radio station, power station, airport, train station).

⚠ CAUTION

- This product is a low frequency radio device and can be interfered by various radio services or radiation from industrial, scientific and medical equipment.
- Do not change the transmitting frequency, increase the transmitter power (-including installation of the wireless RF power amplifier), or install an external or other transmitting antenna without permission.
- When using the product, do not interfere with legal wireless communications; In case of interference, immediately stop using and take measures to eliminate the interference before continuing to use it.

■ If any of the following conditions occurs, the smart key battery may be low or depleted:

1. The remote control distance gradually decreases.
2. Remote control function does not work even there is no interference.
3. When pressing any smart key button, indicator is dim or does not come on.

Mechanical key

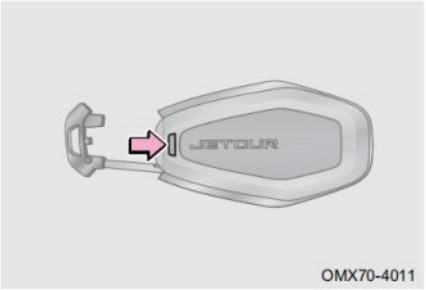

OMX70-4011

The mechanical key built into the smart key can be used to unlock/lock doors in emergency after pressing release button on the backside of smart key and take mechanical key out (for details, refer to "Door"). After using, return it to original place for easy-to-carry.

Replacing smart key battery

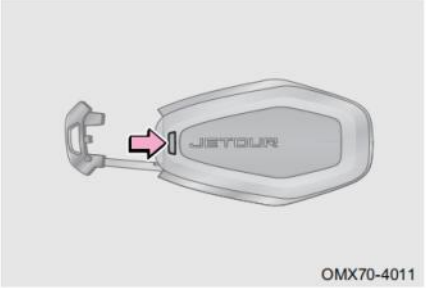

OMX70-4011

Step 1: The mechanical key built into the smart key. Press release button on backside of smart key to take out mechanical key.

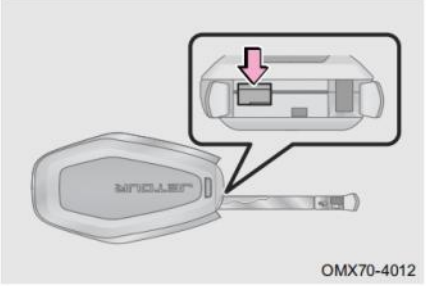
OMX70-4012

Step 2: Insert mechanical key into smart key hole (as shown in the figure) and gently separate the smart key cover.

OMX70-4013

Step 3: Pry off battery in smart key using a flathead screwdriver with the tip taped and install new battery.

Step 4: Install smart key in place in the reverse order of removal.

Step 5: After replacing battery, check if the smart key operates properly (- press any smart key button to confirm that indicator comes on). If the smart key still does not function correctly, please contact Jetour authorized service station for inspection and repair as soon as possible.

ENVIRONMENTAL PROTECTION

Used lithium battery cannot be handled as general household rubbish, please handle used battery according to the local regulations and provisions regarding environmental protection.

READ

- Make sure that positive and negative terminals of battery are placed correctly.
- Smart key battery model: 3V-CR2032 lithium battery.

CAUTION

- Only use the battery model recommended by Chery Commercial Vehicle Co., Ltd.
- Do not bend electrode and terminal when installing battery.
- Make sure your hands are dry and keep away from water when replacing the battery.
- Do not touch new battery with oily hand. Failure to do so may cause battery corrosion.
- Do not touch or move any components inside the smart key, or its functions may not work properly.
- There are some difficulties when replacing battery, so it may be damaged if replacing the battery by yourself. It is recommended to replace it at Jetour authorized service station.

⚠ WARNING

- Take special care to prevent children from swallowing the removed battery or other components, failure to do so may cause death or serious injury to the child.

Effective Range

Detectable area

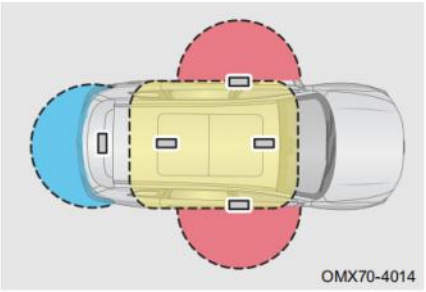

Starting or switching power mode area

Start or switch power mode when smart key is inside the vehicle.

Unlocking/locking area

Unlock/lock the doors when smart key is within effective range of front door handle low-frequency antenna.

Opening back door area

Open the back door when smart key is within effective range of back door outside low-frequency antenna.

READ

Due to different configurations, some vehicles equipped with high-frequency antennas, whose frequency is higher than this detection range.

Function limit

■ Smart key may be not detected in the following conditions:

1. Smart key is in luggage compartment.
2. When locking doors, smart key is too close to the window or roof.
3. Check if the smart key is placed together with strong electromagnetic interference sources (such as: portable power source, interphone or other phones, etc.).

Keyless Entry

Unlocking/locking doors

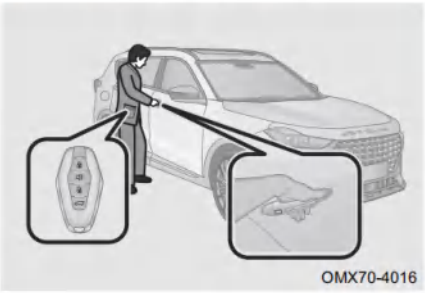
OMX70-4016

Touch the unlock sensing area with four fingers while carrying smart key on your person, system automatically recognizes the validity of smart key and doors unlock automatically.

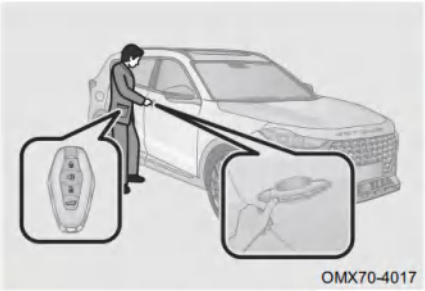
OMX70-4017

Touch the lock sensing area with fingers while carrying smart key on your person, system automatically recognizes the validity of smart key and doors lock automatically.

Polling Function (If Equipped)

Turn on the welcome mode through the audio system, turn vehicle power to OFF mode, all doors and back door are fully closed, and when you leave the vehicle with the smart key about 2.5 m , the door will automatically lock, the horn will sound twice, the turn signal light will flash twice, and the outside rear view mirror will automatically fold; When you approach the vehicle with the smart key about 1.5-2 m, the door will automatically unlock and the outside rear view mirror will automatically deploy.

READ

- Polling function will be turned off after the vehicle is locked for 3 days. Restarting the engine will restore the Polling function.
- Do not put smart key next to computer, cordless mouse, phone, etc. otherwise Polling function may not work properly.
- Do not use the smart key in places with strong signal interference such as mobile signal tower, otherwise the Polling function may not work properly.
- If smart key is brought about 2.5 m away from vehicle and turn signal lights do not flash and horn does not sound (successful arming prompted), inspect if the vehicle is locked to avoid locking failure caused by misoperation or unsatisfied condition.

Vehicle Arming

Arming operation

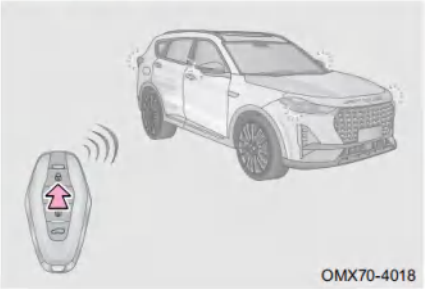
OMX70-4018

While vehicle power is switched to OFF mode as well as four doors and back door are closed, press the smart key lock button or touch the lock sensing area with fingers or leave the vehicle when carrying smart key on your person, the door will automatically lock and enter the arming status.

Successful arming prompt: Turn signal lights flash once and anti-theft horn sounds once.

Unsuccessful arming prompt: Turn signal light flashes twice.

■ Secondary arming mode

After deactivating vehicle arming, if four doors and back door are not operated, the vehicle will lock automatically and enter arming state after 30 seconds. If any of the four doors and back door are opened, the vehicle will exit secondary arming mode.

READ

- Arming prompt needs to be set in audio system (for details, refer to "Audio System").
- Vehicle arming cannot be set if vehicle power is not switched to OFF mode.
- If four doors are closed and back door is not closed completely, the central lock will lock once and vehicle arming is not set successfully.
- If back door is closed and any door is not closed, the central lock will lock and then unlock and vehicle arming is not set successfully.

Disarming operation

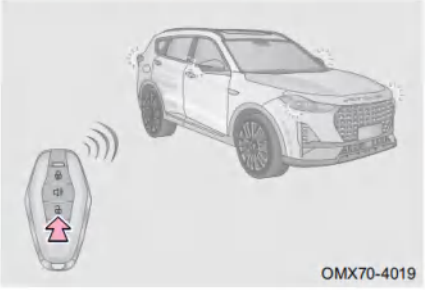
OMX70-4019

Press unlock button on smart key or touch the unlock sensing area with four fingers or approach vehicle while carrying smart key on your person, the system automatically recognizes the validity of smart key and doors unlock automatically, then vehicle exits from arming mode.

Immobilizer System

Engine immobilizer system

Smart key has a built-in transponder chip. If the smart key is not pre-matched into engine immobilizer module, the built-in chip will prevent engine from starting.

■ In the following conditions, the engine immobilizer system may not work properly:

1. Smart key is in contact with a metallic object.
2. Modify or remove engine immobilizer system.
3. Smart key is too close to or contacts smart key (key with a built-in transponder chip) of another vehicle.

⚠ CAUTION

- Do not match the smart key by yourself, otherwise the engine immobilizer system may not work properly.
- If the engine fails to start, but the starter works normally, it may be due to the interference of engine immobilizer system, please go to Jetour authorized service station immediately for inspection and repair immediately.

Vehicle anti-theft system

When vehicle is in arming mode and illegal entry is detected, the vehicle anti-theft system will send sound-light alarm, alerting owner that the vehicle is in an illegal opening state.

READ

- The vehicle anti-theft system will not be enabled if the doors are locked by mechanical key. It is recommended to lock doors by smart key.
- After locking doors with smart key, the vehicle anti-theft system will be triggered if front right door is unlocked and opened by mechanical key.
- When vehicle anti-theft system is triggered, vehicle anti-theft system can be deactivated by pressing unlock button on smart key or switching if the vehicle power to ON mode.
- To prevent unexpected triggering of vehicle anti-theft system or vehicle theft, before leaving the vehicle, check that nobody is in vehicle, all doors and windows are closed properly and vehicle is armed successfully.

3-2. Doors

Door Lock Switch

When doors are locked, press "🔓" switch to unlock doors.

When doors are unlocked, press "🔒" switch to lock doors.

READ

If vehicle speed is more than 20 km/h with four doors closed, the doors will lock automatically; Door automatic lock needs to be set in audio system.

Unlocking Doors with Inside Handle

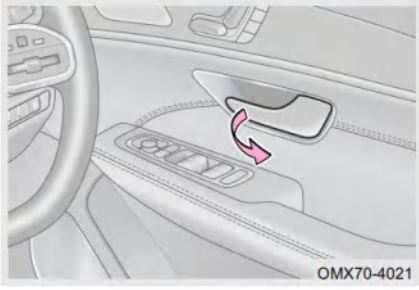

When doors are unlocked, pull door inside handle directly to open doors.

When doors are locked, pull door inside handle for the first time to unlock the doors, and pull it again to open the doors.

Door Mechanical Switch

Vehicle cannot be unlocked/locked electrically when battery is depleted or under similar conditions. In this case, the doors can be unlocked/locked with door mechanical switch.

Front right door

When unlocking front right door with mechanical key, the vehicle anti-theft system will be triggered; After triggering the vehicle anti-theft system, press the smart key unlock button or switch vehicle power to ON mode to deactivate vehicle anti-theft system.

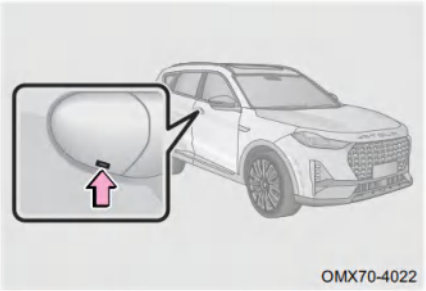
OMX70-4022

Step 1: Insert mechanical key into hole under front right door handle cover. Turn the key upwards to pry off the cover;

Step 2: Insert the mechanical key into the front right door key hole, turn the key clockwise to lock the door, and turn it counterclockwise to unlock the door.

Front right door/second row doors

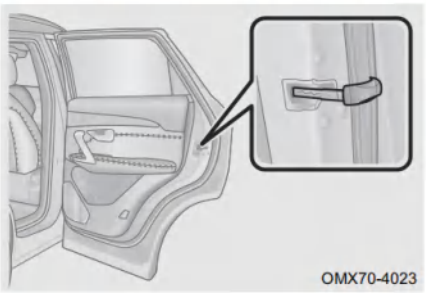
OMX70-4023

Insert the mechanical key into mechanical switch hole, rotate clockwise to lock the front right door/ second row door; rotate counterclockwise to unlock the front right door/second row door.

READ

- If the doors can not be unlocked/locked electrically, please go to Jetour authorized service station for inspection and repair as soon as possible.
- When using door mechanical switch, please check if the doors are locked successfully one by one after locking. If unsuccessful, please go to Jetour authorized service station as soon as possible.

Child Lock

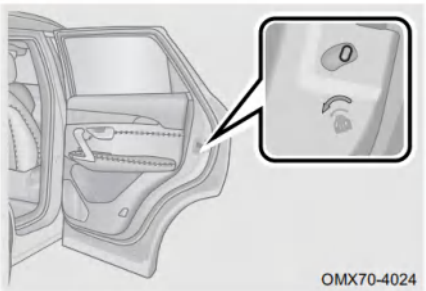
OMX70-4024

The child lock is located on inside of second row doors.

Lock: Move the lock lever in direction of arrow.

Unlock: Move the lock lever in opposite direction of arrow.

⚠ WARNING

- The system is independent and cannot replace the central lock mechanism in any case.
- Make sure that all doors are closed before driving, otherwise accidents and personal injury may be caused.
- When a child is seated on the rear seats, always lock the child lock to prevent the second row doors being opened accidentally while driving.
- In the case of an accident, when the child lock is activated and there is someone in vehicle, remember that, the second row doors can only be opened from outside.
- In hot weather, if vehicle stalls and all doors and windows close, do not allow any animal or child in vehicle alone. Otherwise, serious injury or even death may be caused by the sharp temperature rise even if it is a short time.

3-3. Windows

Power Windows

Usage methods

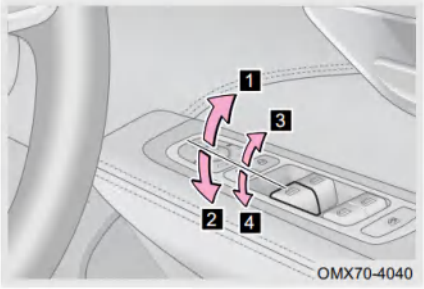

Operate power window switch after vehicle power is switched to ON mode:

1 Pull the switch to top to make window go up automatically; press it again to stop moving the window.

2 Press the switch to bottom to make window go down automatically; press it again to stop moving the window.

3 Pull the switch upwards by one level to make window go up; release the switch to stop moving the window.

4 Press the switch downwards by one level to make window go down; release the switch to stop moving the window.

READ

- Only vehicles with window jam protection function have one-touch window up function.
- At the moment of engine starting, window up and down operation will be suspended to provide large current for engine starting.
- If the door is not opened within 1 minute while vehicle power is switched to OFF mode, the power window can be operated.
- After leaving vehicle in low temperature environment for a long time, when operating power window switch, window glass cannot be fully opened or closed. In this case, release the switch and then operate it again, repeat this operation 3 - 5 cycles to resume.

⚠ WARNING

- To avoid personal injury, it is driver's responsibility to guide all passengers to operate power window up/down switch and especially to prevent children from using it incorrectly. Ensure that vehicle power has been switched to OFF mode or non-mechanical device is closed when leaving the vehicle.
- Take extra care when closing windows, failure to do so may cause serious jamming and injury! Models without window jam protection function, when window glass rises, passenger body may be caught, resulting in serious injury. For models with window jam protection function, jam protection function can be activated in jam protection area to protect passenger. However, for the thin or soft objects, jam protection function may not be activated, resulting in serious injury.

Passenger side window OFF switch

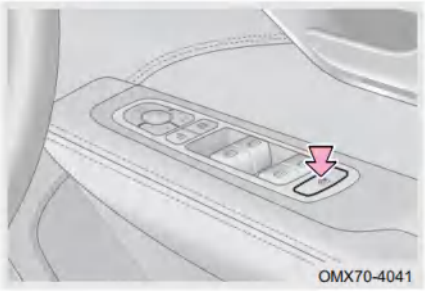

Press "" switch, passenger side window OFF switch indicator comes on. After disabling, passenger side windows only can be operated by driver side window switch (this function is recommended when there is a child in vehicle).

Window Remote Control Function

Remote control window down function

While vehicle power is switched to OFF mode, four doors are closed and unlock button on smart key is pressed and held, windows of four doors will go down automatically.

Remote control window up function (if equipped)

While vehicle power is switched to OFF mode, close four doors, press lock button on smart key, the vehicle will enter arming status and windows of four doors will go up automatically.

> ⚠ WARNING
>
> Before using remote control up window function, please take extra care. Remote control up/down window function can be used only when the vehicle can be seen clearly and make sure that passengers cannot be caught by window.

Window Jam Protection Function

In the effective area of jam protection function, when the window encounters obstacles during window auto up, the window will stop halfway and open slightly.

> ⚠ WARNING
>
> - Do not allow children to operate the power windows.
> - Do not activate jam protection function by intentionally clamping any part of body.
> - If an object is caught when the window is about to close completely, jam protection function may not work. Be careful not to let the window catch any part of body.

Jam protection function

During one-touch window up or remote control one-touch window up, if obstacle is encountered in jam protection area and resistance exceeds a certain value, window will stop rising and go down slightly. To close window, move away obstacle and operate again.

To protect the window regulation system, window jam protection function and one-touch window up function will be canceled in some conditions to avoid potential safety hazard. At this time, the window only has the conventional up-down function. After jam protection learning, the one-touch window up function of corresponding door will return to normal.

Canceling jam protection function

If obstacle is encountered twice continuously when rising the window, the window will stop rising, jam protection function will be canceled. If the battery cable is disconnected during working or non working process, jam protection function will be canceled.

Overheat protection function

To protect motor, if window up-down operation is performed continuously for 30 s, the thermal protection of window motor may be triggered. At this time,

the window up-down will be prohibited. Wait for 1min until the motor temperature returns to normal, the prohibition will be released, and the window up-down can be controlled by operating window regulator switch again.

Window jam protection self-learning

1. Switch vehicle power to ON mode.
2. Operate window switch manually to fully close the window and hold the switch for 2 seconds.
3. Release the switch.
4. Operate window switch manually to fully open the window and hold the switch for 2 seconds.
5. Release the switch.
6. Try to operate auto window up function.
7. If window cannot close automatically, please repeat the above steps to set. If automatic window up function cannot resume after repeating the above steps, please go to Jetour authorized service station for inspection and repair as soon as possible. Note: If window position memory setting is lost, it can also be set with remote control one-touch window up function. At this time, window will go down to bottom, then go up to top. Window if closed normally while setting is successful.

READ

When driving over roads with potholes or uneven surfaces, gravity may affect door system unexpectedly. In this case, window may reverse and go down while rising by one-touch window up function. This is a small probability event and normal.

CAUTION

- Frequent triggering of jam protection will lead to one-touch window up failure, so it is necessary to enable self-learning operation.
- If battery cable is disconnected and reconnected, automatic window up function and jam protection function will not work.
- Jam protection function is a kind of window safety protection function. Never try to active it repeatedly using various objects, in improper methods or even by intentionally pinching any part of your body. Failure to do so may cause damage to window regulation system mechanism or accidental personal injury.
- When closing window, always keep the window close area clear even if it is equipped with jam protection function, otherwise, if there is a thin object and system cannot sense it, jam protection will not work. If someone's hand or finger is caught, extremely serious injury may be caused.

3-4. Panoramic Moon Roof

Panoramic Moon Roof

Usage methods

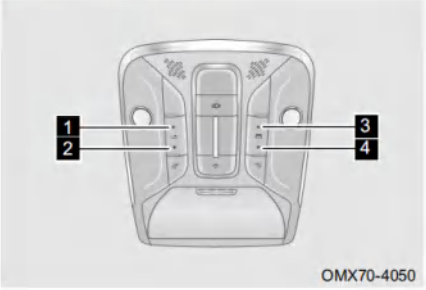

Operate panoramic moon roof switch after vehicle power is switched to ON mode:

Opening/closing sunshade

- When sunshade is closed, press "3" button, sunshade will slide to fully open position; press any button during sliding to stop the sunshade.
- When sunshade is open, press "4" button, sunshade will slide to fully close position; press any button during sliding to stop the sunshade.

Tilting up/closing moon roof

- When sunshade is closed, press "3" button, sunshade will slide to middle, moon roof will tilt up.
- When moon roof is closed, press "1" button, moon roof will tilt up.
- When moon roof is tilted up, press "2" button, moon roof will slide and close.

Opening/closing moon roof

- When moon roof is tilted up, press "1" button, moon roof will slide and open; press any button during sliding to stop the moon roof.
- When moon roof is open, press "2" button, moon roof will slide and close; press any button during sliding to stop the moon roof.
- When moon roof is open, press "4" button, moon roof will slide and close, then sunshade will slide and close.

⚠ CAUTION

- When moon roof is frozen or covered with snow, forcibly opening moon roof will damage the moon roof glass and motor.
- If there is water on moon roof after raining, always wipe off any water or tilt moon roof up to drain the water away before opening it, to prevent water from flowing into cab.
- Regularly clean the dust and debris in moon roof rails and strips with water; after vehicle washing or raining, completely wipe the water on the moon roof glass before use.

⚠ WARNING
Before closing moon roof, please take extra care. The vehicle should be seen clearly and make sure that passengers cannot be caught by it.

Moon roof remote control function

While vehicle power is switched to OFF mode and four doors are closed, press lock button on smart key, vehicle will enter arming mode and moon roof slides and closes.

Moon Roof Jam Protection Function

Jam protection function

When closing the moon roof glass, if there are obstacles, jam protection function activates and it will reverse and stop automatically, to prevent personal injury.

⚠ WARNING
Do not pass body parts or objects out of the moon roof during opening and closing, even if it is equipped with jam protection function.

Overheat protection function

If moon roof motor operates for a long period of time, the moon roof motor will continue to heat up and enter the thermal protection state after reaching a certain degree. At this time, pressing any button of the moon roof, it will not work. After stopping the work and waiting for its cooling, the thermal protection will be automatically released.

3-5. Audio System

Audio View

OMX70-4201

The application screen includes four modules: Media Center, Apple Carplay,Android Auto, Bluetooth Call, System Settings, AVM, Vehicle Settings and other applications.

READ

- For details about audio system, refer to the electronic manual in audio system.
- All display screens are for reference only, please refer to the actual vehicle display screen.

Electronic manual

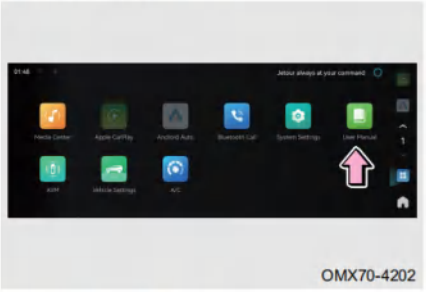

OMX70-4202

Click "Electronic Manual" in application screen to check the detailed operating instructions of the audio system.

Audio panel button

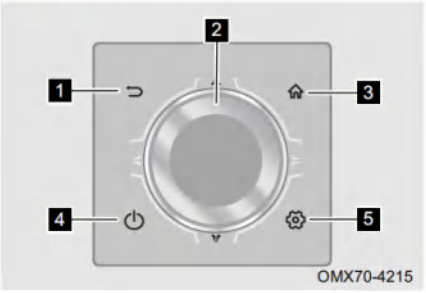

OMX70-4215

1 Back button

Shortly press to return to previous page.

2 Volume adjustment knob

Rotate counterclockwise to decrease volume and clockwise to increase volume;

Push upward to move the cursor upward; Push down to move the cursor down; Push left to move the cursor to left, push right to move the cursor to right, and shortly press to confirm the selection.

3 Home button
Shortly press to enter the main screen.

4 Audio switch button
Turn standby mode ON/ OFF.

5 Setting button
Shortly press to enter setting screen.

CAUTION

- Do not repair, disassemble or modify the head unit without authorization. If there is a malfunction, please contact Jetour authorized service station.
- Be careful not to spill drinks or other liquids on the audio system. If liquid or other objects enter the head unit, please disconnect power supply immediately and contact Jetour authorized service station.

Shortcut Menu

The audio system can be pulled down from the top of screen to enter the shortcut menu screen.

OMX70-4210

In the shortcut menu screen, users can adjust the media sound, Bluetooth, volume, brightness, Driving Mode, etc.

System Setting

OMX70-4211

- Turning on/off network.
- Bluetooth on/off, Bluetooth connection,
- Sound: Volume adjustment of media, telephone and navigation.
- Display: Adjust the screen brightness and set the screen display effect, etc.
- General: Set language, enable driving video recording, view version information, etc.

Vehicle Control

Commonly Used

OMX70-4217

Power Steering mode: Click to switch the steering wheel steering mode, Comfort/Sport.

Driving mode: Click to switch ECO/ Sport mode.

Exterior Rearview Mirrors Folded Automatically When Locked: ON/ OFF.

Tailgate: Slide to adjust trunk tail door height.

Exterior Lamp

OMX70-4218

Follow Me Home Delay: Set 30s/60s/ off.

Lane Change Flash Times: Set 3 times/5 times/7 times.

Emergency Stop Signal: ON/OFF.

Driver Assistance

OMX70-4219

Blind spot dmonitoring: ON/OFF.

Door opening warning: ON/OFF.

Rear collision warning: ON/OFF..

Vehicle settings

OMX70-4222

Intelligent high beam assist: ON/OFF.

Flameout unlock: ON/OFF.

Courtesy mode: ON/OFF.

Security reminder: Lights/Horns/Lights+Horns.

Mode button defintion: Audio source swithing/Enable AVM.

READ

The setting items are different depending on the configuration of the vehicle. Please refer to the actual vehicle configuration.

Voice Assistant

When the multimedia display is turned on, use following methods to wake up the voice assistant:

Method 1: Directly say "Hello, Jetour" to wake up the voice assistant.

Method 2: Click the voice assistant module on display screen to wake up the voice assistant.

Method 3: Press the button "" on steering wheel to wake up the voice assistant.

READ
All display screens are for reference only, please refer to the actual vehicle display screen.

Phone-link (If Equipped)

CarPlay

■ Wired connection

1. Connect phone and USB port on the vehicle with original data cable;
2. Click to CarPlay button to enter the main screen of CarPlay.

■ Wireless connection (If Equipped)

1. Turn on Bluetooth in iPhone and CarPlay switch, and then turn on Bluetooth in multimedia display;
2. Match and connect Bluetooth in phone and Bluetooth in multimedia display. When a prompt box pops up on phone for the first connection, please select to use Carplay;
3. After Bluetooth pairing is successful, a prompt indicating whether to use Apple Carplay function pops up on the multimedia display. Click OK.

READ
After the wireless connection is successful, Carplay icon is in the highlighted state, and Bluetooth icon will display in gray disconnected state, which is a normal phenomenon.

Android Auto

■ Wired connection

1. The phone needs to install Android Auto from the Google Store in advance;
2. Connect phone and USB port on the vehicle with original data cable;
3. When a prompt box pops up on multimedia display for the first connection, please select to use Android Auto;
4. Enter the Android Auto screen after the connection is successful.

■ Wireless connection (If Equipped)

1. The phone needs to install Android Auto from the Google Store in advance;
2. Turn on Bluetooth in phone and Bluetooth in multimedia display;

3. Match and connect Bluetooth in phone and Bluetooth in multimedia display. When a prompt box pops up on multimedia display for the first connection, please select to use Android Auto;
4. After Bluetooth pairing is successful, Android Auto will automatically connect, and enter Android Auto screen.

READ

When the mobile phone is connected to Android auto, if the mobile phone does not support the multimedia display to obtain call status, the multimedia display does not pop up an incoming call notification when answering an incoming call. If the mobile phone supports the multimedia display to obtain call status, the multimedia display pops up an incoming call notification when answering an incoming call.

3-6. Air Conditioning System

Electric A/C

Front temperature control

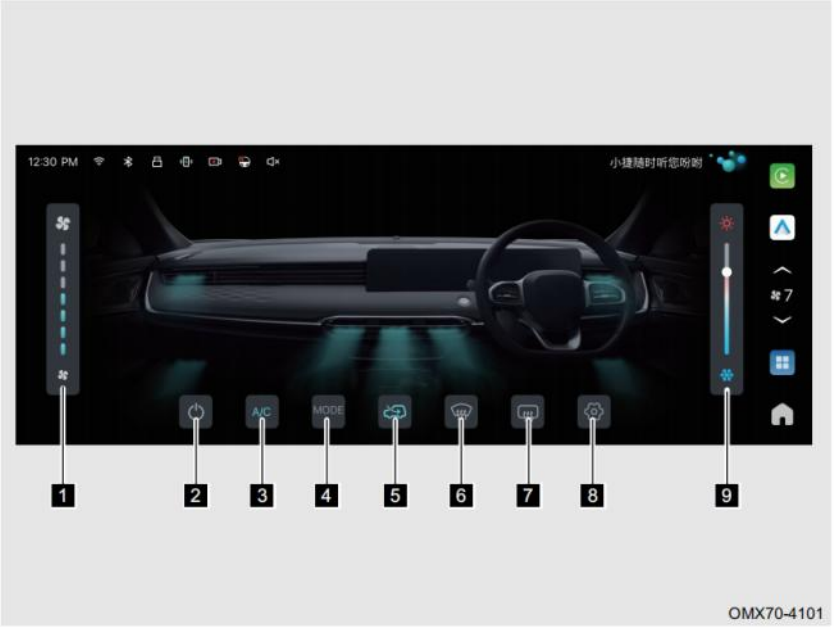

OMX70-4101

1 Front passenger adjustment temperature
2 A/C switch button
3 A/C button
4 Dual mode button
5 Outside/recirculated air mode button
6 Front defrosting button
7 Rear defrosting button
8 Setting button
9 Front passenger adjustment air volume

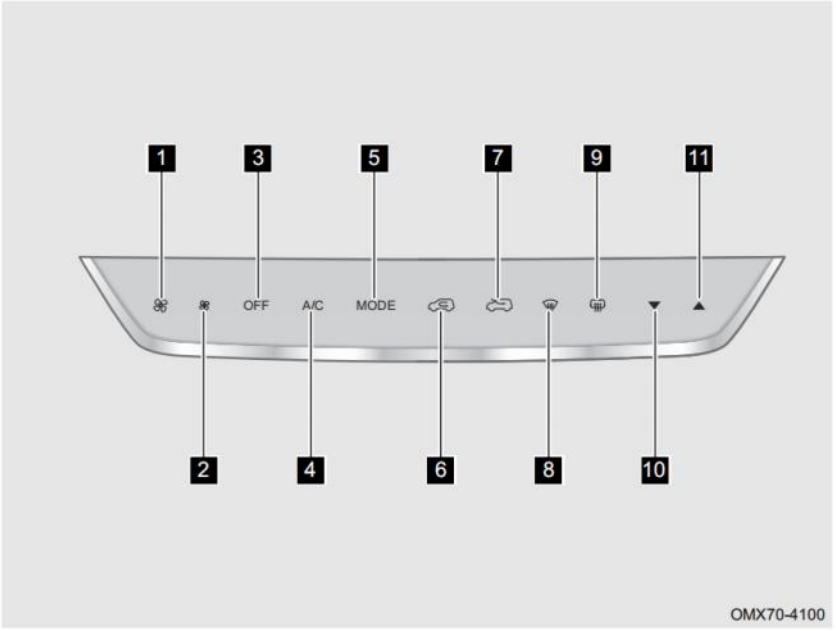

1 Air speed increasing button
2 Air speed decreasing button
3 A/C switch button
4 A/C button
5 Mode adjustment button
6 Recirculated air button
7 Outside air button
8 Front defrosting button
9 Rear defrosting button
10 Temperature decrease button
11 Temperature increase button

Setting

OMX70-4104

Screen brightness: Slide to adjust the brightness of front air conditioning panel.

Global gesture: Turn on/off two fingers to slide up and down to adjust temperature and air volume.

A/C cleaning after locked: ON/OFF.

Bluetooth Call Noise Reduction: ON/OFF

Hot Air Avoidance in Summer: ON/OFF.

Air Conditioning Operation

Temperature adjustment/Airflow volume adjustment

Turn vehicle power to ON mode, click air volume mode "" to switch to temperature mode ""; click temperature mode "" to switch to air volume mode "".

Temperature adjustment: Turn temperature adjustment knob clockwise to increase temperature, turn it counterclockwise to decrease the temperature.

Airflow volume adjustment: Turn airflow volume adjustment knob clockwise to increase the volume, turn it counterclockwise to decrease the volume.

Outside/recirculated air mode button

Turn vehicle power to ON mode, click outside/recirculated air mode button, indicator comes on, indicating in recirculated air mode; indicator goes off, indicating in outside air mode.

■ Use the recirculated air mode under following conditions:

1. In dusty environment.
2. To quickly cool the air in the vehicle.
3. Keep out smells from exterior.
4. To prevent outside exhaust gas from entering vehicle.

⚠ CAUTION

- Continuous use of the recirculated air mode may increase the temperature in vehicle and the window becomes fogging. Therefore, the recirculated air mode can be used only for a short period of time.
- Do not smoke in recirculated air mode, because the smoke will accumulate on the evaporator and the air inlet filter, resulting in unpleasant odors, which is difficult to remove. When using the outside circulation, in sand-wind weather, please switch to recirculated air mode to prevent dust from entering the A/C system and clogging the A/C filter element.

AUTO button

When vehicle power is switched to ON mode, click AUTO button, indicator comes on, indicating in AUTO mode; indicator goes off, indicating in Manual mode.

A/C switch button

When vehicle power is switched to ON mode, click A/C switch button, indicator comes on, indicating that the air conditioning is allowed to turn on; indicator turns off, indicating that the air conditioning is turned off directly.

A/C button

When vehicle power is switched to ON mode, click A/C button, indicator comes on, indicating A/C compressor is turned on to realize air conditioning cooling; indicator turns off, indicating that A/C compressor is turned off to stop air conditioning cooling.

READ

- Air conditioning compressor does not operate when airflow volume is turned off.
- Before turning off the engine, if the air conditioning cooling mode is turned on, turn off the air conditioning before turning off the engine. Because the air conditioning has a memory function, the air conditioning will automatically turn on when it is started again, increasing engine load.

Front defrosting button

When vehicle power is switched to ON mode, click front defrosting button; indicator comes on, indicating that front windshield defogging and defrosting function is turned on; indicator turns off, indicating that front windshield defogging and defrosting function is turned off.

Front windshield defogging and defrosting: Adjust airflow to make most of it blow to front windshield and small amount of it blow to side window.

For the best defogging and defrosting effect, please operate as follows:

Step 1: Before driving, make sure that the inner surface of glass is clean and dry, if there is obvious dust or water drop, it is necessary to wipe off;

Step 2: Adjust air volume to the max level;

Step 3: Adjust temperature to comfortable temperature;

Step 4: Adjust mode to defrosting mode or defrosting/foot mode.

READ

- If the A/C fails to cool, the defogging effect will be affected. Please go to Jetour authorized service station for inspection and repair as soon as possible.
- When defogging in humid climate (such as rain and snow), please keep A/C on. If A/C is off, the defogging effect will be affected.
- When defogging in humid climate (such as rain and snow), please keep in outside air mode. If recirculated air mode is selected, the defogging effect will be affected.
- After defrosting or defogging, adjust mode and airflow volume to proper position to improve comfort in vehicle.
- When defogging in winter, please keep in outside air mode. To adjust to the direction of partial heat, make air outlets on both sides of the instrument panel face the both sides of windows; when outside temperature is above 0℃, A/C auxiliary defogging is needed.

⚠ CAUTION

- For driving safety, please use the defogging function correctly.
- Do not use recirculated air mode for a long time in winter, otherwise the front windshield will be fogged up quickly.
- Poor glass visibility will increase the risk of traffic accidents and personal injury. Therefore, it is very important for traffic safety to ensure a good visibility during driving.

Rear defrosting button

When vehicle power is switched to ON mode, click rear defrosting button, indicator comes on, indicating that defrosting function of rear windshield/outside rear view mirror is turned on, and it will automatically turn off after operating for about 15 minutes; indicator turns off, indicating that defrosting function of rear windshield/outside rear view mirror is turned off.

⚠ CAUTION

- Do not scratch or damage the heater wires when cleaning the rear windshield/outside rear view mirror.
- When the battery is low, the rear windshield/outside rear view mirror defrosting function may not be turned on to ensure the normal starting of vehicle.
- Make sure that the defrosting function of rear windshield/outside rear view mirror is turned off after defogging or defrosting the rear windshield/outside rear view mirror surface.

⚠ WARNING
To prevent burning yourself, do not touch the rear windshield/outside rear view mirror when the defrosting function of rear windshield/outside rear view mirror is operating or immediately after being turned off.

Mode adjustment button

Turn vehicle power to ON mode, click mode adjustment button to adjust air outlet.

Face mode: It can adjust airflow blowing out from center and face outlets on both sides.

Face/foot mode: It can adjust airflow blowing out from center outlet, face outlets on both sides and foot outlet.

Foot mode: It can adjust airflow blowing out from foot outlet.

Defrosting/foot mode: It can adjust airflow blowing out from defrosting outlet and foot outlet.

READ
If windshield glass become fogged-up during driving, defrosting mode is recommended. For details, refer to Front Defrosting Button.

Air Conditioning Cooling Operation

Start the vehicle and realize the air conditioning cooling by setting the temperature, air speed, outside/recirculated air mode and starting the A/C compressor.

For the best cooling effect, please keep the surface of A/C filter clean without obvious blockage, then operate as follows:

Step 1: Adjust air volume to the maximum level;

Step 2: Adjust temperature to Max Cool;

Step 3: Adjust outside/recirculated air mode to recirculated air mode;

Step 4: Adjust to face mode;

Step 5: Turn on the refrigeration system (A/C compressor is turned on, A/C indicator comes on).

READ

- Dirt and blockage in the surface of air conditioning condenser may cause poor cooling effect, please keep condenser clean.
- When air cools down quickly in hot and humid conditions, the fog may be seen from outlet, which is a normal physical phenomenon.
- When the temperature is low, such as in winter, the A/C compressor may not be started even if indicator comes on after operating A/C button.
- After the A/C system cooling operation, some water may drip from the air conditioning drain pipe and form a pool under vehicle, which is normal.
- Refrigerant filled in air conditioning system will decrease over time, if you feel that the refrigeration effect of air conditioning becomes poor, please go to Jetour authorized service station for inspection and repair in time.
- It is recommended to turn on the air conditioning refrigeration system for 5 minutes or more every month and open the window simultaneously, which will be helpful to prevent air conditioning system damage due to lack of lubricant, and also prevent evaporator odor due to moist and germs.
- If air conditioning is on and vehicle is continually climbing long slopes, or is in heavy slow moving traffic for a prolonged period, the engine may become overheated. Please observe the high coolant temperature warning light. If engine overheats, it is recommended to turn off air conditioning.
- After temperature in vehicle decreases to lower temperature, to reduce the influence on power of power system and fuel consumption, compressor will turn off automatically, therefore, when using air conditioning in spring and autumn seasons with low temperature, the compressor will be turned on or off automatically, this is normal.
- During sudden acceleration, overtaking and climbing, power system needs more power for compensation. At this time, if the air conditioning is operating, the compressor may be turned off automatically, if it does not turn off automatically and you feel it is lack of power, it is recommended to turn off air conditioning.

⚠ WARNING

- Only use the special refrigerant and compressor lubricant recommended by Chery Commercial Vehicle Co., Ltd.
- To extend service life of air conditioning system, do not use the air conditioning for a long time with low speed when performing air conditioning cooling.
- It is forbidden to repair air conditioning system by yourself, as the high pressure refrigerant in air conditioning system is harmful to human. It is necessary to go to Jetour authorized service station for inspection and repair.
- In hot weather, the temperature in closed vehicle will quickly increase due to sunshine, this may cause personal or animal injury or even death, especially for infants and very young children.

Air Conditioning Heating Operation

Start the vehicle and realize the air conditioning heating by setting the temperature, air speed, outside/recirculated air mode and turning off the A/C compressor; it is recommended to adjust mode to foot mode and turn off refrigeration system (A/C compressor turns off).

Air Outlets Airflow Control

Center outlets

Move center outlet adjustment lever up and down, left and right by hand to adjust direction of airflow.

Side outlets

Move left/right side outlet adjustment lever up and down, left and right by hand to adjust direction of airflow.

Armrest outlets

Move armrest box outlet adjustment lever up and down, left and right by hand to adjust direction of airflow.

3-7. Wireless Charging

Wireless Charging (If Equipped)

Wireless charging uses electromagnetic induction technology conveniently and safely to allow for a better experience while driving.

Usage methods

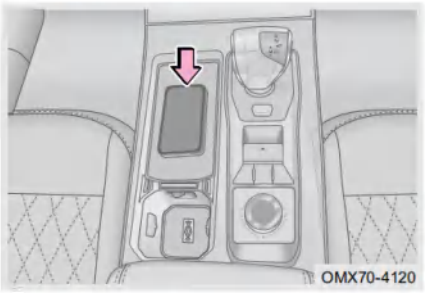

While vehicle power is switched to ON mode, the wireless charging starts to work after putting the mobile phone in wireless charging sensing area, " " indicator of instrument cluster is always on; In case of wireless charging failure, " " indicator of instrument cluster is always on.

■ In the following conditions, the wireless charging may not work properly:

1. The mobile phone does not fully fit with the wireless charging sensing area, and the mobile phone cannot be charged.
2. The back of mobile phone is not placed in the center of wireless charging sensing area, and the mobile phone cannot be charged.
3. If there are metal foreign matters (such as coin, metal mobile phone case, etc.) between mobile phone and wireless charging sensing area, and the mobile phone cannot be charged.
4. When the surface temperature of wireless charging sensing area is too high due to sun exposure, the wireless charging module will trigger self-protection and the mobile phone cannot be charged.

READ

- Wireless charging function only supports mobile phones with wireless charging function.
- Please put the mobile phone in the center of the mobile phone slot. If you accelerate, decelerate or turn sharply during driving, the mobile phone will shake, which may affect the charging efficiency and stability.

⚠ CAUTION

- In the process of normal use of the vehicle, there will be a temporary charging shielding, so that vehicle may identify the smart key.
- If your mobile phone does not support the wireless charging function, it is recommended that do not use the wireless charging patch. The quality of the wireless charging patch in the market is uneven, and damage may be caused if using frequently (such as function failure, poor interface contact, metal foreign object recognition failure).

3-8. Storage Space

Storage Space

Glasses box

Glasses box is near front interior light closely. It can be used to store glasses or other small items.

Door storage boxes

Storage boxes on front and the second row doors can be used for storing maps, cups and others items.

Glove Box

Glove box is used to store map, instructions and other items.

⚠ WARNING

Before driving, make sure that the glove box is closed in place. Otherwise in case of emergency braking or emergency steering, it may cause accidents and serious injury or even death.

Armrest box on auxiliary fascia console

Armrest box on auxiliary fascia console is used to store maps, instructions and other items.

⚠ WARNING

- Adults or children are not allowed to sit on the armrest box on auxiliary fascia console.
- Armrest box on auxiliary fascia console must be closed when the vehicle is running, and the opening armrest box on auxiliary fascia console may hinder the driver's arm movement to prevent injury.

Seat storage bag

Front seatbacks are both equipped with storage bags on backside, which are used to store documents, instruction etc.

Fold-down armrest

The second row of seats are equipped with fold-down armrest, which can be used by turning down the armrest. Please return the armrest to its original position when not in use.

Luggage compartment

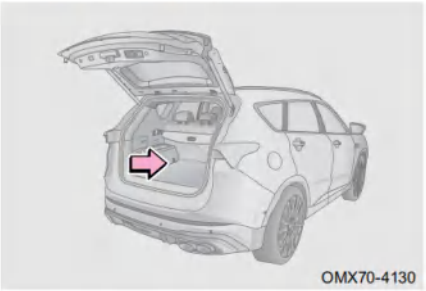
OMX70-4130

To enlarge space for stowing luggage, the rear seats can be folded when no passenger in seats, for details, refer to "Seats".

■ When stowing luggage in the vehicle, observe the following precautions:

1. Be careful to keep the vehicle balanced.
2. For better fuel economy, do not stow unneeded items.
3. Make sure that the stowing items are not oversize to prevent the back door from closing properly.

⚠ WARNING

- Do not drive the vehicle with the back door open or not closed, to prevent items from being thrown out to cause personal injury.
- Do not allow anyone to sit in the luggage compartment. The passengers should sit in their seats with their seat belts properly fastened. Otherwise, they may be seriously injured in event of sudden braking or a collision.
- Do not stack goods or luggage higher than seatback. Keep them low, as close to the floor as possible to prevent them sliding forward in event of braking, causing personal injury.

Luggage curtain (if equipped)

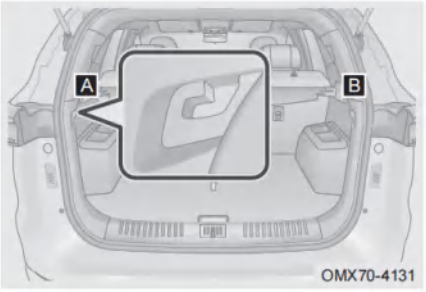

OMX70-4131

Pull the luggage curtain to the slots of point A and point B to secure it, and confirm if it is secured properly.

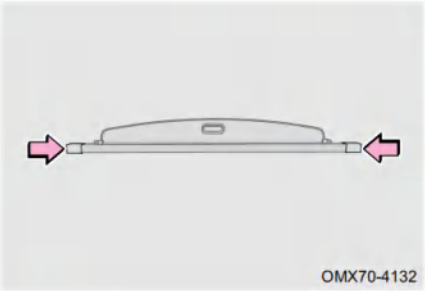
OMX70-4132

Push the two ends of the luggage curtain inward to remove/install the curtain. After the curtain is removed, it can be placed in the luggage compartment.

READ

Do not place any object on luggage curtain, otherwise, it may result in luggage curtain damage.

Carrier

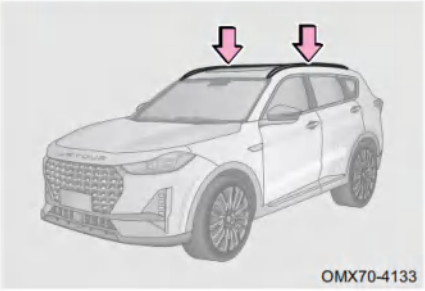
OMX70-4133

Roof carrier is used for loading cargo. Be sure that the weight of the loading cargo on the carrier or loading tool (such as luggage compartment, cross rod) does not overweight. Overweight will cause carrier, moon roof glass, body roof and other components to be damaged, the various problems caused by overweight are not under the warranty.

CAUTION

- For details of carrying capacity of carrier, please consult Jetour authorized service station.
- Never allow the loaded long or wide cargoes to exceed the overall length or width of the vehicle.
- Before driving, make sure the cargo is securely attached to the roof carrier. Blankets or other protection items can be placed between the cargo and the roof. Be careful not to scratch the roof surface.

WARNING

- Apply loads evenly. Improper loading may cause deterioration of steering or braking control, which may cause serious injury or even death.
- Loading cargo on carrier will raise the vehicle center of gravity. Avoid high speeds, sudden starts, sharp turns, sudden braking or abrupt maneuvers, otherwise it may result in loss of control or vehicle rollover due to failure to operate vehicle.

3-9. Power Outlet and USB Port

Power Outlet

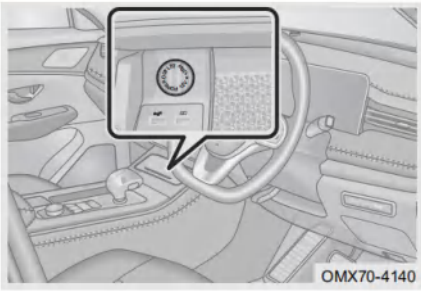

Front power outlet is located on the front end of auxiliary fascia console.

Power outlet can be used only when vehicle power is switched to ACC/ON mode.

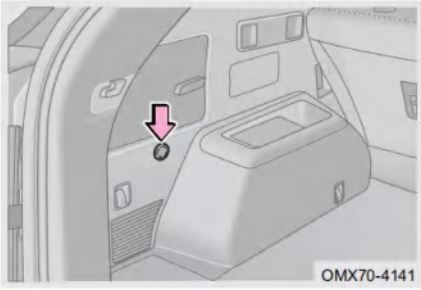

Rear power outlet is located on the left side of luggage compartment.

Power outlet can be used only when vehicle power is switched to ACC/ON mode.

⚠ CAUTION

- To prevent the fuse from being blown, do not use electrical equipment with high power (120W or more).
- To prevent the battery from depleting, do not use the power outlet longer than necessary when the engine is not running.
- Do not insert anything or allow any liquid to get into the outlet other than an appropriate plug, as this may cause electrical failure or short circuits.

USB Port

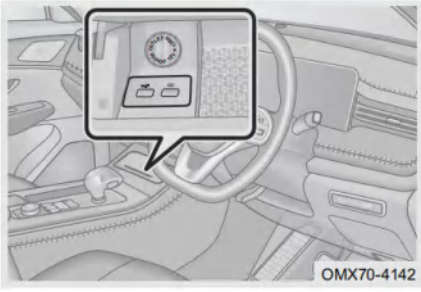

Front USB port is located on the front end of auxiliary fascia console.

Type-A port "•⇐": It can be used for phone-link function, reading U disc and charging the electrical equipment with low power, such as phone etc.

Type-A port "⊡": Fast charging is supported.

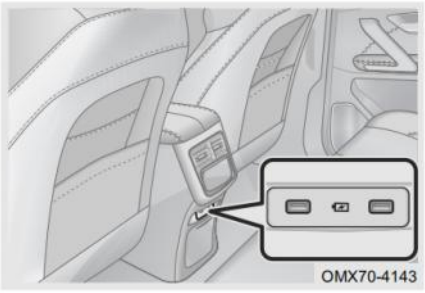

Rear USB port is located under the rear air outlet of center armrest box.

Type-A port "⇦": Fast charging is supported.

Type-C port "⇦" (if equipped): Support regular brand mobile phones and tablet computers (current ⩽ 3A) for charging; support the fast charging for regular brand notebook computers.

3-10. Sun Visors and Vanity Mirrors

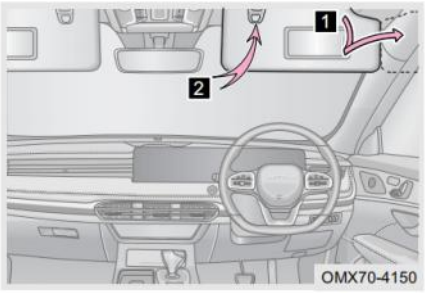

Horizontally move the vanity mirror sliding plate to use the vanity mirror. For vehicle equipped with vanity mirror light, the corresponding vanity mirror light will come on when moving the vanity mirror sliding plate.

1 Flip the sun visor down.

2 Detach the hook and turn it outward to shade the sidelight.

⚠ CAUTION

- When the sun visors are not in use, always stow it inside the fixing unit, the sun visors flipped down reduces the visibility.
- Do not place hard items such as CD and metal cards behind the sun visors, preventing these items from injuring people in the vehicle during vehicle accidents.

3-11. Hood

Opening/Closing Hood

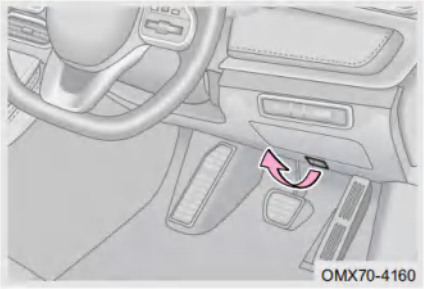

Step 1: The hood will spring up slightly when the hood release lever is pulled twice;

Step 2: Lift the hood up and lift and support the hood under action of the air spring;

Step 3: Lower the hood and close it until the latch is locked;

Step 4: After closing the hood, lift the hood lightly to check that hood is fully closed. The properly locked hood should be very stable and flush with the surrounding body.

⚠ CAUTION

- Before closing the hood, check if you have not left any tools, rags etc. in the engine compartment.
- When closing the hood, do not press it by hand, otherwise it may be deformed.
- Make sure that hood is closed before driving, otherwise accidents and personal injury may be caused.
- After the engine has been running for a period of time, when opening the hood, it is recommended to wear gloves to prevent scalding due to the temperature rise in the hood.

3-12. Back Door

Power Back Door (If Equipped)

For your convenience, power back door can be opened/closed in various ways (such as driver door switch, back door exterior switch, back door interior switch, smart key remote control), also achieve height adjustment function, let you fully feel the convenience of power back door.

Smart key remote control

Long press back door opener button on smart key to open/close power back door; During the movement of power back door, shortly press back door opener button on smart key to suspend the action of power back door.

Driver door switch

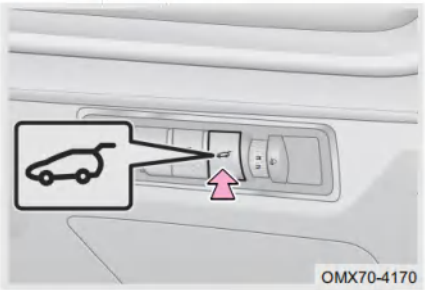

Long press driver door switch "", power back door will be opened/closed.

When the power back door is moving, press driver door switch "" to suspend the action.

Back door exterior switch

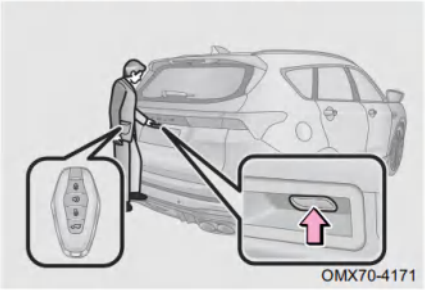

Method 1: With central control lock unlocked, approach the back of vehicle and press exterior switch on the back door and power back door will be opened/closed.

Method 2: With central lock locked, approach to back of vehicle while carrying smart key on your person and press back door exterior switch and power back door will be opened/closed.

READ

When the vehicle power is turned to ACC/ON mode and the central control lock is locked, please unlock the central control lock first, and then open it with back door exterior switch.

Back door interior switch

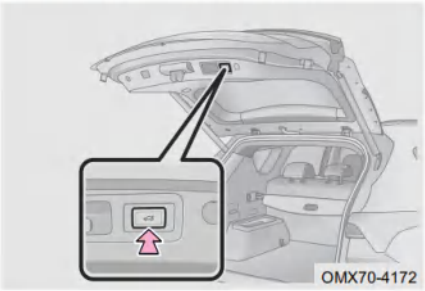

When the power back door is open, press back door interior switch "" to close power back door.

When the power back door is moving, press the back door interior switch "" to suspend the action of the power back door.

After the power back door is opened, adjust it to your desire height; long press "" switch until the vehicle gives a light prompt, and the power back door opening height is set successfully.

READ

- Power back door opening height can also be set in audio system. For details, refer to "Audio System".
- If the back door opening height is too low or too high, the back door opening height cannot be set.
- Smart key sensing back door open function is turned off after 3 days since vehicle is locked, restarting the engine will resume the function.
- Do not put smart key next to computer, cordless mouse, phone, etc. failure to do so may cause the power back door being unable to sense opening/closing.
- When any switch (such as power back door switch, power back door button, back door open button) is activated during the movement of the power back door, the back door will stop moving.

⚠ CAUTION

- When the back door is abnormal, please go to Jetour authorized service station for inspection and repair as soon as possible.
- When the power back door opens, do not pull electric support rod laterally, which may cause damage to related parts.
- Before driving, make sure that the back door is closed properly, otherwise it may cause accidents and damage to related parts.
- Before opening the power back door, be sure to note that there should be nothing in the opening range, which could result in scratching the back door.
- When closing the back door, make sure that nobody will be caught. If closing is interrupted, close it again.
- When the power back door is opened to the highest position, it cannot be pushed or supported by hand to higher place, as this may cause damage to related parts.
- When closing power back door by hand, please operate gently. Never operate with brute force, failure to do so may cause damage to motor and module.
- When going uphill or downhill, due to change in the center of gravity, the power back door may not open or close. This is normal. Open or close it by hand.
- If the battery cable is disconnected and reconnected, the power back door needs to be manually closed to locked position at a constant speed, and then press the power back door switch to open/close the power back door normally.

⚠ WARNING
Make sure that the back door is closed before driving, otherwise, accidents and damage to related parts may be caused.

Power back door jam protection function

Positive jam protection: When power back door is opening, if it encounters resistance (such as wall, obstacle), the back door positive jam protection works to avoid vehicle damage.

Reverse jam protection: When power back door is closing, if it encounters resistance (such as children, luggage), the back door reverse jam protection works to avoid child injury and vehicle damage.

⚠ WARNING
Although the power back door is equipped with jam protection function, do not activate jam protection function on purpose to avoid accidental injury.

Continuous action/jam protection

In order to avoid pull-in the lock motor and electric strut motor are overheated and damaged by frequent operation of power back door system; after pressing the button for 8 times in 30 seconds to electric open/close, the electric function will be disabled and resumed after 30 seconds.

During opening and closing, jam protection occurs 8 times in a row, the electric function is disabled, and the back door is closed to the fully locked position by hand to resume the electric function.

Manual learning

After power is off, the power back door needs to be learned manually. Close back door to lock position, press back door exterior switch, and wait for the back door to open to the maximum position, which means the learning is successful.

Back Door Emergency Opening

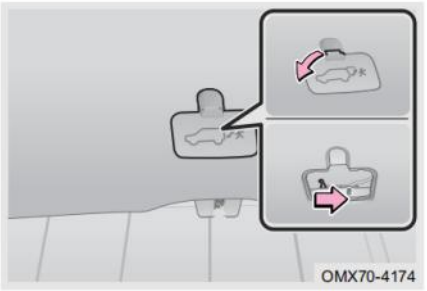

Back door cannot be opened when battery is depleted or under similar conditions. In this case, open the back door with back door emergency device switch (stop the vehicle as safely as possible if condition permits).

Step 1: Fold the rear seatback;

Step 2: Get in the rear of vehicle and open emergency device cover;

Step 3: Move the emergency device switch to right with hand and then release it, then push the back door to open it.

3-13. Fuel Tank Cap

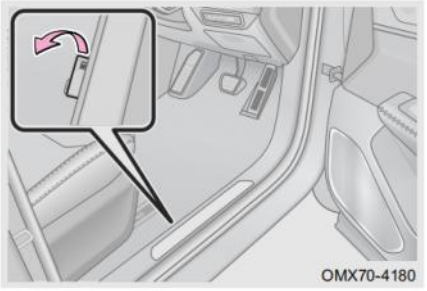

Step 1: Pull fuel tank cap handle, and fuel tank cap will pop out;

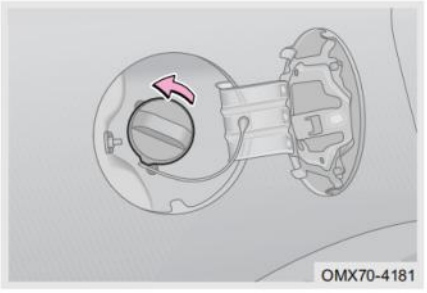

Step 2: Turn fuel filler cap counterclockwise to remove it;

Step 3: After refueling, turn fuel filler cap clockwise until a "click" sound is heard.

Step 4: Close fuel tank cap.

READ
Fuel may pollute environment. Therefore, the sprayed fuel should be collected and disposed by a professional.

⚠ CAUTION

- Never add diesel to fuel tank.
- After fuel filler cap is tightened firmly, loose your hand and the cap will turn slightly in the opposite direction. This is normal.
- To prevent damage to the cap, apply force only in the direction of rotation. Do not pull or pry the cap.
- A slight whooshing sound may be heard when the fuel tank cap is opened, this is normal.
- If fuel overflows during refueling, wipe it off immediately to avoid damage to vehicle paint surface.
- During using, if fuel tank cap is not closed, drive vehicle to a safe area and stop it, then close the cap again.

⚠ WARNING

- Before refueling, turn ENGINE START STOP switch off and close all doors and windows.
- Do not inhale vaporized fuel, as the fuel contains substances that are harmful for the health.
- Make sure that the fuel filler cap is tightened securely, to prevent accident caused by fuel spillage.
- As gasoline is extremely flammable, smoking is prohibited when refueling, and there must be no other sparks or open flames.
- Do not remove the fuel filler cap quickly when opening it. In hot weather, if cap is removed suddenly, high-pressed fuel vapor may be ejected from the filler neck and cause personal injury.
- After exiting the vehicle and before opening the fuel tank cap, touch an unpainted metal surface to discharge any static electricity. It is important to discharge static electricity before refueling, because sparks resulting from static electricity can cause fuel vapors to ignite while refueling.
- Do not attempt to continue to refuel after the fuel gun is automatically turned off! Otherwise, the fuel tank may be too full, causing fuel to overflow the fuel tank, which can easily cause fire, explosion and serious injury.

4-1. Vehicle Power Mode

ENGINE START STOP Switch 106

4-2. Starting and Turning off Engine

Normal Starting and Turning Off..... 107

Starting and Turning off in Emergency 108

Adaptive Engine Control System..... 109

limphome function..... 109

4-3. Gasoline Particulate Filter (GPF)

Gasoline Particulate Filter (GPF) (If Equipped) 110

4-4. Transmission

Automatic Transmission.... 110

4-5. Steering System

Electric Power Steering System (EPS)..... 113

4-6. Brake System

Electric Parking Brake System (EPB)..... 114

Automatic Parking System (AUTO HOLD)..... 116

Vacuum Booster 118

Foot Brake 118

4-7. Anti-lock Brake System (ABS)

Anti-lock Brake System (ABS) 120

4-8. Vehicle Body Dynamic Electronic Stability Program System

Vehicle Body Dynamic Electronic Stability Program System 122

Extended Function 124

4-9. Airbag (SRS)

Airbag (SRS) 125

4-1. Vehicle Power Mode

ENGINE START STOP Switch

When the system detects the legal smart key and the brake pedal is released, press the ENGINE START STOP switch to switch the power mode of vehicle, each time the ENGINE START STOP switch is pressed, the mode is switched once (OFF - ACC - ON - START).

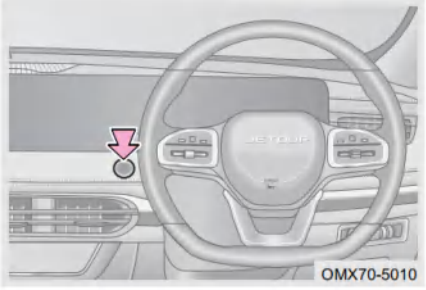

OFF mode (indicator does not come on): All electrical appliances turn off.

ACC mode: Part of electrical appliances can be used.

ON mode: All electrical appliances can be used.

START mode: With vehicle power in ACC/ON mode, depress the clutch pedal and shift the gear position to neutral (for M/T models) or depress the brake pedal and shift the gear position to P (for A/T models), the power of vehicle is switched to START mode and the engine can be started by pressing the ENGINE START STOP switch.

READ

If ENGINE START STOP switch is not pressed properly, vehicle power mode will not be switched or engine cannot be started.

⚠ CAUTION

- When engine is running, if smart key is removed, engine will not turn off automatically.
- When engine is not running, switch the vehicle power mode to OFF mode to prevent the battery from depleting.
- When engine is running, if shift lever is shifted to R/N/D, turn off the engine and vehicle power will be switched to ACC mode other than OFF mode. Shift the shift lever to P, vehicle power will be switched to ON mode, and press ENGINE START STOP switch again to switch it to OFF mode.

4-2. Starting and Turning off Engine

Normal Starting and Turning Off

Before starting engine

Step 1: Check surroundings of vehicle before getting in;

Step 2: Adjust seat position, seatback angle, head restraint height and steering wheel angle;

Step 3: Adjust angles of the inside and outside rear view mirrors;

Step 4: Turn off any unnecessary lights and electrical appliances;

Step 5: Fasten the seat belts;

Step 6: Confirm that the parking brake is applied;

Step 7: Shift transmission gear to neutral (for M/T models) or shift transmission gear to P (for A/T models);

Step 8: Vehicle power switches to ON mode, check if malfunction indicator and other indicators on meter are normal; if they are abnormal, please go to Jetour authorized service station immediately for inspection and repair;

Starting engine

Smart key is carried on body or put it into vehicle, and it can be detected normally:

Step 1: With vehicle power in ACC/ON mode, depress the clutch pedal and shift the transmission gear to neutral (for M/T models) or depress the brake pedal and shift the transmission gear to P (for A/T models);

Step 2: With vehicle power turned to START mode, press ENGINE START STOP switch to start the engine.

READ
When operating ENGINE START STOP switch, one short, firm press is enough.

After starting engine

Engine idle speed is controlled by electronic control system. When engine is started, high speed can help to increase engine temperature, this is normal. After engine temperature increases, speed will automatically decrease to normal speed. If not, please contact Jetour authorized service station for inspection and repair immediately.

⚠ WARNING

Exhaust gas contains harmful substances which may lead to a serious health hazard when inhaled. Use the following methods to avoid inhaling exhaust gas:

- Do not run the engine for a long time in an unventilated area, such as in a garage, etc.
- When running engine in a ventilated area, someone should control engine in vehicle, switch air conditioning to outside air mode, and set high blower speed.

Turning off engine

Step 1: Stop the vehicle and apply parking brake;

Step 2: Shift the shift lever to P, press ENGINE START STOP switch to turn off the engine;

Step 3: Check that engine is turned off.

⚠ CAUTION

- Do not depress accelerator pedal before engine is turned off.
- After driving at high speed for a long time, engine temperature will be high. Do not turn off engine immediately when stopping vehicle. Allow the engine to idle for several minutes, and then turn off engine after its temperature drops. Otherwise, engine may be damaged.

Starting and Turning off in Emergency

Starting engine in emergency

When smart key battery is low or signal is seriously interrupted, engine start stop function will not work normally. In this case, start engine according to following steps:

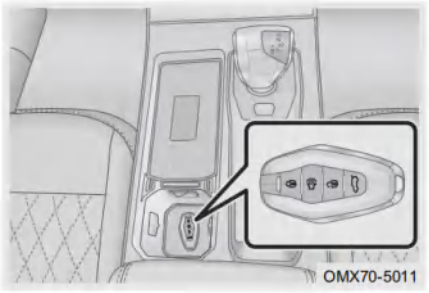

Step 1: Lay smart key on bottom of cup holder with the front face facing upward and the direction that logo on the key faces to should be consistent with the front of vehicle; Do not depress clutch pedal (for M/T models) or brake pedal (for A/T models) at this time.

Step 2: With vehicle power turned to ON mode, depress the brake pedal and shift the transmission gear to P, after message "Verify successfully, start ready" is displayed on instrument cluster, press the ENGINE START STOP switch to start engine.

Turning off engine in emergency

When vehicle systems are normal during traveling, if engine has to be stopped in case of an emergency, perform as follows:

Method 1: Press and hold ENGINE START STOP switch for 3 seconds or more.

Method 2: Shortly and continuously press ENGINE START STOP switch 3 times or more within 2 seconds.

⚠ WARNING
Turning off engine in an emergency during driving will severely affect the normal driving of vehicle. Therefore, do not use this feature unless in an extreme emergency.

Adaptive Engine Control System

If the battery terminal is removed and reconnected, the vehicle power is switched to ON mode, and vehicle power will be switched to OFF mode after waiting for 15 seconds before starting the engine.

Abnormal phenomena (such as, engine shaking or unsmooth starting off) may occur in early driving stage, which is a normal phenomenon that engine control system is learning to adapt to engine again.

limphome function

When accelerator pedal malfunction and throttle malfunction, etc., affects safe driving, in case of stall, EMS will limit the torque, the vehicle can only maintain a maximum of 30 km/h (safe speed). The limphome function will be deactivated after the malfunction has been repaired.

4-3. Gasoline Particulate Filter (GPF)

Gasoline Particulate Filter (GPF) (If Equipped)

GPF can capture particulate emissions from exhaust gas to reduce the effect of particulate emissions of vehicle. When particulate emissions from the GPF accumulate to a certain extent, the system will regenerate GPF with a specific strategy.

When "" green indicator on instrument cluster comes on, to avoid engine idling for a long time, drive at a higher speed (vehicle speed ⩾60km/h) in the case of safety and compliance until the indicator goes off. When "" yellow indicator on instrument cluster comes on, the particles captured in the GPF have reached the limit value, please go to Jetour authorized service station for inspection and repair.

■ Observe the following precautions during daily driving:

1. Avoid frequent short distance driving.
2. Avoid engine idling for a long time or frequently.
3. Avoid engine running at low speed with high throttle for a long time or frequently.

> ⚠ WARNING
>
> It is forbidden to park on dry leaves, hay or other flammable materials or allow the vehicle to idle for a long time. When engine is running or the vehicle is just stopped, high temperature of exhaust pipe may cause fire.

4-4. Transmission

Automatic Transmission

Automatic transmission

Automatic transmission is 6-speed wet dual clutch transmission.

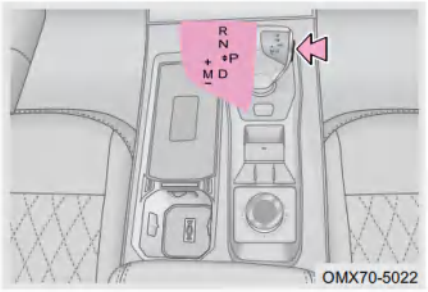

Step 1: Fully depress the brake pedal and press button on shift lever, then shift the shift lever from P to D;

Step 2: Release the parking brake manually or automatically and release the brake pedal. then drive the vehicle slowly.

⚠ WARNING
To avoid accidental vehicle movement, be sure to depress brake pedal when shifting to any gear position.

Driving Mode

During the operation, driver can select sport mode (SPT), economic mode (ECO) and standard mode (STD); ECO mode improves vehicle fuel economy; SPORT mode improves vehicle handling, controllability and power performance. You can select according to different road conditions.

OMX70-4217

The driving mode can be selected between Eco mode/Standard mode/Sport mode in the audio system.

Gear position introduction

During the operation, the driver can choose the automatic mode and the manual mode (M). The corresponding gear information for selected gear position will be displayed on the instrument cluster.

Gear position display on instrument cluster in automatic mode: P, R, N, D.

Gear position display on instrument cluster in manual mode (M): 1, 2, 3, 4 and 5.

The following information will help you understand purpose and operation procedures of different gears to make a right choice according to actual demand during operation.

Gear Position		Function
Automatic mode	P	This is park position. Drive wheels are mechanically locked. Engine can be started.
	R	This is the reverse position. Back-up lights will come on and parking assist system will operate.
	N	This is a neutral position. It is used for short time idling stop.
	D	This is the forward driving gear. It shifts up and down automatically among all forward driving gears according to engine load and vehicle speed.
Manual mode (M)	+	Push shift lever toward + once, transmission will upshift by one gear.
	-	Push shift lever toward - once, transmission will downshift by one gear.

Fail-safe mode

When malfunction occurs in transmission system, fail-safe mode will be automatically activated, at the same time "⚙" yellow indicator on instrument cluster remains on; transmission cannot operate normally, and vehicle will slow down and be driven at low speed with only one forward driving gear and one reverse gear.

⚠ CAUTION
Long distance driving is not allowed in fail-safe mode. Otherwise, transmission will be damaged, please go to Jetour authorized service station for inspection and repair immediately.

AMT function

When vehicle stops on a slope, it's recommended to depress brake pedal or apply parking brake. If stopping vehicle steadily by depressing accelerator pedal slightly, transmission clutch will be in slippery state, at this time, clutch temperature will increase quickly, which is easy to cause wear and affect service life of transmission; Please try to avoid driving uphill for long distance with full loads to prevent high clutch temperature; If transmission temperature alarm is displayed on instrument cluster, the vehicle will stop in serious cases due to the high clutch temperature, which is a protection strategy for clutch to avoid transmission failure; When this happens, please stop vehicle at the roadside, shift the shift lever to P, apply parking brake and drive normally until the temperature of clutch drops.

4-5. Steering System

Electric Power Steering System (EPS)

EPS uses torque generated by motor as power source of steering system, instead of assisting method using in general vehicle, that is, hydraulic pump is driven by engine.

> ⚠ CAUTION
>
> - Do not keep steering wheel at limit position for more than 5 seconds when the engine is running.
> - Handling and turning steering wheel frequently over long periods of time may damage electric power steering system (EPS).
> - EPS motor will produce normal operating sound when steering wheel is turned quickly.

Steering force mode

OMX70-4217

During the operation, driver can select sport mode and comfort mode, and you can select according to different road conditions.

The default steering mode is sport mode when the vehicle first works. Compared with sport mode, the steering force of comfort mode is reduced and the hand feels calm.

Note: During driving and steering, it is not allowed to switch the steering mode.

Electric Power Steering System (EPS) indicator

When there is a fault, " " yellow indicator on instrument cluster comes on.

> ⚠ WARNING
>
> When electric power steering system (EPS) is faulty, although the vehicle still has the conventional steering capability, it should be driven with caution. Please go to Jetour authorized service station for inspection and repair as soon as possible.

4-6. Brake System

Electric Parking Brake System (EPB)

EPB system is a technology that integrates temporary braking during driving and long-time braking after stopping, and implements parking brake by electronic control. This technology replaces the traditional handbrake.

Usage methods

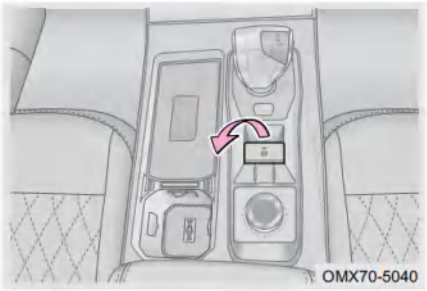

■ Applying parking brake manually

After vehicle stops steadily, switch the vehicle power to ON mode or start engine, pull up the electric parking brake button, " Ⓟ " red indicator on instrument cluster and electric parking brake button indicator remains on, indicating that parking brake function has been turned on.

After vehicle stops steadily, shift the shift lever to P and switch the vehicle power to OFF mode, parking brake can be applied automatically by Electric Parking Brake (EPB) system.

■ Releasing parking brake manually

With vehicle power switches to ON mode or engine starts, depress the brake pedal and press electric parking brake button manually, "Ⓟ" red indicator on instrument cluster and electric parking brake button indicator will turn off, indicating parking brake function has been released.

■ Releasing parking brake automatically (for M/T models)

Start the engine, fasten the seat belt and close the driver side door, then release clutch pedal and depress accelerator pedal slowly with shift lever in D or R on flat road to release electric parking brake automatically, and "Ⓟ" red indicator on instrument cluster goes off.

■ Releasing parking brake automatically (for A/T models)

Start the engine, fasten the seat belt and close the driver side door, then depress accelerator pedal slowly with shift lever in D or R on flat road to release electric parking brake automatically, and " Ⓟ " red indicator on instrument cluster goes off.

⚠ CAUTION

- When towing vehicle, it is necessary to release parking brake and switch transmission to neutral.
- If accelerator pedal is depressed very slowly, auto release of automatic parking delays. This is normal.
- While depressing brake pedal for releasing or applying parking brake, brake pedal may push slightly up or down, just depress the brake tightly.
- When performing automatic releasing of electric parking brake, fasten the seat belt and close the driver side door. Failure to do so may cause the automatic releasing conditions of parking brake cannot be satisfied.
- Electric Parking Brake (EPB) cannot be used when vehicle battery is depleted. Jumper cables can be used to start the engine, refer to "Vehicle Distress Handling" for details.
- When enabling and releasing electric parking brake, "whooshing" sound may be heard from rear part of vehicle. This is the working sound emitted by parking brake and is normal.
- If vehicle coasts after stopping within a short period of time, system will increase parking brake force automatically to hold it for safety. When parking brake force is increasing, system makes operation sound. This is normal.

⚠ WARNING

- To avoid accidental vehicle movement, in automatic parking state, confirm shift position before depressing accelerator pedal to start off.
- To avoid accidental vehicle movement, when stopping or leaving vehicle, after EPB is operating, "Ⓟ" red indicator on instrument cluster and electric parking brake button indicator turn off after they come on for a certain time, check whether "Ⓟ" red indicator on instrument cluster and electric parking brake button indicator come on to ensure that electric parking brake is properly applied.

Emergency braking function

If foot brake fails, pull up the electric parking brake button continuously to forcibly apply brake by parking brake. In this process, "Ⓟ" red indicator on instrument cluster blinks. Release the button to exit emergency braking.

⚠ WARNING

- When emergency braking function is activated, it will drone. This is normal.
- When applying emergency braking, electric parking brake will apply brake at constant deceleration which is deviated from driver's desired deceleration and braking distance will be different.
- Use this function cautiously during normal driving. When driving, passengers should not touch button accidentally. Otherwise, it may cause an accident.
- Emergency braking function can only be turned on in case of emergency such as foot brake failure or brake pedal stuck. Vehicle body dynamic electronic stability program system and its components cannot exceed road traction physical limit. Use of the emergency braking function on windy roads, dangerous roads, in heavy traffic or severe weather, may lead to drifting, side slipping or pulling, so please be careful.

Electric parking emergency releasing

In some special circumstances, (such as towing vehicle, washing vehicle automatically), switch vehicle power to OFF mode while pressing electric parking switch for more than 3 seconds, then release EPB switch, at this time, Electric Parking Brake (EPB) will not perform automatic parking.

Automatic Parking System (AUTO HOLD)

Automatic parking system is used to prevent vehicle from rolling when vehicle is stationary and starts off.

Usage methods

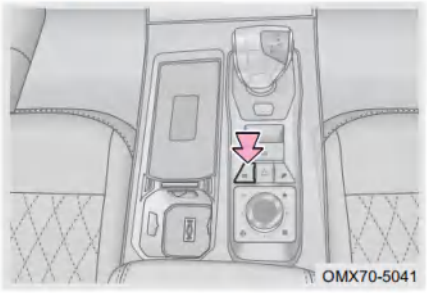
OMX70-5041

■ Automatic parking operation conditions

Engine is started, driver door is closed properly and driver seat belt is fastened.

■ Turning on automatic parking

When automatic parking conditions are met, press automatic parking button, indicator on button remains on, indicating that automatic parking function has been turned on.

■ Activating automatic parking function

When automatic parking function is enabled, depress brake pedal, vehicle changes to stationary state from movement, then automatic parking function is activated.

Depress brake pedal when vehicle is stationary, turn on the automatic parking function at the same time and the conditions of automatic parking are met, then automatic parking function is activated.

■ Turning off automatic parking

When the automatic parking function is turned on, press automatic parking button to turn off automatic parking function. The indicator on the automatic parking button turns off, indicating that the vehicle has exited the automatic parking function.

When automatic parking function is activated, press automatic parking switch to turn off automatic parking function, the indicator on automatic parking switch turns off, indicating that vehicle has exited automatic parking function and switched to parking brake function.

■ Automatic parking release function

Way to release automatic parking is the same as that of electric parking brake, including manual release and automatic release.

⚠ CAUTION

- Always park vehicle correctly according to safety regulations and take care to avoid hurt yourself and pedestrians.
- If accelerator pedal is depressed very slowly, auto release of automatic parking delays. This is normal.
- Be sure to turn off automatic parking function before driving into car wash. For details, refer to "Electric Parking Emergency Releasing" in this section.
- When automatic parking function is activated, open driver side door or unfasten driver side seat belt, automatic parking will switch to electrical parking.
- Automatic parking system (AUTOHOLD) cannot be used when vehicle battery is depleted. Jumper cables can be used to start the engine, refer to "Vehicle Distress Handling" for details.
- When automatic parking function is enabled, open driver side door or unfasten driver side seat belt to exit automatic parking function, close the door or fasten the belt again to activate the function again.
- After automatic parking function is enabled, the automatic parking system will automatically park the vehicle after the vehicle comes to a complete stop from motion state by foot brake, but the transmission gear is still in D or R. It is recommended to shift to N for short parking and shift to P for long parking.

> ⚠ WARNING
>
> To avoid accidental vehicle movement, in automatic parking state, confirm shift position before depressing accelerator pedal to start off.

Vacuum Booster

The vacuum booster is controlled by engine vacuum and it works only when the engine is running. Therefore, do not coast your vehicle with engine off.

> ⚠ WARNING
>
> Do not coast your vehicle with engine off while driving downhill. To achieve better braking effect, shift to low gear before driving downhill.

If the vacuum booster does not work because vehicle is being towed or malfunctioning, brake pedal should be depressed more firmly than usual to compensate booster braking effect.

In normal temperature, we recommend allowing the engine to idle for 15 seconds after the vehicle starts, if the temperature is lower, the time is longer. This is to allow it to quickly heat and to activate the three-way catalysts and improve waste gas conversion efficiency. It can also help restore the brake vacuum if the vehicle has been parked for a long time. We advise idling the engine for 15 seconds each time you start the vehicle.

Foot Brake

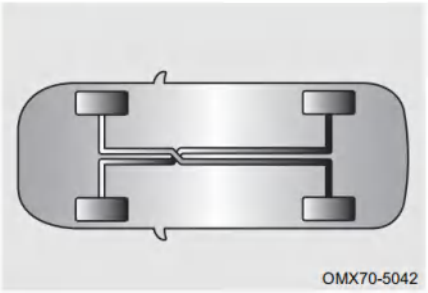

OMX70-5042

The brake system adopts X type arrangement, double circuit brake system; The system is a hydraulic system with two independent subsystems. If one of the subsystems fails, the other system can still perform brake function. However, brake pedal depressing force will be greater than usual as well as the braking distance, and the brake system malfunction indicator remains on.

Brake system indicator

When there is a fault, "(!)" red indicator on instrument cluster remains on.

⚠ WARNING

- When "(!)" red indicator on instrument cluster comes on, check the brake fluid level, add brake fluid when it is lower than MIN line. If reason is unclear, please contact Jetour authorized service station immediately.
- If "(!)" red indicator on instrument cluster comes on during driving, one of the subsystems in double circuit brake system may fail. Stop vehicle at a safe place away from major traffic, and contact Jetour authorized service station immediately.

Precautions for brake system

1. If there is continuous shudder or vibration being transferred to the steering wheel during braking, please go to Jetour authorized service station immediately for inspection and repair.
2. When driving downhill, shift to a low gear to make full use of engine braking effect and avoid continuous use of brakes. Failure to do so may cause the brakes to overheat and braking distance will become longer, and the brakes may even temporarily lose its effectiveness in a serious case.
3. The brake system will make some noises sometimes during operation, which is normal, but if you hear metal friction or a whistling sounds over a period of time, the brake linings may be seriously worn, and you must go to a Jetour authorized service station for replacement immediately.
4. The new brake linings must be break-in to reach optimal brake effect. Braking effect in the first 200 km is not optimal. In this case, depress brake pedal more firmly to compensate braking effect.
5. A wet brake may cause abnormal vehicle deceleration or pulling to one side when braking. Depress brake pedal slightly to test effectiveness of brakes. After driving through deep water, keep a safe vehicle speed and depress brake pedal slightly until braking function is restored.
6. Wear condition of brake lining depends largely on its working conditions and driving style. For vehicles mainly used in city traffic, frequent starting and stopping will make working condition of brake lining worsen. Therefore, please go to Jetour authorized service station according to specified maintenance mileage to check thickness of brake linings or replace it as needed.

4-7. Anti-lock Brake System (ABS)

Anti-lock Brake System (ABS)

ABS can prevent wheel from locking in excessive braking or braking on a slippery road, preventing vehicle from slipping or drifting and maintaining stability of vehicle.

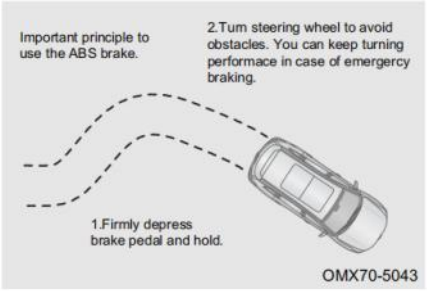

ABS does not function during normal braking and it will be turned on immediately only during emergency braking (brake pedal pulsates with noise, ensuring braking performance and steering performance, if the space is enough, the vehicle can also avoid obstacles). Never release brake pedal in this case.

⚠ CAUTION

Tire size, specification and tread pattern wear will seriously affect ABS performance. Replaced tires should have same size, load capacity and structure as original one. When abnormality occurs in tire, it is recommended to replace with an original type at Jetour authorized service station.

⚠ WARNING

- Always drive carefully and make sure to decelerate during turning.
- When ABS is malfunctioning, please go to Jetour authorized service station for inspection and repair as soon as possible.
- Although ABS can ensure the best braking effect, braking distance will vary largely due to road conditions.
- When driving on rainy days, properly control the vehicle speed, because if the wheel spins or slips, ABS will lose control of vehicle.
- Also, anti-lock brake system cannot eliminate risks arising from close-following driving, driving through water, turning quickly or driving on poor road surfaces and cannot avoid accidents caused by inattentive or inappropriate driving.
- Although ABS can help to control vehicle, make sure to drive carefully, maintain a moderate speed and keep safe distance from preceding vehicles. There are certain limitations in vehicle stability and steering wheel operation effect even ABS operates.
- ABS cannot ensure that braking distance can be shortened in any situations. When vehicle is equipped with tire chains, on sand or snow covered roads, vehicles with ABS may require a longer braking distance compared to vehicles without ABS.

Brake Force Distribution System (EBD)

EBD automatically adjusts braking force distribution ratio of front and rear axles according to axial load transfer difference caused by braking to improve braking efficiency. In addition, EBD works together with ABS to improve braking stability. Also, when braking in curve, brake force of inside and outside wheel can be adjusted to improve braking stability.

Anti-lock brake system indicator

When there is a fault, "(ABS)" yellow indicator on instrument cluster remains on.

READ

When ABS is malfunctioning, this function may not work properly, please go to Jetour authorized service station for inspection and repair as soon as possible.

⚠ WARNING

When anti-lock brake system malfunction indicator and brake system malfunction indicator come on at the same time, park your vehicle at a safe place away from major traffic and contact Jetour authorized service station as soon as possible.

Function limit

■ ABS will make operation sound in following conditions:

1. Rebounding sound of brake pedal.
2. Impacting sound between suspension and vehicle body due to emergency braking.
3. Operation sound of motor, solenoid valve and return pump in hydraulic unit.
4. Operation sound of solenoid valve when EBD is intervened in braking.
5. Buzz will be heard for a short time after vehicle is powered on or engine is started, indicating system self-test is performed.

■ Always maintain a safe distance from vehicle ahead in the following situations:

1. When driving on rough roads.
2. When driving on roads with potholes or uneven surfaces.
3. When driving with tire chains.
4. When driving on dirt, gravel or snow-covered roads.

4-8. Vehicle Body Dynamic Electronic Stability Program System

Vehicle Body Dynamic Electronic Stability Program System

Vehicle body dynamic electronic stability program system keeps vehicle stability in case of oversteer or understeer. When difference between expected driving state and actual vehicle condition is detected, vehicle body dynamic electronic stability program system starts to operate. Improve driving stability by vehicle body dynamic electronic stability program system and traction control system (TCS), which helps you react smoothly in difficult driving conditions (such as an animal scurries on road suddenly), to avoid vehicle unstability.

Vehicle body dynamic electronic stability program system switch

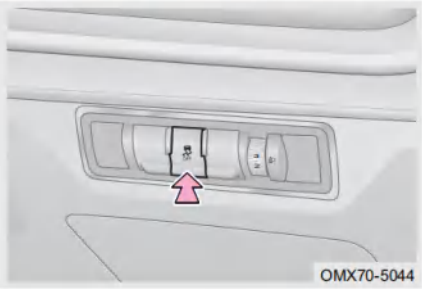

With vehicle power switched to ON mode, move the dial (as shown in the illustration) forward, the indicator of vehicle body dynamic electronic stability program system switch comes on and vehicle body dynamic electronic stability program system is turned off; Move the dial (as shown in the illustration) forward again, the indicator of vehicle body dynamic electronic stability program system switch goes off and vehicle body dynamic electronic stability program system is turned on.

Note: To ensure maximum driving safety, vehicle body dynamic electronic stability program system is turned on automatically when vehicle is started.

■ Vehicle body dynamic electronic stability program system OFF function fails

1. Switch vehicle power to OFF mode.
2. Vehicle body dynamic electronic stability program system is malfunctioning.
3. Vehicle body dynamic electronic stability program system switch is pressed continuously for more than 10 seconds.
4. Anti-lock brake system or vehicle body dynamic electronic stability program system is operating.

Vehicle body dynamic electronic stability program system indicator

When turning off, "" yellow indicator on instrument cluster remains on.

During operation, "" yellow indicator on instrument cluster blinks.

When there is a fault, "" yellow indicator on instrument cluster remains on.

READ
When vehicle body dynamic electronic stability program system is malfunctioning, this function may not work properly, please go to Jetour authorized service station for inspection and repair as soon as possible.

⚠ WARNING

- During operation of vehicle body dynamic electronic stability program system, excessive driving speed, sharp turns or poor road conditions may cause accidents.
- Vehicle body dynamic electronic stability program system function cannot completely ensure that you can take over vehicle if it has lost control due to various extreme situations. Even with vehicle body dynamic electronic stability program system, always follow laws and regulations to avoid accidents.

Function limit

■ Under the following conditions, vehicle body dynamic electronic stability program system needs to be turned off:

1. When driving with tire chains.
2. When driving vehicle on power tester.
3. When driving on roads with deep snow or loose gravel.

READ

To improve vehicle traction when driving on sand or gravel, it is recommended to turn ESP off.

Extended Function

Brake Force Distribution System (EBD)

This system automatically adjusts braking force distribution ratio of front and rear axles according to axial load transfer difference caused by braking to improve braking efficiency. In addition, EBD works together with ABS to improve braking stability. Also, when braking in curve, brake force of inside and outside wheel can be adjusted to improve braking stability.

Traction Control System (TCS)

During starting off or rapidly acceleration, driving wheels may slip. On slippery roads such as snowy or icy road, direction could get out of control and cause a dangerous situation. When TCS detects that driven wheel speed is lower than drive wheel speed (a feature of slip) using sensors, it sends a signal to adjust ignition timing, reduce throttle opening, downshift or brake wheels so that wheel will no longer slip.

Hydraulic Brake Assist System (HBA)

This system is used to shorten the braking distance in emergency braking. In an emergency, driver usually brakes in time, but generally does not apply the maximum braking force, thus lengthening braking distance. In this case, HBA system will operate: When driver depresses brake pedal rapidly in an emergency with insufficient force, HBA system quickly increases brake

pressure to maximum level, making anti-lock brake system shorten braking distance more quickly and effectively.

Roll Movement Intervention System (RMI)

This system is used to prevent vehicle from rolling over on road when operating vehicle in dynamic (such as lane change) status.

Hill Hold Control System (HAC)

This system can prevent vehicle from moving backward when starting off on uphill. After vehicle is stationary, HHC adopts longitudinal acceleration sensor to determine if the vehicle is on a slope. When vehicle starts from stationary state on a slope to drive or reverse upwards, HAC automatically operates. When starting off, after driver releases brake pedal, system maintains previous braking pressure for 1-2 seconds to hold the vehicle. As increasing of drive torque, brake pressure reduces gradually, avoiding accidents caused by moving backward when starting off on a slope.

4-9. Airbag (SRS)

Airbag (SRS)

In severe frontal/side collision, the airbags (SRS) deploy and work together with seat belts to protect occupants in vehicle. Airbags (SRS) can distribute impact force more evenly to upper parts of occupants' body, so their body move slowly even stop, thus reducing the risk of occupants and driver injury. Once an airbag (SRS) is deployed, doors will automatically unlock, interior lights will illuminate and hazard lights will illuminate.

Airbag (SRS) positions

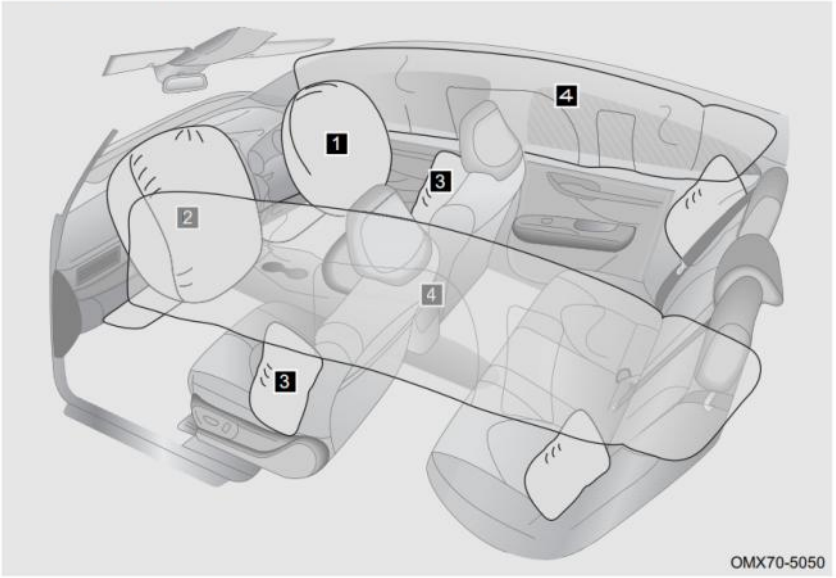

1 Driver frontal airbag
2 Front passenger frontal airbag
3 Front side airbag
4 Curtain side airbag (if equipped)
5 Rear side airbag

Using airbag correctly

■ Driver airbag / front passenger airbag

are met, both driver airbag and front passenger airbag work together with seat belts to help reduce injuries to the head or chest of driver and front passenger caused by hitting the interior component. (For models equipped with front passenger airbag switch, the front passenger airbag does not deploy when the switch is off).

■ Front side airbags

In an event of a severe side collision and the airbag deployment conditions are met, front side airbags can help protect the torso of the front seat occupants.

■ Curtain shield airbags (if equipped)

In an event of a severe side collision and the airbag deployment conditions are met, curtain shield airbags can help protect primarily the head of occupants in the outer seats.

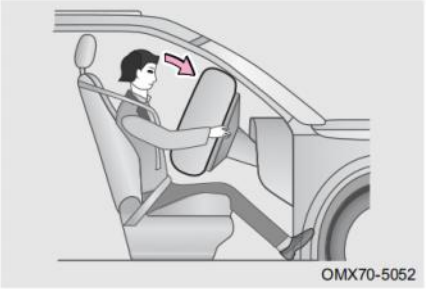
OMX70-5052

The SRS airbag works together with seat belt to protect safety of driver and passengers. However, airbag is not a substitute for seat belt. In addition, the SRS airbag will deploy only when the collision degree of vehicle reaches the design condition. In some collisions, seat belts are the only protective device. Wearing a seat belt during a collision can help reduce the risk of hitting objects inside the vehicle or being thrown out of the vehicle, and effectively protect the drivers and passengers. Therefore all people in vehicle should wear seat belts correctly. SRS airbags and seat belts can provide protection only for adults but are not designed to protect infants and young children.

The airbag will generate considerable force at the moment of deployment. In order to avoid injury caused by deployment of the airbag, the driver and occupants must adopt the correct sitting posture, correctly wear the seat belt and adjust their seat position, never get too close to the airbag (such as sitting on the edge of the seat or tilting the body forward). For vehicles equipped with front seat side airbag and curtain shield side airbag , ensure that the upper limbs are at a sufficient distance from the side of the vehicle to avoid injury during deployment.

⚠ CAUTION

- The airbag cannot protect the lower part of the occupant's body.
- The airbag will quickly contract after deploying, which can ensure that forward vision of driver is not blocked.
- The related parts of airbag will generate heat after deploying. Do not touch the related parts of airbag immediately to avoid injury.
- The airbag is a non-reusable device. Once the airbag is deployed, the related parts of airbag must be replaced.
- If the areas where the airbags are stored, such as the steering wheel and instrument panel are damaged or cracked, please go to Jetour authorized service station for replacement as soon as possible.
- The deployment and contraction of the airbag is completed in a short period of time, and cannot protect against the impact of a second impact that may occur subsequently.
- The airbag is neither designed for rear collision, slight frontal collision, nor for vehicle rolling over, and it does not work when the vehicle is braked in an emergency.
- The airbags release some smoke and dust after deploying. For people with asthma or other respiratory problems, respiratory system could be stimulated. Therefore, all people in vehicle should get out as soon as possible, or open windows to breathe fresh air and seek medical treatment if necessary.

⚠ WARNING

- The seat cover should not block side airbag during using, as in the event of an accident, the side airbag will not pop up after inflating, which will reduce protection for passengers.
- A soft, dry cloth or cloth dampened with water must be used to clean the airbag area. Avoid any fluid entering into the airbag, otherwise it may seriously affect the normal function of airbag.
- If there is water in vehicle, the airbag may be damaged. Even if there is no collision at this time, it may cause the airbag to deploy accidentally. Turn off the engine immediately and disconnect the negative battery cable. Never try to start the engine. Please go to Jetour authorized service station for inspection and repair immediately.

Airbag indicators

When there is a fault, " " red indicator on instrument cluster remains on.

READ

When airbag is malfunctioning, this function may not work properly, please go to Jetour authorized service station for inspection and repair as soon as possible.

Airbag operating conditions

Deployment conditions of the airbag do not depend on driving speed of vehicle, but depend on the object, collision direction and vehicle deceleration conditions due to a collision. Airbags may be not deployed when impact of collision is absorbed or dispersed into the body; However, the airbag can sometimes operate depending on the impact condition in an accident. Therefore, deployment conditions of the airbag should not be judged according to the damaged condition of the vehicle.

Even if the airbag is not deployed, a collision may damage the airbag in the vehicle. Airbag may not operate properly if damaged, and it will not be able to protect you and other occupants in the event of another collision, resulting in accidents and personal injury. In order to ensure that the airbag can be deployed properly in an event of collision, please go to Jetour authorized service station for inspection and repair as soon as possible.

■ Conditions under which airbag may deploy other than a collision

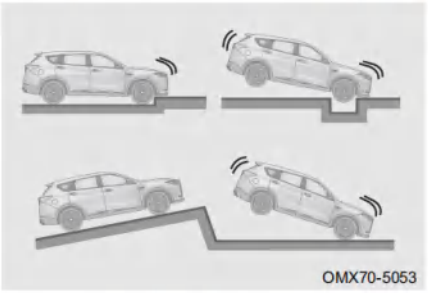
OMX70-5053

The driver frontal airbag and front passenger frontal airbag may deploy if an impact occurs to the underside of your vehicle.

■ Conditions under which airbag may deploy in a collision

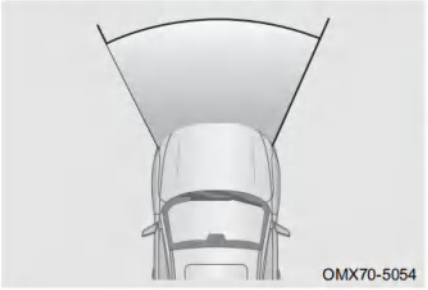
OMX70-5054

Operating conditions: In general, in an event of frontal collision, the driver frontal airbag and front passenger frontal airbag will deploy if the deceleration of vehicle exceeds the designed threshold level.

■ Conditions under which airbag may not deploy during a collision

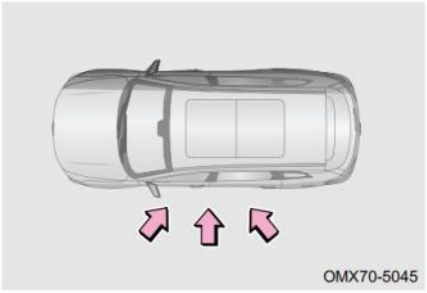

OMX70-5045

The vehicle is subjected to a strong side impact, and the side collision sensors detect an impact severe enough to cause the side airbags, curtain shield airbags, and front middle airbag to deploy.

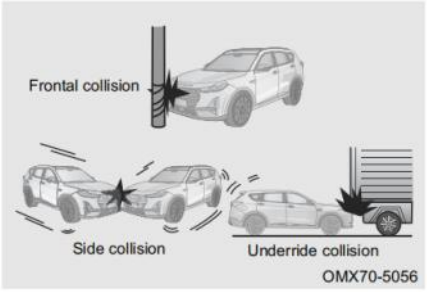

OMX70-5056

The driver frontal airbag and front passenger frontal airbag may not deploy if the front of vehicle hits a telegraph pole, goes under a truck, or involved in a inclined side collision.

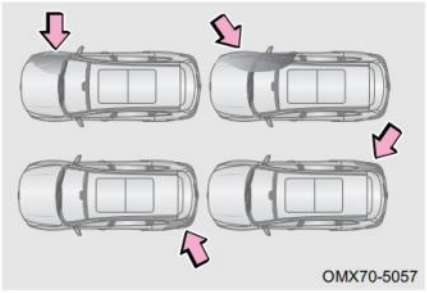

OMX70-5057

The front seat side airbag and curtain side airbag may not deploy if the vehicle is subjected to a collision from side, the rear part of the rear tire or a side collision at certain angles to the vehicle.

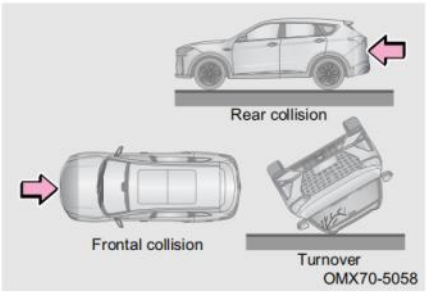

OMX70-5058

The front seat side airbag and curtain side airbag may not deploy if the vehicle is subjected to a front or rear collision, turnover or low speed side collision.

Precautions for airbag

There should be no objects on deployment path of airbag. It is forbidden to place anything (such as mobile phone, etc.) between the occupant and the airbag. Never fix or place any object on or near the airbag cover. If there is an object between occupant and airbag, the airbag may not deploy according to designed path, or the airbag may push object into occupant's body, causing serious injury or even death.

Do not sit on the edge of the seat or lean against the instrument panel.

Do not allow a child to stand in front of the front passenger frontal airbag unit or sit on the knees of front passenger.

Do not lean against the door, A pillar, B pillar or C pillar.

Do not allow anyone to kneel on the passenger seat toward the door or put their heads or hands outside the vehicle.

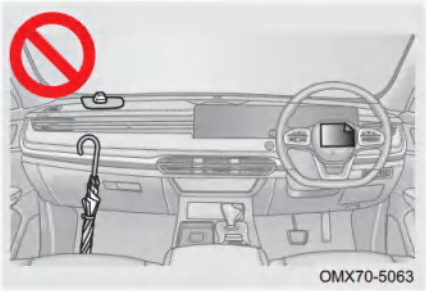
OMX70-5063

Do not attach anything to or lean anything against the areas such as the instrument panel, steering wheel and lower portion of the instrument panel. These items may be thrown out when driver frontal airbag or front passenger frontal airbag deploys.

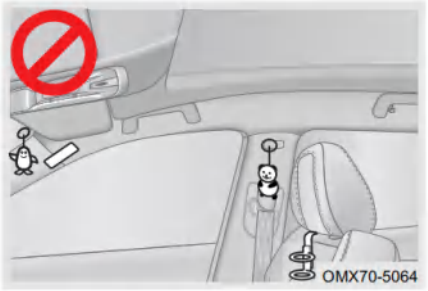
OMX70-5064

Do not attach anything to areas such as the door, windshield glass, side door glass, A pillar, B pillar, C pillar, roof side rail and assist grip.

Do not strike or apply excessive force to the area of airbag components. Otherwise, it may cause airbag malfunction.

Replacement of airbag (SRS) component

The related parts of the airbag must be replaced 10 years from the date of vehicle purchase. In order to make sure that the airbag can ensure your safety, please always go to Jetour authorized service station to replace related parts of the airbag within the specified time. Make sure that the new owner knows the airbag configuration and the replacement date of airbag in this vehicle when the vehicle is sold.

Modification and disposal of airbag (SRS) components

Do not dispose of the vehicle or operate the following components without permission of the Jetour authorized service station, otherwise accidents and personal injuries may be caused:

1. Modification of vehicle suspension system.
2. Modification of vehicle front bumper, etc.
3. Modification of side doors or door protective panel and B-pillar protective panel, etc.
4. Installation, removal, disassembly and repair of airbags.
5. Repair, modification, removal or replacement of steering wheel, instrument cluster, instrument panel and seats.

5-1. Cruise System

Cruise Control System (CCS) (If Equipped) 134

5-2. Hill Descent Control (HDC) System

Hill Descent Control (HDC) System 136

5-3. Blind Spot Detection (BSD) System

Blind Spot Detection (BSD) System (If Equipped) 136

Rear Cross Traffic Alert (-RCTA) System (If Equipped) 138

Door Open Warning (DOW) System (If Equipped) 138

Rear Collision Warning (RCW) System(If Equipped) 139

5-4. Tire Pressure Monitoring System (TPMS)

Tire Pressure Monitoring System (TPMS) 139

5-5. Parking Assist System

Parking View Monitor System (If Equipped) 141

Panoramic View Monitor System (If Equipped) 143

Parking Radar System 146

5-1. Cruise System

Cruise Control System (CCS) (If Equipped)

CCS can maintain the speed set by driver.

Usage methods

■ Entering Cruise Control System (CCS)

During vehicle driving, move the button on steering wheel to "" once to enter pre-cruising state, "" indicator on instrument cluster comes on and flashes; vehicle speed is within 40 - 130 km/h, move the button on steering wheel to "SET/-" once to set the current vehicle speed as cruise speed and enter cruising state, "" indicator on instrument cluster remains on.

During cruising, move the button on steering wheel to "" once to exit cruising state, and cruise speed cannot be set.

During cruising, depress accelerator pedal until vehicle speed is higher than cruise speed (in this process, cruise indicator remains on), the vehicle speed increased. When you release accelerator pedal, vehicle returns to cruise speed before accelerator pedal is depressed and enters cruising status (in this process, cruise indicator remains on).

During cruising, depress accelerator pedal until vehicle speed is higher than cruise speed (in this process, cruise indicator remains on), the vehicle speed increased. When you release accelerator pedal, move the button on steering wheel to "SET/-" once to set current speed as cruise speed and enter cruising status (in this process, cruise indicator remains on).

During cruising, depress brake pedal to enter pre-cruising status (in this process, cruise indicator blinks), the vehicle speed decreased. When vehicle speed is higher than 40 km/h, release brake pedal and move the button on steering wheel to "RES+" once, then vehicle returns to the cruise speed before brake pedal is depressed and enters cruising status (in this process, cruise indicator remains on). When vehicle speed is higher than 40 km/h, release brake pedal and move the button on steering wheel to "RES +" and hold, cruise speed will increase continuously. At this time, release the button to set current speed as cruise speed and enter cruising status (in this process, cruise indicator remains on).

During cruising, depress brake pedal to enter pre-cruising status (in this process, cruise indicator blinks) to decrease vehicle speed. When vehicle speed is less than 40 km/h, release brake pedal and move the button of steering wheel to "RES +" once, vehicle cannot return to the cruising status before brake pedal is depressed. When accelerator pedal is depressed until vehicle speed is higher than 40 km/h, move the button of steering wheel to "RES +" once and release accelerator pedal, then vehicle returns to the cruising status before brake pedal is depressed (in this process, cruise indicator remains on). When accelerator pedal is depressed until vehicle speed is higher than 40 km/h, move the button of steering wheel to "RES+"

and hold, cruise speed will increase continuously. At this time, release the button to set current speed as cruise speed and enter cruising status (in this process, cruise indicator remains on).

During cruising, depress brake pedal to enter pre-cruising status (in this process, cruise indicator blinks). When cruise control system button is not operated, the vehicle will remain in pre-cruising status, which requires the driver to take over vehicle and drive according to normal drive standards.

⚠ WARNING

- During cruising, if you shift the shift lever from D to N, or shift to R position by mistake, for safety reason, cruising will also be canceled and enter the pre-cruising state (cruise control indicator on the instrument cluster flashes). If it is not an emergency, this operation mode is not recommended.
- If a malfunction in the vehicle affecting cruise safety occurs, vehicle cannot enter cruising state and cruise control indicator flashes (cruise function button is locked). Please go to Jetour authorized service station for inspection and repair.

■ Speed setting

During cruising, move the button on steering wheel to "RES+" once, cruise speed will increase by 1 km/h.

During cruising, move the button on steering wheel to "RES+" and hold, cruise speed will increase continuously.

During cruising, move the button on steering wheel to "SET-" once, cruise speed will decrease by 1 km/h.

During cruising, move the button on steering wheel to "SET-" and hold, cruise speed will decrease continuously.

Function limit

■ Under the following situations, do not use CCS. Failure to do so may cause an accident, resulting in death or serious injury:

1. During emergency towing.
2. In heavy traffic.
3. On winding roads.
4. On roads with sharp curves.
5. On slippery roads, such as roads covered with rain, ice or snow.
6. Vehicle speed may exceed set speed when driving up and down on a steep slope.

5-2. Hill Descent Control (HDC) System

Hill Descent Control (HDC) System

HDC system can help vehicle drive on steep roads safely under controlled conditions. Combine engine braking, vehicle body dynamic electronic stability program system and Anti-lock Brake System (ABS) to work together. When HDC system is turned on, transmission gear is kept in 1st gear. The vehicle uses engine braking function to keep the speed in a lower range.

Hill Descent Control (HDC) System switch

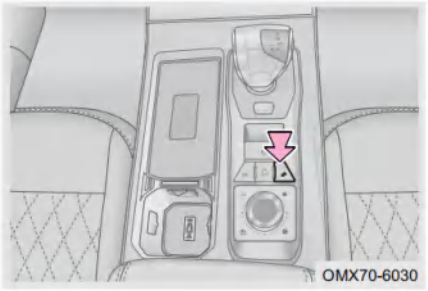

Press "" switch (indicator comes on), HDC system turns on; press "" switch again (indicator goes off), HDC system turns off.

> ⚠ WARNING
>
> The driver must control vehicle and operate as needed during the whole driving process to avoid danger.

Hill Descent Control (HDC) System indicator

When it is activated, "" green indicator on instrument cluster remains on.

When there is a fault, "" yellow indicator goes off.

> READ
>
> When HDC system is malfunctioning, this function will not work, please go to Jetour authorized service station for inspection and repair as soon as possible.

5-3. Blind Spot Detection (BSD) System

Blind Spot Detection (BSD) System (If Equipped)

BSD system is used to monitor presence of moving vehicles in left and right rear areas of your vehicle and inform driver related information to remind the driver for driving safety and lane-changing safety. This system also extends some functions such as LCA system, DOW system, RCTA system.

Activating Blind Spot Detection (BSD) System/Lane Change Assist (LCA) System

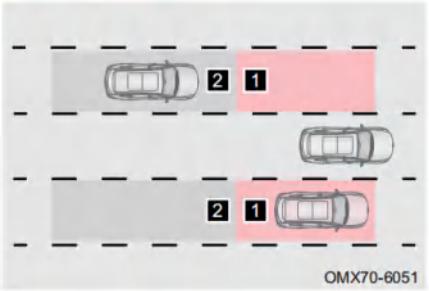

When transmission gear is in D and the vehicle speed is no less than 15 km/h, BSD system is activated.

1 Detection area of BSD system.

2 Vehicle approaches detection area of BSD system.

Level I: When there is a vehicle entering the detection area and the alarm conditions are met, level I alarm is triggered, remind driver that there are dangerous vehicles behind both sides and pay attention to driving safety through the blind spot detection LED indicator on outside rear view mirror and alarm screen on instrument cluster.

Level II: On base of level I, turn signal lights on the same side are triggered. After level II alarm is triggered, blind spot detection LED indicator on outside rear view mirror quickly blinks, alarm sounds, reminding the driver that the lane change is dangerous.

READ

Blind spot detection can be set in audio system. For details, refer to "Audio System".

CAUTION

- When lots of snow or ice accumulates on rear bumper and near radar sensor, or if drive on snowy road for a long time, BSD system may not work.
- When towing or attaching accessories to rear of vehicle (such as a bicycle carrier), turn off BSD system. Otherwise, radar radio waves will be affected, causing system work abnormally.
- BSD/LCA system may detects stationary objects on or near a road (such as guardrails, tunnels, side walls, and parked vehicles) to turn on warning light.

WARNING

BSD system and extended function just offer assistance to you. It may not work properly under all driving conditions, weather conditions, traffic conditions or road conditions.

Blind Spot Detection (BSD) System indicator

When it is turned on, "" green indicator on instrument cluster remains on.

When there is a fault, "" yellow indicator on instrument cluster remains on.

READ
When BSD system is malfunctioning, this function will not work, please go to Jetour authorized service station for inspection and repair as soon as possible.

Rear Cross Traffic Alert (RCTA) System (If Equipped)

When reversing (vertical space reversing and oblique parking space reversing), RCTA system detects the traffic behind the vehicle. If there is another vehicle approaching, the system will send an alarm to remind the driver to pay attention to safety.

Activating Rear Cross Traffic Alert (RCTA) System

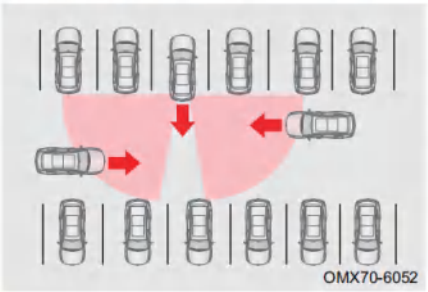
OMX70-6052

When vehicle is reversing (-transmission gear is in R), if BSD system detects that there are vehicles approaching on left and right sides of the vehicle, blind spot detection LED indicator on outside rear view mirror blinks to inform driver there is a target vehicle approaching and risk of collision exists.

Door Open Warning (DOW) System (If Equipped)

When parking the vehicle and opening the door, there are fast approaching objects behind the left and right sides collide with the vehicle, DOW system sounds an alarm.

Activating Door Open Warning (DOW) System

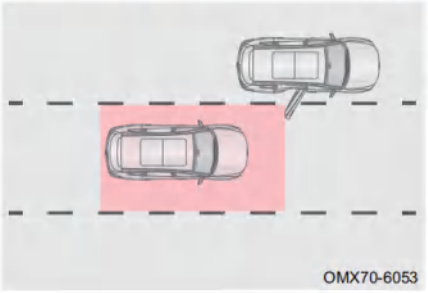
OMX70-6053

When the vehicle is stationary (-transmission gear is not in R), if BSD system detects approaching vehicles on left and right sides of the vehicle and any door is opened, DOW system sounds an alarm to remind the driver/occupant to pay attention to following vehicle when exiting to avoid collision.

Level I: When there is a vehicle entering the detection area and the alarm conditions are met, level I alarm is triggered, remind driver that there are dangerous vehicles behind both sides and pay attention to driving safety through the blind spot detection LED indicator on outside rear view mirror and alarm screen on instrument cluster.

Level II: On base of level I, door on the same side are triggered. After level II alarm is triggered, blind spot detection LED indicator on outside rear view mirror quickly blinks, reminding the driver and passenger that pay attention to safety when opening the door.

READ
DOW system can be set in audio system. For details, refer to "Audio System".

Rear Collision Warning (RCW) System(If Equipped)

When vehicle is driving, there is a fast approaching vehicle directly behind and a rear-end collision with the vehicle, RCW system sounds an alarm, hazard light flashes at the same time to remind the target vehicle behind.

Activating Rear Collision Warning (RCW) System

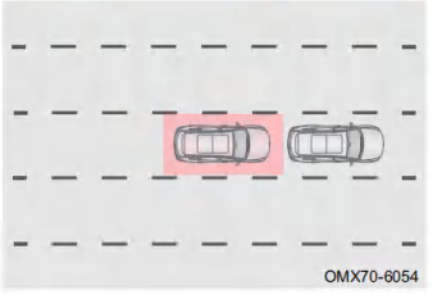

With transmission gear in D and speed of 15 km/h or higher, when a following vehicle quickly approaches the vehicle, hazard light flashes to remind the target vehicle behind.

READ
RCW system can be set in audio system. For details, refer to "Audio System".

5-4. Tire Pressure Monitoring System (TPMS)

Tire Pressure Monitoring System (TPMS)

TPMS is an active safety configuration and can monitor pressure and temperature of tire in real-time and the information can be checked through information display area. When tire pressure is too low or temperature is too high, TPMS alarms.

OMX70-6080

When tire inflation pressure of one or more tires is insufficient or the temperature is too high, "(!)" yellow indicator light on instrument cluster remains on.

Low tire inflation pressure will increase fuel consumption and aggravate tire wear. Serious tire wear may cause a risk of tire blowout, inspect causes of air leakage. Please go to Jetour authorized service station immediately for inspection and repair.

When tire temperature is too high, stop driving at once to cool down tires naturally. Do not cool it down by pouring cold water, otherwise, tire may be damaged, causing an accident. Please go to Jetour authorized service station for inspection and repair immediately.

If TPMS has not received radio-frequency signal from one or more sensors after several minutes, TPMS will send system malfunction warning, "(!)" yellow indicator on instrument cluster remains on. Please go to Jetour authorized service station for inspection and repair immediately.

READ
Even if vehicle is equipped with TPMS, check if tire pressure and appearance are normal before driving. Please go to Jetour authorized service station for inspection and repair as necessary.

Function limit

■ TPMS may send system malfunction warning in the following conditions:

1. Configuration learning of TPMS is not performed after replacing wheels (-spare tire included).
2. TPMS may be affected by electromagnetic shielding of sensor due to installation of tire chains.
3. Tire pressure sensor or other components have been damaged, please go to Jetour authorized service station for inspection and repair as necessary.
4. TPMS may not work properly due to interference of electronic equipment (-over standard equipment) installed on vehicle, resulting in false warning.
5. TPMS may not operate due to radio interference; And it may be interfered temporarily due to strong electromagnetic radio signals with same frequency (433 MHZ).

5-5. Parking Assist System

Parking View Monitor System (If Equipped)

Parking view monitor system collects the rear view image of the vehicle through rear camera and displays the rear view and lane guideline to the operator by audio system display, providing safety and easy parking for driver.

Usage methods

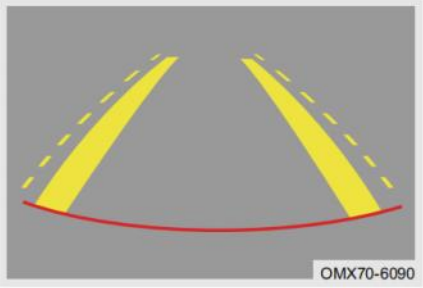

Move shift lever to R to enter parking view monitor system screen, and the screen will display the parking view monitor and lane guideline. Lane guideline varies depending on steering wheel rotation and it is used for prejudging the reversing traveling trace.

⚠ CAUTION

- Use the distance as a reference (such as on the hill).
- Vehicle width guideline and predicting line are wider than the actual line.
- Do not scratch the lens when cleaning dirt or snow on the camera surface.
- If tire is replaced with a different size, the displayed predicting line is different from the actual line, please use the rear view mirror or check and determine distance to other objects actually.

⚠ WARNING

- When reversing, make sure that back door is firmly closed.
- Never distract your attention from surrounding traffic due to images on display.
- Due to the limited monitoring range, parking view monitor system cannot view the bottom and corners of bumper.
- When reversing, always pay extra attention to surrounding children, small animals and objects, because they cannot always be detected by camera.
- Because rear camera uses wide-angle lens, object distance displayed on parking view monitor system may appear different from the actual distance.
- Never hit the lens. It is a precise instrument. Hitting the lens may lead to malfunction or damage, causing a fire or electric shock.
- When washing the vehicle body with high-pressure water, do not spray water around the camera, otherwise, water will enter camera and condense on the lens, causing malfunction, fire, or electric shock.
- Parking view monitor is convenient, but it is not a substitute for correct reverse operation. When reversing, be sure to look around to check if the surrounding is safe and reverse slowly.
- Rear camera lens may enlarge and distort the view, so image on display is different from real object or it cannot reflect the real object accurately, and there is also blind spot and a little delay.

Panoramic View Monitor System (If Equipped)

Panoramic view monitor system collects surrounding images of vehicle through four cameras, and displays the surrounding images and lane guideline on audio head unit, so as to assist the driver to park safely and easily.

Camera layout

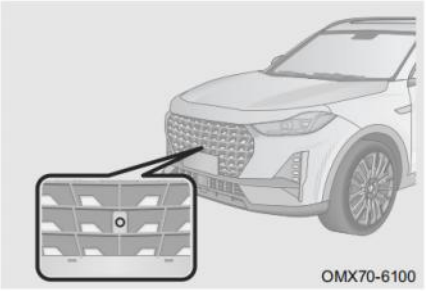

Installation position of front camera: Intake grille of front bumper.

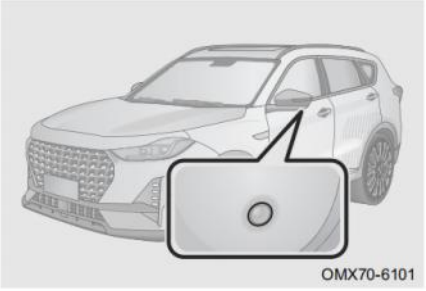

Installation position of left/right camera: Bottom of left/right outside rear view mirror.

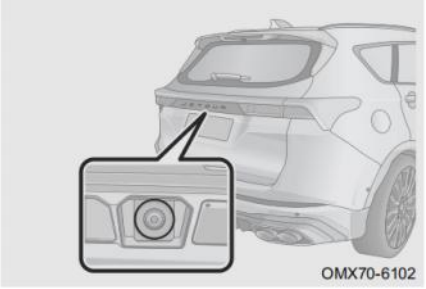

Installation position of rear camera: Upper middle part of rear license plate.

Usage methods

Turn vehicle power to ON mode, and vehicle speed is lower than 20 km/h:

Method 1: Move shift lever to R to enter panoramic view monitor system; move shift lever out of R to exit panoramic view monitor system after delaying 15 seconds.

Method 2: Click "Panoramic View Monitor" on application screen to enter panoramic view monitor system; Under panoramic view monitor screen, click " " button in the upper left corner to exit panoramic view monitor system.

Method 3: Turn on the left/right turn signal light to enter panoramic view monitor system (it is necessary to turn on "operate turn signal lights to activate panoramic view monitor" in panoramic view monitor system setting); Turn off left/right turn signal lights to exit panoramic view monitor system.

Note: After turning vehicle power to OFF mode or vehicle speed is higher than 30 km/h, it exits panoramic view monitor system.

READ
The panoramic view monitor system provides driving assistance convenience, but the object in the image does not reflect the actual size and obstacle distance. Compared to the actual image, the image has a little delay and blind spot. Therefore, the panoramic view function is not a substitute for driver's operation and judgment. Driver should pay attention to the surroundings and drive safely during turning on/off and using the function.

Switching view

OMX70-6104

Click "X" button, and shift lever is not in R, to exit panoramic view monitor system setting.

Click " " button to enter panoramic view monitor system setting.

Click " " button to switch to front wide angle view.

READ
The panoramic view monitor system is very helpful for parking and safety driving. It is recommended that you should be familiar with this function in an open and convenient area.

⚠ CAUTION

- Do not scratch the lens when cleaning dirt or snow on the camera surface.
- Do not place any object on the camera of panoramic view monitor system.
- The object distance seen from the panoramic view monitor system is different from the actual distance.
- Before using panoramic view monitor system, make sure to extend outside rear view mirrors and close the back door firmly.
- The panoramic view monitor system has been calibrated professionally before leaving the factory. Any removal/installation and changes on camera installation position and angle without permission may affect the function and effect of panoramic view monitor system.
- The panoramic view monitor system provides driving assistance convenience, but the object in the image does not reflect the actual size and obstacle distance. Compared to the actual image, the image has a little delay and blind spot. Therefore, the panoramic view function is not a substitute for driver's operation and judgment. Driver should pay attention to the surroundings and drive safely during turning on/off and using the function.

System setting

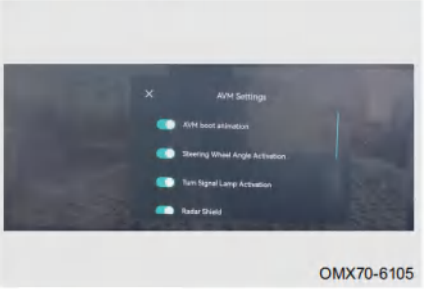

OMX70-6105

[AVM boot animation]: ON/OFF.

[Steering Wheel Angle Activation]: ON/OFF.

[Turn Signal Lamp Activation]: ON/OFF.

[Radar Shield]: ON/OFF.

[Auto View Zoom-in]: ON/OFF.

[Front view auxiliary line display]: ON/OFF.

[Body Transparency]:Set 0%-100%.

[Restore defaults]:Set restore defaults.

Parking Radar System

Parking radar system is a radar detection device, adopts radar sensors to detect if there are obstacles from front/rear of vehicle and distance from obstacles. The driver is prompted by the audio head unit display, sound alarm, etc., so as to assist the driver to park safely and easily.

Usage methods

Turn vehicle power to ON mode and move shift lever to R position to activate parking radar system; When a radar sensor detects an obstacle, audio head unit displays distance from obstacle (red, yellow, green areas) accompanied by alarm sound.

Note: When radar sensor is malfunctioning, the buzzer keeps sound for 2 seconds, meanwhile, exclamation mark is displayed.

READ
Monitoring distance is the shortest vertical distance between obstacle and radar sensor.

⚠ CAUTION
• For obstacles out of detection range, radar sensors will not alarm. • When vehicle is moving, be aware that the reverse radar sensors on the other side may get close to other obstacles.

Function limit

■ Parking radar system may not work normally in the following conditions:

1. When vehicle is on a steep slope.
2. When driving in jelly-like snow or rain.
3. Low objects such as rocks, etc. cannot be detected.
4. Objects higher than bumper cannot be detected.
5. Thin objects such as wires, fences and ropes, etc. cannot be detected.
6. When vehicle is equipped with a high frequency radio or antenna is in use.
7. When radar sensor surfaces are frozen, they will not detect any obstacle.
8. Radar sensors may not operate properly in hot or cold weather.
9. When radar sensors are covered by dirt, snow or mud, they may not detect obstacles.
10. Objects that easily absorb ultrasonic waves (such as soft snow, cotton, sponge) cannot be detected.
11. When there is noisy near the vehicle, (such as vehicle horns, motorcycle engines, air brakes of large vehicles, or other loud noises producing ultrasonic waves).

12.If multiple radar sensors detect multiple obstacles, the distances between each radar sensor and each obstacle are displayed on audio head unit simultaneously, and system sounds according to nearest obstacle.

Cleaning radar sensor

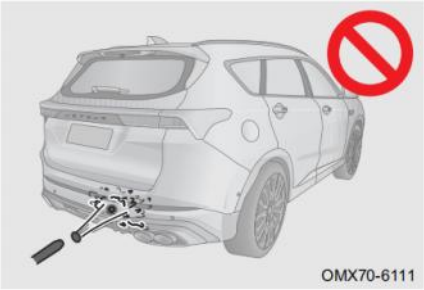
OMX70-6111

When washing vehicle, use a soft cloth or water (low water pressure) to wash off foreign matter such as snow, mud, and dust on the surface of radar sensor.

High pressure water flow such as water guns or large external forces may damage the radar sensors. Do not pinch or impact the radar sensors, otherwise the sensors will not work normally.

6-1. Basic Knowledge of Vehicle Emergency

Emergency Contact and Road Rescue (If Equipped) 150

Hazard Light..... 150

Reflective Vest..... 151

Warning Triangle..... 151

Spare Tools 152

6-2. Vehicle Emergency Handling

If You Have a Flat Tire While Driving 152

If Engine Coolant Temperature is High 157

If Battery is Depleted 158

If Your Vehicle Cannot Start Normally..... 160

6-3. Towing

Towing Vehicle..... 161

Emergency Towing Vehicle 162

Installing Towing Eyelet..... 163

6-4. Fuse

Fuse Box 163

Checking Fuse..... 164

Replacing Fuse..... 165

6-1. Basic Knowledge of Vehicle Emergency

Emergency Contact and Road Rescue (If Equipped)

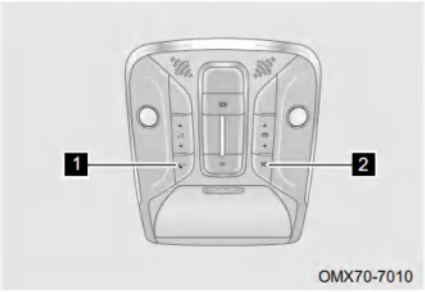

1 Emergency contact

The emergency contact can be contacted using the following methods:

Method 1: In the event of an accident, press the emergency contact button manually to contact the emergency contact.

Method 2: In the event of an accident, vehicle will contact emergency contact automatically after the vehicle reaches the automatic trigger condition.

2 Road rescue

In the event of a malfunction/an accident, press road rescue button manually, calls Jetour customer service to ask for rescue, making travel more assured.

READ

- For details of emergency contact setting and changing, please consult Jetour authorized service station.
- In order to ensure emergency contact and road rescue function work properly, focus on and renew the payment timely.
- When vehicle enters underground garage or travels on roads under intense electromagnetic interference, the emergency contact and road rescue function may not operate properly.

Hazard Light

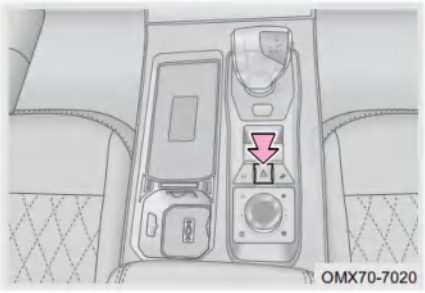

Press hazard light switch, turn signal lights flash and the turn signal indicator on instrument cluster flashes at the same time; press the switch again, turn signal lights and indicator will turn off.

In case of vehicle failure or traffic accident etc., please turn on the hazard lights to warn other vehicles, so as to avoid the secondary accident.

READ

- The hazard lights can still work when the vehicle power is turned to OFF mode.
- The hazard lights are automatically activated when the airbag is operating.

Emergency braking strobing

Turn on the emergency braking strobing by audio system. When brake pedal is depressed in emergency at higher speed, the turn signal lights and turn signal indicator on instrument cluster flash quickly to remind vehicles behind to take caution, avoiding rear-end collision; Release the brake pedal, press the hazard light switch, depress accelerator pedal or turn the vehicle power to OFF mode, the turn signal lights and turn signal indicator on instrument cluster will stop flashing.

Reflective Vest

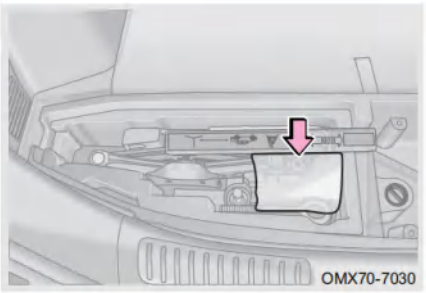

Reflective vest is located under the glove box or luggage compartment carpet.

In case of vehicle failure or traffic accident etc., wear the reflective vest with reflective strip facing outwards. It can warn other vehicles to avoid secondary accidents.

Warning Triangle

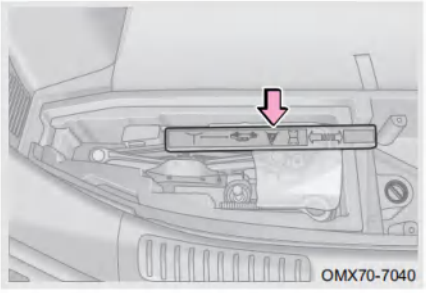

Warning triangle is located under the luggage compartment carpet.

In case of vehicle failure or traffic accident etc., the reflective performance of warning triangle can warn other vehicles to avoid secondary accidents.

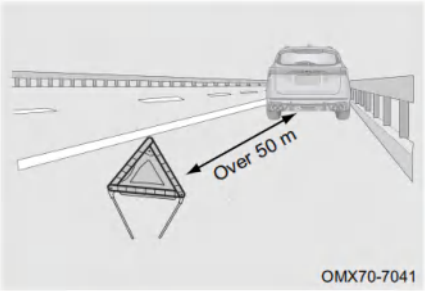

On a normal road, place the warning triangle at a distance of more than 50m behind the vehicle.

On the highway, place the warning triangle at a distance of more than 150m behind the vehicle.

In rain or when steering, place the warning triangle at a distance of over 150m behind the vehicle.

Spare Tools

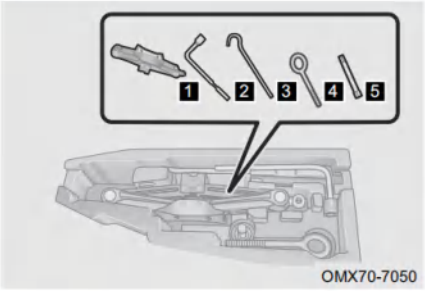

1 Jack
2 Wheel bolt wrench
3 Jack rocker
4 Towing eyelet
5 Wheel wrench extension rod

6-2. Vehicle Emergency Handling

If You Have a Flat Tire While Driving

If a tire goes flat during driving, slow down gradually, grip the steering wheel with two hands and keep driving straightly. Stop vehicle to a safe place away from the traffic road.

1. Preparations before replacing flat tire.

Step 1: Stop vehicles on solid, level ground;

Step 2: Apply the parking brake and shift the shift lever to P (for A/T models) or N (for M/T models);

Step 3: Turn vehicle power to OFF mode, and turn on hazard lights;

Step 4: Have everyone get out of vehicle, pull over and stay away from traffic;

Step 5: Wear reflective vest, and place the warning triangle at a distance of 50 m - 150 m behind the vehicle (depending on actual condition).

⚠ CAUTION
Do not continue driving with a flat tire. Driving even a short distance can damage the tire beyond repair.

2. Take out the spare tire.

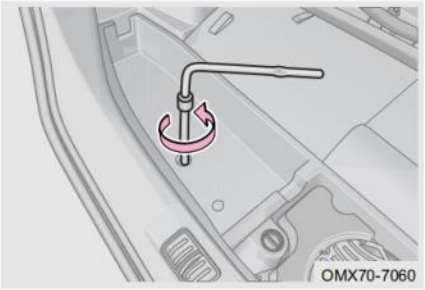

Step 1: Open back door, lift the luggage compartment carpet and take out luggage compartment storage box;

Step 2: Insert the wheel wrench extension rod into spare tire fixing bolt;

Step 3: Counterclockwise rotate extension rod to release spare tire with wheel bolt wrench;

> ⚠ CAUTION
>
> Take care to use spare tools when removing spare tire to prevent interior from being scratched or damaged.

Step 4: Take out spare tire fixing device hook and spare tire when spare tire is lowered to the lowest position.

3. Remove the flat tire.

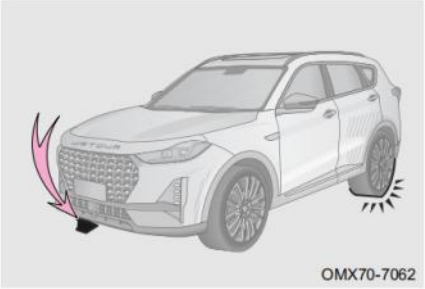

Step 1: Put a block under the tire diagonally opposite to flat tire to prevent vehicle from rolling;

Flat Tire	Wheel Block Position
Front left wheel	Behind rear right wheel
Front right wheel	Behind rear left wheel
Rear left wheel	Front of front right wheel
Rear right wheel	Front of front left wheel

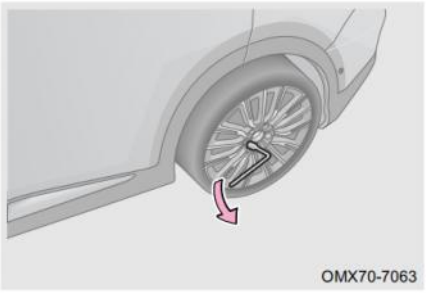
OMX70-7063

Step 2: Fit wheel bolt wrench to wheel bolt of flat tire, set the handle on left side, hold the end of wrench handle and push it downward, loosen each bolt of flat tire about one-half turn;

⚠ CAUTION

When removing wheel bolts with the wrench, be careful not to drop them as they can be damaged easily.

⚠ WARNING

Do not remove the bolts completely. Otherwise, wheel may drop off because of the vehicle pressure, causing personal injury.

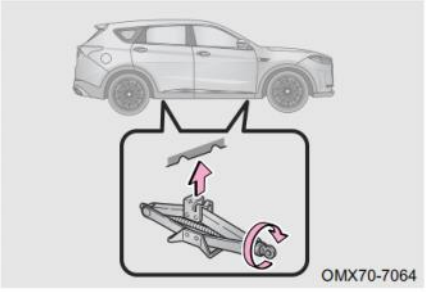
OMX70-7064

Step 3: Place jack on firm and level ground, turn jack handle clockwise by hand, making the notch of jack contact with the correct jacking-up point;

READ

- Jack rated load: 1,000kg.
- Jack the vehicle to a proper height at which tire can be replaced.

⚠ WARNING

Never put any part of body under the vehicle when vehicle is jacked up to avoid personal injury.

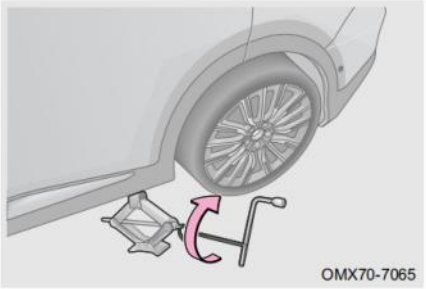
OMX70-7065

Step 4: When the notch of jack contacts correct jacking-up point, fit jack rocker into jack, and then fit wheel bolt wrench into jack rocker, and turn the wheel bolt wrench clockwise to jack up the vehicle;

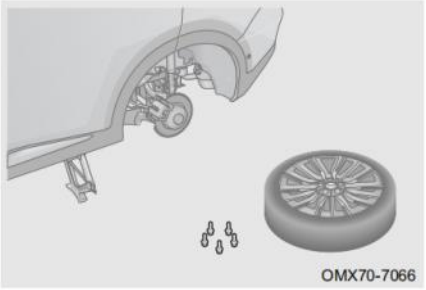
OMX70-7066

Step 5: Remove the wheel bolts of flat tire counterclockwise with the wheel bolt wrench, and remove the flat tire.

⚠ CAUTION

Place the flat tire on ground with rim facing upward, avoid scratching the rim surface.

4. Install the spare tire.

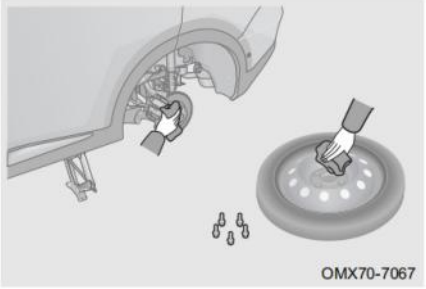
OMX70-7067

Step 1: Remove any attachments from mounting surface. Make sure wheel hub well contacts with wheel surface, and install spare tire;

READ

Vehicle body dynamic electronic stability system alarms abnormally after replacing with the non-full size spare tire. After using the normal size tire and driving for 1 km, it will automatically return to normal.

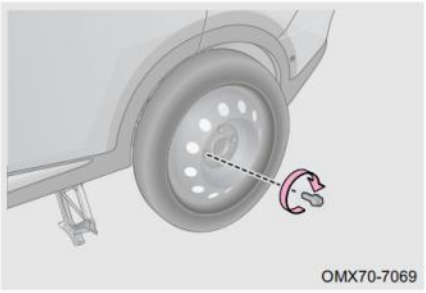
OMX70-7069

Step 2: When installing wheel bolts, screw into all wheel bolts clockwise by hand. Then straighten the spare tire, and pretighten all wheel bolts with wheel bolt wrench;

⚠ CAUTION
Do not apply oil or grease to wheel bolts.

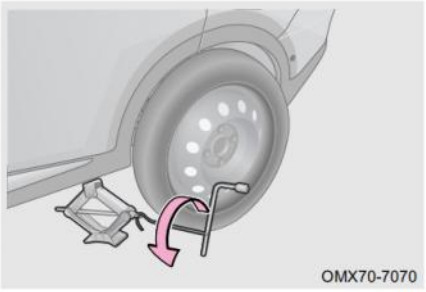
OMX70-7070

Step 3: Make sure all persons around the vehicle stay in the safe area, fit jack rocker into jack, and wheel bolt wrench into jack rocker, and turn wheel bolt wrench counterclockwise to lower the vehicle;

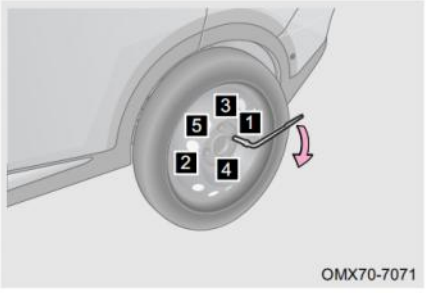

OMX70-7071

Step 4: Using wheel bolt wrench, tighten bolts in sequence shown in illustration. Repeat the process 2 to 3 times to ensure that wheel bolts are tightened in place;

Step 5: Stow the flat tire and place jack, warning triangle and spare tools in original place;

Step 6: When the inflation pressure of replaced spare tire is insufficient, drive vehicle slowly to the nearest Jetour authorized service station to inflate the tire to correct pressure.

⚠ WARNING

- Drive at specified speed of 60 km/h or less with a non-full size spare tire installed.
- Non-full size spare tire cannot be used for a long time. Tighten wheel bolts to 130 ± 10 N·m after replacing the non-full size spare tire. Drive slowly to the nearest Jetour authorized service station (recommended distance: ⩽ 80 km) to replace it with the standard tire. Otherwise, the wheels may fall off due to loose bolts.
- The vehicle becomes lower when driving with non-full-size spare tire compared to when driving with standard tires. Be careful when driving over uneven road surfaces.
- Spare tire is designed only for emergency use and should be used only for very short periods. It should never be used for long drives or extended periods.
- Remember that the non-full-size spare tire provided is specifically designed for use with your vehicle. Do not use your spare tire on another vehicle.
- Do not use more than one spare tires simultaneously.
- Replace the spare tire with a standard tire as soon as possible.
- Avoid sudden acceleration, abrupt steering, sudden braking and shifting operations that cause sudden engine braking.

If Engine Coolant Temperature is High

If the engine coolant temperature is high during driving, and engine coolant temperature gauge approaching H area or "" red indicator on instrument cluster comes on, please stop vehicle to a safe place away from the traffic road.

OMX70-7080

Step 1: Stop vehicles on solid, level ground;

Step 2: Apply the parking brake and shift the shift lever to P (for A/T models) or N (for M/T models);

Step 3: Turn off A/C system (water dripping from air conditioning after use is normal);

Step 4: Turn vehicle power to OFF mode after idling for several minutes, and turn on hazard lights;

Step 5: Before opening the hood, check whether there is steam or coolant overflow or leakage. Only open the hood when there is no steam or coolant overflow or leakage, otherwise, burns may occur;

Step 6: Check the coolant level, if the cause cannot be determined, please contact Jetour authorized service station for inspection and repair.

> ⚠ CAUTION
>
> - If engine overheats frequently, please contact Jetour authorized service station for inspection and repair immediately.
> - If the coolant level is low, pure water can be used temporarily, please go to Jetour authorized service station to replace coolant as soon as possible.

If Battery is Depleted

Jump-starting

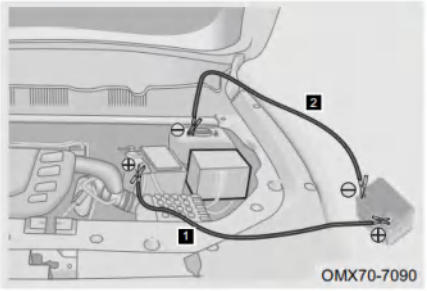

Step 1: Turn vehicle power to OFF mode, and connect jumper cables;

1 Connect one end of positive cable to positive terminal (+) of battery on discharged vehicle, and the other end to the positive terminal (+) of battery on rescue vehicle.

2 Connect one end of negative cable to negative terminal (-) of battery on rescue vehicle, and the other end to unpainted metal part on discharged vehicle.

Step 2: Start the engine of rescue vehicle, slightly increase engine speed and maintain for approximately 5 minutes to temporarily charge the battery on discharged vehicle;

Step 3: If the discharged vehicle is still unable to start, check whether the jumper cable is connected normally, and then charge the battery;

Step 4: Once the engine is started on discharged vehicle, remove jumper cables in the reverse order of connection (negative cable first and then the positive cable).

Note: Jump starting is only used to models with conventional battery (12 V).

⚠ CAUTION

- If the battery is lack of power frequently, please go to Jetour authorized service station for inspection and repair as soon as possible.
- The negative terminal of battery on rescue vehicle should not be directly connected to negative terminal of battery on discharged vehicle.
- Do not jump start unless you are sure that the battery voltage for jump starting is 12 - 13 V.
- When connecting and removing jumper cables, ensure that they do not become entangled in fan, belt, etc.
- Ensure that the jumper cables are properly connected and keep a certain distance between terminals, to prevent the jumper cables from touching each other or touching other metal parts of the vehicle.

⚠ WARNING

- The specified jumper cables should be used.
- Do not smoke, use matches, cigarette lighters or open flames near the battery.
- If you are unsure about how to follow the procedure, Chery Commercial Vehicle Co., Ltd. strongly recommends that you seek help from professional serviceman or at a Jetour authorized service station.

Replacing battery

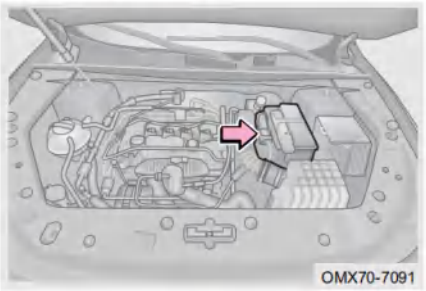
OMX70-7091

Step 1: Turn vehicle power to OFF mode;

Step 2: Open the hood;

Step 3: Remove the negative (-) battery terminal cable;

Step 4: Remove the positive (+) battery terminal cable;

Step 5: Remove the battery holder and the battery;

Step 6: Install a new battery that has the same specification as the used one;

Step 7: Install the new battery properly in the reverse order of removing.

Note: The new battery should have the same specifications with the genuine one. We recommend that you should go to a Jetour authorized service station for battery replacement.

ENVIRONMENTAL PROTECTION

Battery contains acid which is poisonous and corrosive. Please deal with it according to the local regulations and provisions regarding environmental protection.

⚠ CAUTION

While removing battery, be careful to avoid the metal tool contacting both battery terminals or touching the positive (+) battery terminal and body at the same time.

⚠ WARNING

- Do not leave battery within the reach of children.
- Do not smoke, use matches, cigarette lighters or open flames near the battery.
- Always wear gloves and safety glasses during operation, as battery contains acid which is poisonous and corrosive. Do not lean on the battery.
- If acid spills on your skin or clothes, the liquid must be neutralized with alkaline water (such as: soap water) immediately, and then wash it with clean water. Get emergency medical attention immediately if necessary.

If Your Vehicle Cannot Start Normally

If your vehicle cannot start normally, first make sure you have followed the correct starting procedures and check if fuel is sufficient.

■ Starter speed is too low, but vehicle cannot start normally

Step 1: Check if battery terminals are tight and clean;

Step 2: Turn on headlights. If the light is dim, it indicates that the battery is discharged. Please try jump starting;

Step 3：Try to start engine again, if it still cannot start normally, the starting system may be malfunctioning. Please contact Jetour authorized service station for inspection and repair immediately.

■ Starter speed is normal, but vehicle cannot start normally

Step 1: Turn vehicle power to OFF or ACC mode, try to start the engine again;

Step 2: If the engine still cannot be started normally, it may cause excessive fuel in cylinder due to repeat starting. Turn vehicle power to OFF mode, try to start engine again after a few minutes;

Step 3: Try to start engine again, if it still cannot start normally, please contact Jetour authorized service station for inspection and repair immediately.

⚠ CAUTION

- To avoid damage to the starter, starting operation should not exceed 15 seconds each time.
- If vehicle becomes difficult to start or stalls frequently, please go to Jetour authorized service station for inspection and repair as soon as possible.

6-3. Towing

Towing Vehicle

Towing must comply with local laws about towing.

Correct towing methods

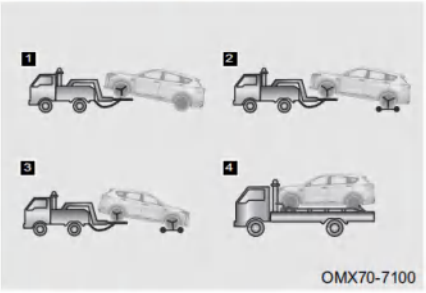

OMX70-7100

1 For front-wheel drive vehicles: Tow with a wheel lift-type truck from front, and secure the vehicle firmly.

2 For front-wheel drive, rear-wheel drive and 4WD vehicles: When towing with a wheel lift-type truck from front, use a towing dolly under the rear wheels, and secure the vehicle firmly.

3 For front-wheel drive, rear-wheeldrive and 4WD vehicles: When towing with a wheel lift-type truck from behind, use a towing dolly under the front wheels, and secure the vehicle firmly.

4 For front-wheel drive, rear-wheel drive and 4WD vehicles: When towing with a flatbed truck, secure the vehicle firmly.

⚠ CAUTION

- It is recommended to use flatbed truck for 4WD vehicles.
- Use a flatbed truck if the vehicle's wheels or axles are damaged.
- Ensure that there is a proper clearance between the wheels not lifted and ground. Otherwise, the bumper and chassis of the towed vehicle will be damaged during towing.

Wrong towing methods

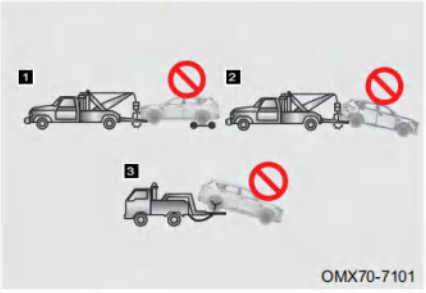

OMX70-7101

1 Tow with sling-type truck from front of the vehicle.

2 Tow with sling-type truck from rear of the vehicle while front wheels are on the ground.

3 Tow with wheel lift-type truck from rear of the vehicle while front wheels are on the ground.

⚠ CAUTION

Do not tow with a sling-type truck to prevent body damage.

Emergency Towing Vehicle

If flatbed truck is not available during towing, your vehicle may be temporarily towed using a towing hook. This should only be attempted on hard surfaced road for short distances at low speed.

When using towing hook, driver must be in towed vehicle to operate steering wheel and brake pedal, and vehicle's wheels, drive train, axle, steering system and braking system must be in good condition.

Before emergency towing, release parking brake (for emergency releasing electric parking, refer to "Brake System"), shift the shift lever to N, and turn vehicle power to ACC/ON mode.

⚠ CAUTION

- Do not perform emergency towing for long periods of time.
- Never tow a vehicle heavier than this vehicle, otherwise the vehicle may be damaged.
- Secure a towing cable, chain or lever to the vehicle towing eyelet.
- Both drivers must be familiar with the towing process, otherwise they cannot carry out towing work.
- Tow vehicle as straightly ahead as possible, do not tow vehicle from side to avoid damaging vehicle.
- If engine is not started, assist system will not work, therefore, braking and steering will be more difficult than usual. Operate carefully.
- For towing of A/T models, Chery Commercial Vehicle Co., Ltd. strongly recommends that you seek help from professional serviceman or Jetour authorized service station.
- If towed vehicle still cannot move, do not forcibly continue towing to avoid secondary damage to vehicle. Chery Commercial Vehicle Co., Ltd. strongly recommends that you seek help from professional serviceman or Jetour authorized service station.

⚠ WARNING

- To avoid personal injury, people other than driver should stay away from the vehicle when it is towed.
- When towing vehicle, avoid sudden starting or erratic driving maneuvers, doing so would apply excessive force on the towing eyelet, cable, chain or lever. The towing eyelet, cable, chain or lever may break and cause vehicle damage or serious personal injury.

Installing Towing Eyelet

Front towing eyelet

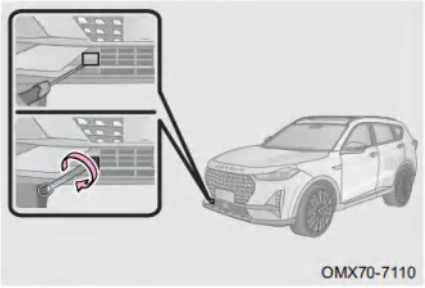
OMX70-7110

1 Use a flathead screwdriver with its tip wrapped with tape to remove the front towing eyelet hole cover;

2 Install towing eyelet into eyelet hole in a clockwise direction. Then tighten it firmly with wheel bolt wrench.

Rear towing eyelet

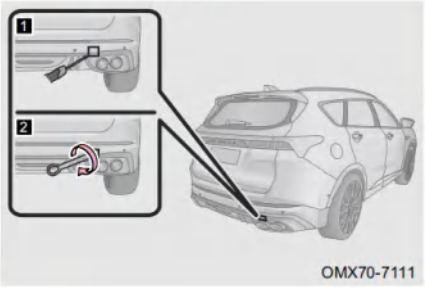

OMX70-7111

1 Use a flathead screwdriver with its tip wrapped with tape to remove the rear towing eyelet hole cover;

2 Install towing eyelet into eyelet hole in a clockwise direction. Then tighten it firmly with wheel bolt wrench.

⚠ CAUTION

- Only use specified towing eyelet. Otherwise, vehicle may be damaged.
- Drive the vehicle slowly and smoothly when towing. Impact due to excessive tension may damage the vehicle.
- Towing rope or towing bar can be installed only when towing eyelet is installed in place.

⚠ WARNING

Make sure that towing eyelet is installed securely. Otherwise, the towing eyelet may come loose when towing, which may cause an accident, resulting in death or serious injury.

6-4. Fuse

Fuse Box

Fuses are used to protect electrical components and circuits to avoid short circuit or overload. If fuse is blown, the protected components and systems will not work properly.

Front compartment fuse box

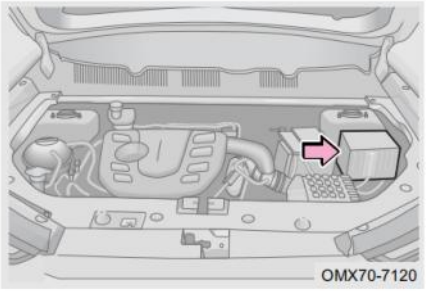

Step 1: Turn vehicle power to OFF mode;

Step 2: Disconnect the negative battery terminal cable;

Step 3: Remove front compartment fuse box cover to inspect or replace fuse.

Instrument panel fuse box

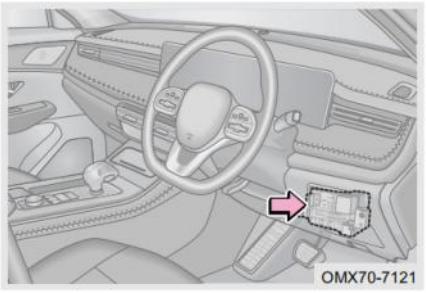

Step 1: Turn vehicle power to OFF mode;

Step 2: Disconnect the negative battery terminal cable;

Step 3: Remove instrument panel lower right protector to inspect or replace fuse.

READ

- Check suspected fuses according to the fuse and relay layout.
- The fuse box must be clean, keep it away from dampness when opening, as moisture may damage the electrical system.
- To prevent damage, be careful when removing/installing the instrument panel lower left protector. Please contact Jetour authorized service station as necessary.

Checking Fuse

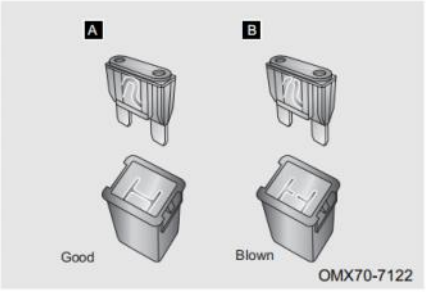

A Good fuse.

B Blown fuse.

READ

If the fuses are blown, they must be replaced.

Replacing Fuse

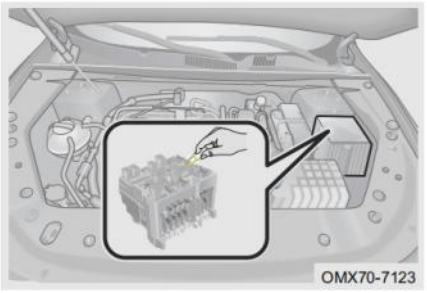

Step 1: Turn vehicle power to OFF mode;

Step 2: Check fuses according to the fuse and relay layout;

Step 3: Pull the suspected fuse out by a fuse remover;

Step 4: Check if the fuse is blown. If you are not sure whether the fuse has blown, replace the suspected fuse with spare fuse that has the same amperage rating. You can see the amperage rating on the schematic diagram inside the fuse box cover.

READ

If the spare fuse is unavailable, you can use a fuse with same specification from other unimportant electrical appliances in case of emergency. It is better to purchase a set of spare fuses and put them in vehicle for emergency use.

CAUTION

- Do not modify fuse or fuse box.
- Only install a fuse that has the same amperage rating as used one. Never replace a fuse with a wire, even as a temporary replacement. Otherwise, this may cause serious damage to electrical appliances, or even fire.

7-1. Repair and Maintenance

Repair and Maintenance ... 168

Jetour Authorized Service Station Provides Service for You 168

7-2. Normal Maintenance

Normal Maintenance 168

Checking Oil Level 169

Checking Transmission Fluid Level 171

Checking Brake Fluid Level 171

Checking Coolant Level 172

Checking Radiator and Condenser 173

Check Drive Belt 173

Checking Tires 174

Tire Rotation 175

Check Battery 176

Checking Air Conditioning Filter 176

Checking Windshield Washer Fluid 176

Checking Wiper Blades 177

7-3. Regular Maintenance

First Maintenance Card 178

Maintenance Schedule 180

Safety Protection System Record 185

7-1. Repair and Maintenance

Repair and Maintenance

There are two types of repair and maintenance: One is normal maintenance, which can be done by the customers; the other is regular maintenance, inspection and repair, which need to be completed by Jetour authorized service station.

For the details of regular maintenance, inspection and repair methods, please refer to this section; Regular maintenance can be helpful for you to find and eliminate potential dangers in time to prevent malfunctions. Scheduled maintenance of your vehicle is essential. Please strictly follow the maintenance schedule of "User Manual" to perform maintenance, ensuring that your vehicle maintains the best performance and good operating conditions, thus effectively extending the service life of the vehicle.

Please use the oil fluid recommended by Chery Commercial Vehicle Co.,Ltd. or your vehicle may be damaged.

Jetour Authorized Service Station Provides Service for You

Genuine spare parts and materials help to extend the service life of your vehicle. Please pay special attention here: Chery Commercial Vehicle Co.,Ltd. provides genuine spare parts to Jetour authorized service station located throughout the country. It is recommended that you go to Jetour authorized service station to replace genuine spare parts. Jetour authorized service station is the only professional service station authorized by Chery Commercial Vehicle Co., Ltd. the staff is trained professionally and strictly by Chery Commercial Vehicle Co., Ltd. they will wholeheartedly provide the best after-sales service for you.

ENVIRONMENTAL PROTECTION
Used engine oil, brake fluid, coolant, steering fluid, batteries and tires should only be disposed of by qualified waste disposal agencies or after consultation with manufacturers, and should not be taken out with household waste or disposed of into the communal drainage system.

7-2. Normal Maintenance

Normal Maintenance

Be sure to follow the correct maintenance procedures given in this section if you perform do-it-yourself maintenance.

This section only lists the simple maintenance instructions which can be performed by customers. However, there are still many items that have to be maintained by qualified technicians with special tools.

⚠ CAUTION

- Check for any tools or cloths that may have been left behind before closing the hood.
- Do not drive vehicle with the air filter removed, otherwise, excessive engine wear may be caused.
- Correctly add fluid to the appropriate level. If some fluid splashes onto the vehicle body, be sure to immediately wash it off with a wet cloth, avoiding damaging painted surface.

⚠ WARNING

- If the engine is very hot, do not open the coolant reservoir cap to prevent scalding injury.
- When the engine is running, keep hands, clothing and tools away from engine drive belts and cooling fan.
- Do not smoke near fuel filler or battery, otherwise, it may cause sparks or open flames, resulting in a fire.
- There is a high voltage in the electronic ignition system. Do not touch these components while the engine is running or the vehicle power is in ON mode.
- The vehicle that just stopped, engine, radiator, exhaust manifold and cylinder head will be very hot, so never touch them. Prevent any loose clothing from getting caught in the fan and causing personal injury because the cooling fan may automatically start and run at any time.

Checking Oil Level

Checking engine oil

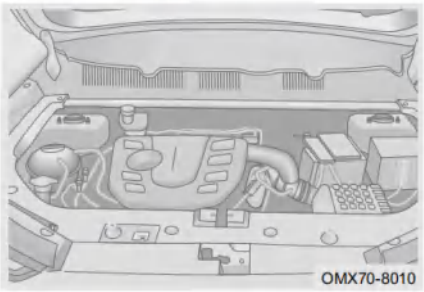
OMX70-8010

With the engine stalling and cooled down, check the oil level with the dipstick.

Step 1: Warm up the engine and then stop the vehicle on a level ground. Wait for approximately 5 minutes after turning off engine;

Step 2: Open the hood, pull out the dipstick and wipe it with a clean cloth;

Step 3: Insert the dipstick to the bottom uniformly and slowly;

Step 4: Leave the vehicle as is for approximately 3 seconds, pull out the dipstick again and check if oil level is correct.

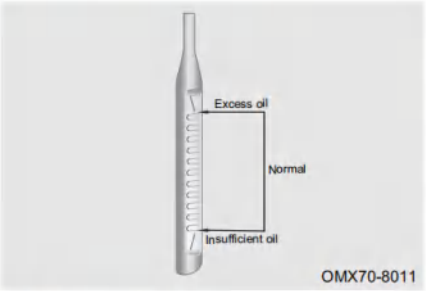

Put a cloth under the dipstick to avoid oil spilling onto engine or vehicle body.

Do not check the oil level immediately after the engine warms up, and wait until the oil returns into the bottom of engine.

Adding engine oil

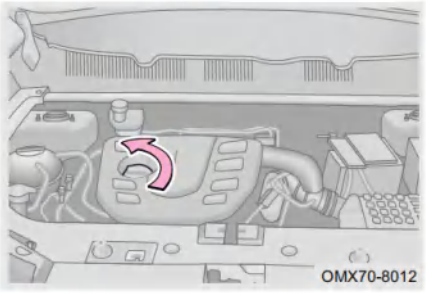

Step 1: Turn the engine oil filler cap counterclockwise to open it;

Step 2: Use the funnel to add a small amount of engine oil for several times and check the oil level with a dipstick again;

Step 3: When the level reaches the correct range, turn the engine oil filler cap clockwise to tighten it.

ENVIRONMENTAL PROTECTION

Do not discard the waste engine oil and filter in household waste, down the drain or spill on to the ground. Otherwise, it will cause serious environmental pollution. Please dispose it according to the local regulations regarding environmental protection.

⚠ CAUTION

- Do not overfill oil, or it may cause damage to engine.
- Only engine oil recommended by Chery Commercial Vehicle Co., Ltd. can be used. Otherwise, all the direct or indirect losses incurred are at customer's own risk.
- If oil is accidentally spilled on the surface of the engine during refueling, clean the spilled oil with canvas and other tools before tightening the engine oil filler cap.
- The engine oil filler cap cannot be placed up side down after removal to prevent misjudgment caused by oil backflow, and prevent oil flowed through seal ring from overflowing by itself after assembly again, which results in an illusion of oil leakage from the engine oil filler cap.

Checking Transmission Fluid Level

Checking, adding and replacing of transmission fluid should be done by professionals. Please go to Jetour authorized service station.

Checking Brake Fluid Level

OMX70-8020

Brake fluid level should be between the "MIN" and "MAX" marks. If the level is at or below the "MIN" mark, add brake fluid and go to Jetour authorized service station for inspection and repair immediately.

READ

If brake fluid needs to be added, brake fluid level should be 0 - 3 mm below MAX mark after adding.

⚠ CAUTION

- As the brake fluid is highly absorbent, do not leave the brake fluid reservoir cap open for a long period of time.
- If brake fluid splashes onto the painted surface of vehicle body, be sure to clean it with a wet sponge or wash it off with water to avoid corroding the parts or painted surface.
- Only brake fluid recommended by Chery Commercial Vehicle Co., Ltd. can be used. Otherwise, all the direct or indirect losses incurred are at customer's own risk.

⚠ WARNING

Never allow brake fluid to contact your skin or eyes. If the brake fluid splashes into your eyes or on your skin, flush the area immediately with a great quantity of water. Get emergency medical attention immediately if necessary.

Checking Coolant Level

Checking coolant

When engine is cold, the coolant level should be between the "MIN" and "MAX" marks. If the level is at or below the "MIN" mark, add coolant and go to Jetour authorized service station for inspection and repair immediately.

Adding coolant

Step 1: When the engine is cold, open the coolant reservoir cap, and add coolant until reaching "MAX" mark;

Step 2: Start and run the engine to a normal temperature. Observe the coolant level in the reservoir all the time. If the level falls below "MIN" mark, add coolant to an appropriate level until the coolant level does not fall down further;

Step 3: Turn off engine and check if coolant level is correct after engine cools down. If not, repeat above operations until level is normal;

Step 4: Install the coolant reservoir cap in place.

⚠ CAUTION

- If coolant level falls rapidly, check radiator, water hose and water pump for leakage.
- Only coolant recommended by Chery Commercial Vehicle Co., Ltd. can be used. Otherwise, all the direct or indirect losses incurred are at customer's own risk.

⚠ WARNING

- When engine is hot, the cooling system will be under high pressure. In this case, do not open the coolant reservoir cap, otherwise, the escaping steam may cause scalding injury.
- The coolant is poisonous, so pay extreme caution not to spray the liquid on any part of the vehicle, human body or ground when adding coolant. If the coolant accidentally gets onto your skin or into eyes, please wash the affected area with a great quantity of water. Get emergency medical attention immediately if necessary.

Checking Radiator and Condenser

After the vehicle runs for a period of time, the front surface of condenser and radiator could be blocked with some insects, leaves and other objects, which could affect the performance of air conditioning and cooling system, resulting in air conditioning operating improperly and cooling system overheating. It is necessary to clean radiator and condenser at that time.

Condenser: With engine turned off and cooled down, clean the condenser by blowing compressed air from rear to front through the radiator.

Radiator: It is recommended to clean the radiator surface every year. With engine turned off and cooled down, use compressed air or water to clean the radiator fins and blow off the insects and leaves, etc. Air and water pressure should not exceed 150 kPa. Otherwise, the radiator fins could be damaged.

⚠ CAUTION

- The material of radiator fins has good thermal conductivity, which is used to cool the coolant; Do not brush the fins, or it may cause damage to the fins, affecting the cooling effect.
- Do not spray water on the hot radiator while the engine is hot, otherwise, the generated high temperature steam may result in personal injury. Clean radiator when the engine is turned off and cools down.

Check Drive Belt

Drive belt will be extended after using a period of time, and the belt tension is not enough, which may damage the vehicle, so it is necessary to regularly check the belt tension.

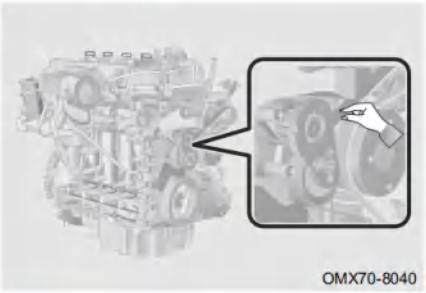

OMX70-8040

Step 1: Turn vehicle power to OFF mode;

Step 2: Twist the belt with your fingers to check the rotation angle of belt;

Step 3: If rotation angle is more than 90°, please go to Jetour authorized service station for inspection and repair.

⚠ WARNING

When checking the drive belt tension, turn off the engine and cool down to ensure that the engine belt is static.

Checking Tires

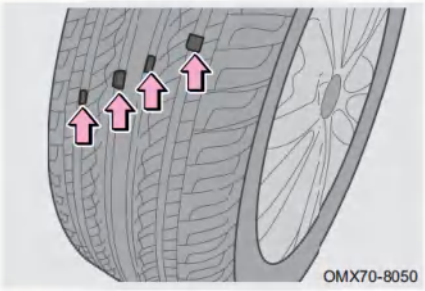

Check the tire tread for tread wear mark. When tread wear reaches its limit, tread will be in the same plane as the wear band. If such condition occurs, it indicates that performance and safety of tire seriously decrease, and replacement is necessary.

ENVIRONMENTAL PROTECTION

Always discard a used tire carefully. It should be handled according to the local regulations regarding to environmental protection.

Observe the following precautions. Failure to do so may lead to an accident, resulting in death or serious injury:

1. Do not use tires that were used on another vehicle.
2. Do not mix tires with remarkably different tread wear.
3. Do not use tires if you do not know how they were used previously.
4. Do not mix tires from different manufacturers, of different models or tread patterns.
5. Do not mix differently constructed tires (such as: radial, bias-belted or bias-ply tires).
6. Speedometer is affected by tire size. If the tire size (diameter) is different from the genuine one, it will not display accurate speed, and may result in accidents, such accidents loss are not covered by the warranty.

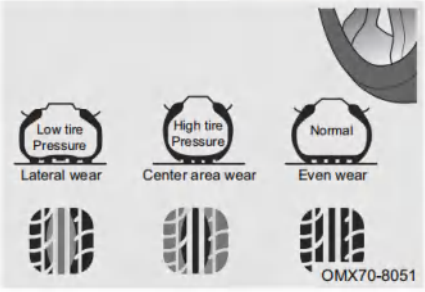

Incorrect tire inflation pressure will lead to excessive fuel consumption, shorten the tire service life and reduce the vehicle stability. Therefore, you should drive the vehicle with proper tire pressure (For provisions about the tire inflation pressure, please refer to the tire pressure label on driver side B pillar). When cold tire inflation pressure is higher than specified value or economic tire pressure is used, driving comfort will be reduced accordingly. Please adjust it according to your needs.

■ Be sure to keep proper tire inflation pressure. Otherwise, the following conditions may occur and result in death or serious injury:

1. Excessive wear.
2. Poor handling.
3. Uneven wear.
4. Poor sealing of the tire bead.
5. Wheel deformation or tire separation.
6. Possibility of blowouts resulting from overheated tires.
7. A greater possibility of tire damage caused by poor road conditions.

⚠ CAUTION

- It is normal that the tire inflation pressure increases after driving for a period of time.
- If the tire needs to be inflated frequently, please go to Jetour authorized service station for inspection and repair as soon as possible.
- If a tire often leaks or cannot be properly repaired due to a cut or other damages, it should be replaced.
- Use a tire pressure gauge to check cold tire inflation pressure. Visual inspection of a tire may cause inaccurate estimation on inflation pressure.
- If air leakage occurs while driving, do not continue to drive. Driving even a short distance can damage a tire beyond repair.
- Be sure to install tire valve caps properly. Otherwise, dirt could get into the valve core and cause blockage. If the caps are lost, install new ones as soon as possible.
- Make sure that the tire inflation pressure is within the specified range before driving under heavy load and at high speed. Insufficient tire inflation pressure will reduce braking stability, increase rolling resistance and accelerate tire wear, which is very likely to cause traffic accidents.

Tire Rotation

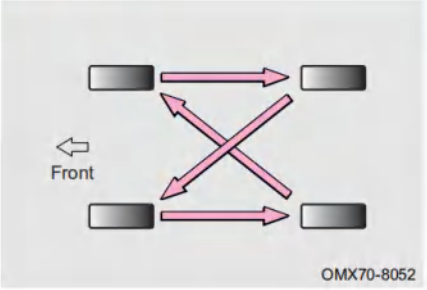

To equalize tire wear and extend tire service life, it is recommended that four tires are rotated every 10,000 km (best adjustment range is 5,000 - 7,000 km); the tire rotation cycle may vary according to driver's driving habits and road surface conditions.

READ

Tire rotation should be performed by professionals, please contact Jetour authorized service station.

Check Battery

Conventional battery (12 V): Check and make sure that the battery terminals are not corroded and that there are no loose connections, external cracks, or loose fixing clamps.

Checking Air Conditioning Filter

Air conditioning filter can prevent outside dust from entering vehicle through air conditioning outlets when driving for a long period of time, and it may be blocked after being used for a long time. If efficiency of air conditioning decreases significantly, check filter and replace it as necessary.

READ

- Inspection/replacement of air conditioning filter should be performed by professionals, please contact Jetour authorized service station.
- Using air conditioning with filter removed may result in degradation of dustproof performance, affecting efficiency of air conditioning.

Checking Windshield Washer Fluid

If no washer fluid is sprayed from washer nozzles, stop operating washers and check if it is necessary to add washer fluid. If it cannot operate properly after adding washer fluid, please contact Jetour authorized service station for inspection and repair.

⚠ CAUTION

- Never add antifreeze in the windshield washer fluid, because antifreeze will damage the body painted surface.
- Do not use water as washer fluid when temperature is below zero. Otherwise, water will be frozen, causing damage to washer.

Checking Wiper Blades

Check the roughness of wiper blade by sliding on its edge using your finger. If it is too rough, the wiper blade will not work effectively.

⚠ CAUTION

- Do not use the wiper blades to remove frost or ice covered on the windshield.
- If there are any chips on the windscreen from gravel, please repair quickly.
- In winter, make sure that the wipers are not frozen to the glass before operating them to avoid damaging the wiper blades.
- Apply pure water to rinse the windshield and blades after washing the vehicle in the automatic car washer, which can remove the remaining wax layer.
- Butter, silicone and fuel may cause the wiper blades to operate improperly, and it is recommended to clean the wiper blades with washer fluid.
- Do not operate wiper blades when windshield is dry. Doing so may scratch glass, resulting in permanent damage to wiper blades.
- When the blades are lifted for maintenance, the center connector position of the blades should be properly picked up, it is required to enter maintenance mode for some models before lifting (for details, please refer to electronic manual "Wiper System").

7-3. Regular Maintenance

First Maintenance Card

Maintenance card for the first 5,000 km (within 6 months after purchasing vehicle) (for general area)	
Date	
Mileage	
Using properties	
License plate number	
Owner information	
Name	
Address	
Telephone number	
Job	
E-Mail	
Delivery date	
License plate number	
Vehicle data	
Vehicle Identification Number (VIN)	
Engine number	
Transmission number	
Options	
Authorized service station seal	
Owner signature	

Maintenance card for the first 5,000 km (within 6 months after purchasing vehicle) (for general area)				
Date				
Mileage				
Check Items	1	Check lubrication system, cooling system and fuel system for leakage.	Y☐	N☐
	2	Replace engine oil and oil filter.	Y☐	N☐
	3	Check transmission fluid level and color. Add if necessary.	Y☐	N☐
	4	Check coolant level. Add coolant or adjust concentration if necessary.	Y☐	N☐
	5	Check transmission for leakage.	Y☐	N☐
	6	Check steering tie rod boot for damage.	Y☐	N☐
	7	Check propeller shaft constant velocity universal joint boot for damage.	Y☐	N☐
	8	Check brake fluid for leakage and brake pipes for damage.	Y☐	N☐
	9	Check if brake sub cylinders work normally.	Y☐	N☐
	10	Check if tire inflation pressure is as specified.	Y☐	N☐
	11	Check belt tension of alternator and A/C compressor. Adjust tension if necessary.	Y☐	N☐
	12	Check hood hinge and tab.	Y☐	N☐
	13	Check A/C system for leakage.	Y☐	N☐
	14	Check installation condition for steering universal joint boot and check for damage.	Y☐	N☐
	15	Check if gears of transmission shift smoothly.	Y☐	N☐
	16	Check coupling bolts between chassis and vehicle body for looseness.	Y☐	N☐
	17	Check seat belts for correct operation.	Y☐	N☐
	18	Check engine working condition, electronic injection parameters and emission while idling.	Y☐	N☐
	19	Check if mechanisms function properly by testing driving.	Y☐	N☐
	20	Check and clean panoramic moon roof drain hole for foreign matter blockage	Y☐	N☐

Maintenance Schedule

The maintenance schedule lists vehicle maintenance items that need to be carried out. Please go to Jetour authorized service station for maintenance according to mileage in maintenance schedule.

For general area, maintenance interval is 10,000 km or 12 months (whichever comes first) after first maintenance is performed.

If your vehicle is often used in severe driving conditions, you should follow the maintenance requirement each 5,000 km or 6 months (whichever comes first).

I: Inspect, adjust, clean or replace if necessary; R: Replace.

For severe driving conditions*											
Maintenance Item	Months	6	12	18	24	30	36	42	48	54	60
	Km × 1,000	5	10	15	20	25	30	35	40	45	50
For general driving conditions*											
Maintenance Item	Months	12	24	36	48	60	72	84	96	108	120
	Km × 1,000	10	20	30	40	50	60	70	80	90	100
Meter Indicating System		I	I	I	I	I	I	I	I	I	I
Video and Entertainment System		I	I	I	I	I	I	I	I	I	I
Diagnostic Tester Inspection		I	I	I	I	I	I	I	I	I	I
Front Wiper Blades		I	I	I	I	I	I	I	I	I	I
Rear Wiper Blades		I	I	I	I	I	I	I	I	I	I
Wiper System		I	I	I	I	I	I	I	I	I	I
Cooling Effect		I	I	I	I	I	I	I	I	I	I
Air Conditioning System		I	I	I	I	I	I	I	I	I	I
Air Conditioning Filter		I	I	I	I	I	I	I	I	I	I
Coolant Level		Inspect every 6 months or 5,000 km (whichever comes first), and replace every 2 years or 40,000 km (whichever comes first).									
Freezing Point of Coolant		I	I	I	I	I	I	I	I	I	I
Brake Fluid		It is recommended to replace every 2 years or 60,000 km (whichever comes first).									

For severe driving conditions*											
Maintenance Item	Months	6	12	18	24	30	36	42	48	54	60
	Km × 1,000	5	10	15	20	25	30	35	40	45	50
For general driving conditions*											
Maintenance Item	Months	12	24	36	48	60	72	84	96	108	120
	Km × 1,000	10	20	30	40	50	60	70	80	90	100
Brake Fluid Level		I	I	I	I	I	I	I	I	I	I
Water Content of Brake Fluid		I	I	I	I	I	I	I	I	I	I
Engine Oil And Oil Filter		R	R	R	R	R	R	R	R	R	R
Engine Oil Level		I	I	I	I	I	I	I	I	I	I
Automatic Transmission Fluid		Replace every 4 year or 60,000 km (whichever comes first)									
Automatic Transmission Filter (If Equipped)		Replace every 4 year or 60,000 km (whichever comes first)									
Transmission Fluid Level		I	I	I	I	I	I	I	I	I	I
Fuel Filter		External fuel filter: Replace every 2 year or 20,000 km (whichever comes first); Internal fuel filter: The integrated fuel pump is maintenance free type (troubleshoot the cause of failure)									
Battery Voltage		I	I	I	I	I	I	I	I	I	I
Shock Absorber		I	I	I	I	I	I	I	I	I	I
Propeller Shaft and Boot		I	I	I	I	I	I	I	I	I	I
Torque of Chassis Bolt		I	I	I	I	I	I	I	I	I	I
Steering Gear		I	I	I	I	I	I	I	I	I	I
Steering Column		I	I	I	I	I	I	I	I	I	I
Steering Link, Ball and Boot		I	I	I	I	I	I	I	I	I	I
Tire Appearance		I	I	I	I	I	I	I	I	I	I
Tire Pattern		I	I	I	I	I	I	I	I	I	I

For severe driving conditions*											
Maintenance Item	Months	6	12	18	24	30	36	42	48	54	60
	Km × 1,000	5	10	15	20	25	30	35	40	45	50
For general driving conditions*											
Maintenance Item	Months	12	24	36	48	60	72	84	96	108	120
	Km × 1,000	10	20	30	40	50	60	70	80	90	100
Tire Inflation Pressure		I	I	I	I	I	I	I	I	I	I
Spare Tire Inflation Pressure		I	I	I	I	I	I	I	I	I	I
Torque of Wheel Bolt		I	I	I	I	I	I	I	I	I	I
Tire Rotation		It is recommended to rotate your tires every 10,000 km (the optimal adjustment range is 5,000 - 7,000 km).									
Spark Plug		Inspect every 20,000 km, and replace every 30,000 km.									
Accessory Belt		Inspect every 30,000 km, and replace every 60,000 km.									
Brake Plate		I	I	I	I	I	I	I	I	I	I
Air Filter		Inspect every 5,000 - 8,000 km, and replace every 10,000 - 15,000 km.									
Engine Oil Pan and Drain Bolts		I	I	I	I	I	I	I	I	I	I
Transmission Housing Body		I	I	I	I	I	I	I	I	I	I
Related Fluid Line (such as steering, brake, fuel etc.) and Wire Harness		I	I	I	I	I	I	I	I	I	I
Fuel Vapor Rubber Pipe		I	I	I	I	I	I	I	I	I	I
Refueling Hose of Fuel		I	I	I	I	I	I	I	I	I	I
Panoramic moon roof		I	I	I	I	I	I	I	I	I	I
Charcoal Canister Filter (If Equipped)		Replace every 3 years or 60,000 km (whichever comes first).									
Timing Chain		Maintenance-free (except for the cause of failure).									

For severe driving conditions*											
Maintenance Item	Months	6	12	18	24	30	36	42	48	54	60
	Km × 1,000	5	10	15	20	25	30	35	40	45	50
For general driving conditions*											
Maintenance Item	Months	12	24	36	48	60	72	84	96	108	120
	Km × 1,000	10	20	30	40	50	60	70	80	90	100
Battery		Maintenance-free (except for the cause of failure).									
Throttle Valve		It is recommended to clean every 15,000 km.									
Four-wheel Alignment		Check four-wheel alignment every 20,000 km and adjust if necessary.									
*: We recommend that you ask your Jetour authorized service station for the actual maintenance schedule applied to your vehicle.											

READ

- The frequency of scheduled inspection and maintenance services in the table is minimal. However, it may be necessary that they be performed more frequently depending on road conditions, weather, atmospheric conditions and vehicle usage. These conditions may differ from one country to another. Therefore, there may be special requirement in your country. We recommend that you ask your Jetour authorized service station for the actual maintenance schedule applied to your vehicle.
- Continue periodic maintenance beyond 100,000 km or 120 months by returning to the third column of the maintenance schedule and adding 100,000 km or 120 months to the column headings.
- For special area, there may be special maintenance specifications. We recommend that you ask your Jetour authorized service station for the actual maintenance specifications applied to your vehicle.

⚠ CAUTION

- The engine oil and oil filter should be replaced more frequently if the vehicle is driven under severe conditions mentioned in the following examples*.
- It should be checked every 5,000 km or 6 months (whichever comes first) if the vehicle is driven under severe conditions mentioned in the following examples*.
- The lubricant should be replaced every 5,000 km or 6 months (whichever comes first) if the vehicle is driven in the following areas.
  - High humidity areas.
  - Mountainous areas.
  - Extremely cold and hot areas.
  - Drive on rough roads (bumpy roads, gravel roads, snow, etc.) for a long time.
  - Drive on mountain roads, uphill/downhill for a long time.
  - Drive the vehicle for a short distance frequently.
  - In many cases, drive in high temperature, heavy traffic urban road.
  - When used as a police car, taxi, commercial vehicle, trailer, etc.
- The air filter and air conditioning filter should be replaced more frequently if the vehicle is driven under severe conditions mentioned in the following examples*.

*Examples of severe driving conditions:

- Drive in extremely cold and hot weather (only for engine oil, engine oil level, steering and suspension system).
- Drive the vehicle for a short distance frequently (only for engine oil, engine oil level, disc brake pads and discs/front and rear axle boots and axle shaft joint portions, brake lining and drums).
- Drive on dusty roads (only for air cleaner element, disc brake pads and discs/front and rear axle boots and axle shaft joint portions, brake lining and drums, air filter element for the climate control system).
- Drive on rough and/or muddy roads (only for disc brake pads and discs/front and rear axle boots and axle shaft joint portions, brake lining and drums, air filter element for the climate control system).
- Drive in areas where road salt or other corrosive materials are used (only for fuel system, lines and connections, disc brake pads and discs/front and rear axle boots and axle shaft joint portions, brake lining and drums, inspect brake lines and check operations of parking and service brake system, steering and suspension system).

⚠ CAUTION

- In the coastal areas (only for fuel system, lines and connections, disc brake pads and discs/front and rear axle boots and axle shaft joint portions, brake lining and drums, inspect brake lines and check operations of parking and service brake system, steering and suspension system).

Safety Protection System Record

If your vehicle equips airbag system, the system must be replaced 10 years from the date of vehicle purchase. The system must be replaced by Jetour authorized service station.

To make sure airbag system operates normally, please always replace the airbag system at Jetour authorized service station within the specified time.

If airbag system is replaced before the specified date (such as after an accident), please fill the replacement record for future reference.

Note: Your vehicle may not be equipped with the following safety system components.

Airbag System Replacement Record	
☐	Driver airbag
☐	Front passenger airbag
☐	Left curtain (if equipped)
☐	Right curtain (if equipped)
☐	Left seat airbag (if equipped)
☐	Right seat airbag (if equipped)
☐	Airbag control module
☐	Airbag harness
☐	Pre-tensioner seat belt (if equipped)
☐	Other components
1	
2	
3	
4	
Date	
Signature of dealer of sales & service:	

Airbag System Replacement Record	
☐	Driver airbag
☐	Front passenger airbag
☐	Left curtain (if equipped)
☐	Right curtain (if equipped)
☐	Left seat airbag (if equipped)
☐	Right seat airbag (if equipped)
☐	Airbag control module
☐	Airbag harness
☐	Pre-tensioner seat belt (if equipped)
☐	Other components
1	
2	
3	
4	
Date	
Signature of dealer of sales & service:	

SPECIFICATION

8-1. Label Location

Vehicle Identification Number (VIN) 188

Vehicle Product Label 189

Engine Number..... 189

Microwave Window 189

8-2. Vehicle Specifications

Vehicle Dimensions 190

Vehicle Type..... 191

Vehicle Weight..... 191

Vehicle Performance 192

Fuel System 192

Engine..... 193

Transmission..... 194

Suspension System..... 194

Steering System 194

Brake System..... 194

Wheel Alignment..... 195

Wheel and Tire 195

Fluid Capacity and Specification..... 196

Battery..... 196

Measurement Range of Vehicle Overall Size Excluding Following Components..... 197

8-1. Label Location

Vehicle Identification Number (VIN)

Vehicle Identification Number (VIN) on actual vehicle

Type 1

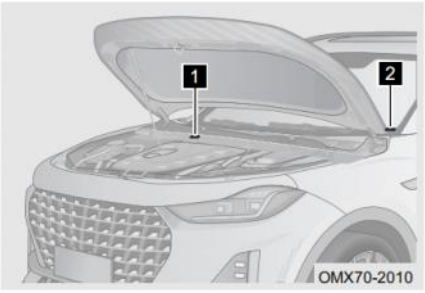

1 Vehicle Identification Number (VIN) is engraved on lower right of engine compartment drip channel garnish (Due to regional differences, the location of VIN code shall be subject to the actual vehicle).

2 Vehicle Identification Number (VIN) label is located on upper left of passenger side instrument panel, and can be seen from the outside through the front windshield.

Type 2

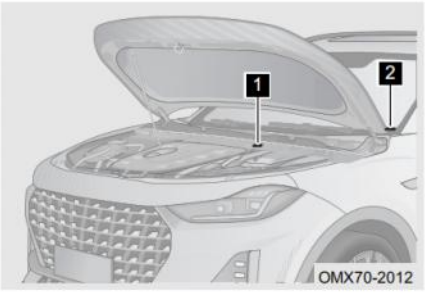

1 Vehicle Identification Number (VIN) is engraved on lower left of engine compartment drip channel garnish (Due to regional differences, the location of VIN code shall be subject to the actual vehicle).

2 Vehicle Identification Number (VIN) label is located on upper left of passenger side instrument panel, and can be seen from the outside through the front windshield.

⚠ CAUTION
It is forbidden to cover, paint, weld, cut, drill or remove Vehicle Identification Number (VIN) and areas around it.

Vehicle Product Label

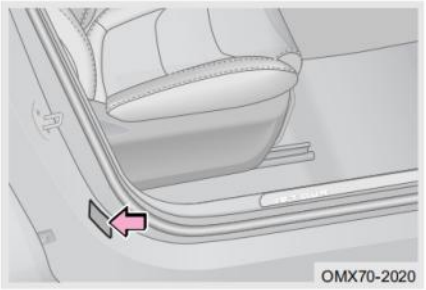

Vehicle product label is located on right quarter outer panel as shown in the illustration.

Engine Number

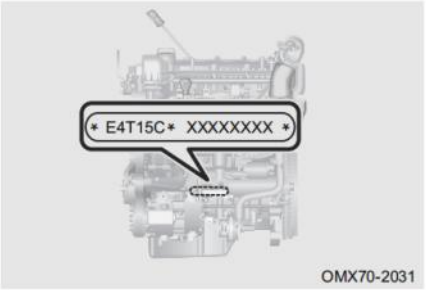

Engine number is located on engine block as shown in the illustration.

> ⚠ CAUTION
>
> The engine models used in vehicles with different configurations are different, and specific engine number location is based on the actual vehicle configuration engine, as shown in the figure above.

Microwave Window

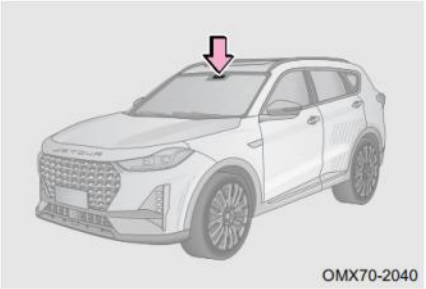

The microwave window is located on the inner side of the front windshield and at the right side to the back of the inside rear view mirror, where is for wireless RF signal transmission and installation of automotive electronic identification.

8-2. Vehicle Specifications

Vehicle Dimensions

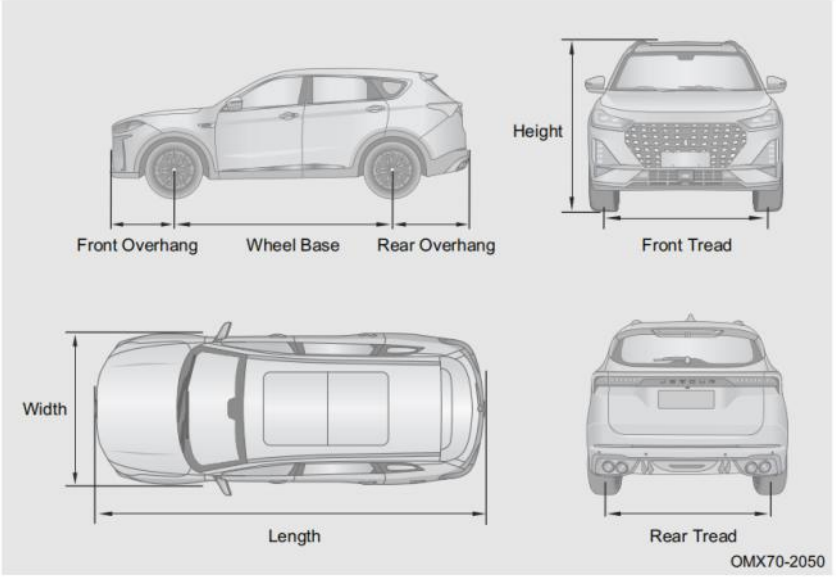

Overall Size	Length (mm)	4,724
	Width (mm)	1,900
	Height (mm)	1,720
Wheel Base (mm)		2,720
Tread	Front (mm)	1,600
	Rear (mm)	1,605
Overhang	Front (mm)	930
	Rear (mm)	1,074

Vehicle Type

Vehicle Type	4 × 2 front-wheel drive, front-wheel steering, transverse front-engine, 2-compartment 5-door 5-7 seat integral body, right-hand drive
Engine Model	SQRE4T15C
Engine Type	Vertical, 4-cylinder in-line, water-cooled, 4-stroke, double overhead camshaft, turbocharging, intercooler
Fuel Supply Type	Multiport sequential electronic injection
Transmission Model	626DHA

Vehicle Weight

Vehicle Curb Weight (kg)		1,551	1,576
Vehicle Curb Axle Weight	Front Axle (kg)	862	868
	Rear Axle (kg)	689	708
Manufacturer Maximum Total Weight (kg)		2,076	2,101
Manufacturer Maximum Total Axle Weight	Front Axle (kg)	950	956
	Rear Axle (kg)	1,126	1,145
Seating Capacity (Including Driver) (Person)		7	

⚠ WARNING

Please follow the vehicle load specified in the instruction manual and do not exceed the allowable total weight. Otherwise, the brake and handling performance of the vehicle may change and could cause an personal injury and accident.

Vehicle Performance

Passing Performance	Minimum Ground Clearance (mm)	145
	Minimum Turning Diameter (m)	12
	Approach Angle (°)	19
	Departure Angle (°)	18
Power Performance	Maximum Vehicle Speed (km/h)	180
	Maximum Gradeability (%)	45

Fuel System

Fuel Type*1	Unleaded gasoline with an octane number of 91 or higher
	Unleaded gasoline with an octane number of 92 or higher
	Unleaded gasoline with an octane number of 95 or higher (unleaded super gasoline)
	E22-E100
Fuel Tank Type	Plastic fuel tank
Fuel Tank Capacity	57L
Fuel Pump	Vane type electric fuel pump

*1: Please use the fuel recommended by Jetour authorized dealers.

READ

Vehicles with catalytic converters can only use unleaded gasoline. In order to avoid accidentally using the wrong type of fuel, the fuel filler pipe has a neck-down type fuel filler design, will only accommodate a standard unleaded gasoline fuel nozzle.

CAUTION

- Only use the fuel type recommended by Chery Commercial Vehicle Co., Ltd.
- Gasoline numbers lower than specified standard may cause damage to the engine and such damage is not covered under warranty.
- Using leaded gasoline will cause three-way catalytic converter to lose its effectiveness and exhaust system may function improperly.
- If you accidentally fill leaded gasoline to the fuel tank and start the engine (-even if only a small amount is filled), it will cause permanent damage to the catalytic converter. Therefore, if you accidentally fill leaded gasoline, please contact Jetour authorized service station for inspection and repair immediately.

Engine

Engine Model	SQRE4T15C
Cylinder Bore Diameter (mm)	77
Piston Stroke (mm)	80.5
Displacement (mL)	1,498
Compression Ratio	9.5:1
Rated Power (kw)	115
Rated Power Speed (r/min)	5,500
Maximum Net Power (kw)	108
Maximum Net Power Speed (r/min)	5,500
Maximum Net Torque (N·m)	230
Maximum Torque Speed (r/min)	1,750 - 4,000

Transmission

Transmission Model		626DHA
Gear Position	1st Gear	4.538
	2nd Gear	2.35
	3rd Gear	1.302
	4th Gear	1.021
	5th Gear	0.907
	6th Gear	0.702
	Reverse Gear	3.661
	Final Reduction Gear Ratio	1st/2nd/5th/6th gear: 4.158 3rd/4th/R gear: 4.648

Suspension System

Front Suspension	Macpherson independent suspension
Rear Suspension	Multi-link independent suspension

Steering System

Power Steering Type	Electric boost
Steering Gear Type	Rack & pinion steering gear

Brake System

Foot Brake	Front Wheel	Disc brake
	Rear Wheel	Disc brake Brake
Brake Booster		Booster Vacuum Booster
Parking Brake		Electric parking brake for rear wheels
Brake Pedal Free Play		5.6 - 12 mm
Max Brake Pedal Play		118.8 mm
Reasonable range of use for brake plate		Valid thickness of front friction material: 9 mm Valid thickness of rear friction material: 9 mm

⚠ WARNING
• In the case of heavy load, the brake fluid should be replaced at the same time as the replacement of brake pads. • When adding brake fluid, make sure it is absolutely clean. If any dirt gets into the brake system, it may result in loss of braking performance.

Wheel Alignment

Front Wheel	Front Wheel Camber	-25′ ± 45′
	Kingpin Caster Angle	4°30′ ± 60′
	Kingpin Inclination Angle	11°30′ ± 60′
	Front Wheel Toe-in	3′ ± 3′ (left) 7′ ± 3′ (right)
Rear Wheel	Rear Wheel Camber	-42′ ± 30′
	Rear Wheel Toe-in	6′ ± 10′
Sideslip Value		0±3m/Km

Wheel and Tire

Tire Model		235/55 R19; T125/80 D17
Rim Model		19×7 1/2J; 17×4T
Cold Tire Inflation Pressure (kPa)	Front Wheel	230
	Rear Wheel	230
	Spare Tire (Non-full-size spare tire)	420
Tightening Torque of Wheel Bolts		130 ± 10 N·m
Wheel dynamic balance requirements for vehicle with a maximum design speed of more than 100 km/h		Allowable residual dynamic balance mass: Clamp balance block side ⩽ 8 g, paste balance block side ⩽ 10 g

READ

The tire inflation pressures listed in the table above apply only to cold tires. The pressure increases slightly when the tire is heated, but it is unnecessary to lower the pressure.

CAUTION

- Tire pressure should be checked at least once a month and is particularly important if driving at high speeds.
- Cold tire inflation pressure values are listed on a label of the driver's doorsill.

Fluid Capacity and Specification

Fluid Name	Specification	After-sale Maintenance
Oil	API SM and above SM 5W-30	4.2 ± 0.2 L (replace the oil and oil filter at the same time)
Transmission Fluid	Sinopec DCTF-GS	3.4 ± 0.1 L
Coolant	Red organic coolant (-40℃)	9.3 L
Brake Fluid	DOT4	825 ± 50 ml
Refrigerant	R134a	600 G

READ

- The above filling amount is only for reference. The specific fluid amount should be based on the actual vehicle measurement.
- Only use the oil fluid recommended by Chery Commercial Vehicle Co., Ltd. Other fluids may damage the related vehicle systems.

Battery

Engine Model	Battery Model
SQRE4T15C	12V 60Ah

Measurement Range of Vehicle Overall Size Excluding Following Components

Components not included in vehicle length measurement range

The following devices do not have laden function and do not exceed the front or rear end of the vehicle by more than 50 mm, and fillet radius of edge and corner is no less than 5mm:

— Wiper and washer

— Outer identification, including registered trademark, manufacturer name, origin, model name and type, engine emission, transmission type, drive mode and other distinguishing identification of the vehicle

— Lights and light signal device

— Anti-collision rubber block and equivalent

— External sunshade device

— Customs sealing device and its protective device

— Device used to fixed raincloth and its protective device

— Locking device, hinge, handle, controller, switch

— Step plate (or ladder), vehicle climbing step plate and handle on top of bumper used for cleaning windows.

— Rear emblem plate with LOGO

— Removable trailer or towing device

— Exhaust tail pipe

Components not included in vehicle width size:

— Indirect view device

— School bus stop plate in inoperative state

The following devices do not have laden function and their one side size exceeds the side of vehicle for no more than 50mm, and fillet radius of edge and corner is no less than 5mm:

— Outer identification, including registered trademark, manufacturer name, origin, model name and type, engine emission, transmission type, drive mode and other distinguishing identification of the vehicle

— Lights and light signal device

— Anti-collision rubber block and equivalent

— Customs sealing device and its protective device

— Device used to fixed raincloth and its protective device

— Local water drain slot: Refers to the water drain slot used to guide rain flow above driver door (or window) and passenger door, both sides of front windshield

— Flexible protruding part of splash proof system

— Retractable step plate, entering/exiting slope of bus, lifting platform and equivalent that is in the retract state

— Locking device, hinge, handle, controller, switch

— Tire failure signal device

— Tire pressure indicator

— Deformed part of tire wall directly above contact point between tire and ground

— Reversing assistance device

— Exhaust tail pipe

Components not included in vehicle height measurement range:

Soft part of antenna

Device without laden function:

— Intake duct

— Indirect view device

— Current collecting device of electric vehicle (including its fixing device)

— Vehicle rear removable or foldable air deflector, with the deployed length no more than 2000 mm and folded length no more than 200 mm

— Tailboard, entering/exiting slope and equivalent with a horizontal length no more than 300 mm in retract state

— Tail ladder

A

Adaptive Engine Control System 109
Adjusting Steering Wheel 32
After Starting Engine 11
Air Conditioning Cooling Operation 90
Air Conditioning Heating Operation 92
Air Conditioning Operation 87
Air Outlets Airflow Control 92
Airbag (SRS) 125
Anti-lock Brake System (ABS) ... 120
Automatic Parking System (-AUTO HOLD) 116
Automatic Transmission 110

B

Back Door Emergency Opening . 103
Before Starting Engine 10
Blind Spot Detection (BSD) System (Independent Control) (If Equipped) 136
Brake System 194

C

Check Battery 176
Check Drive Belt 173
Check the Exhaust System 13
Checking Air Conditioning Filter . 176
Checking Brake Fluid Level 171
Checking Coolant Level 172
Checking Fuse 164
Checking Oil Level 169
Checking Radiator and Condenser 173
Checking Tires 174
Checking Transmission Fluid Level 171
Checking Windshield Washer Fluid 176
Checking Wiper Blades 177
Child Lock 74
Child Restraint System 54
Conventional Display Interface 24
Correct Sitting Posture 43
Cruise Control System (CCS) (If Equipped) 134
Cybersecurity Notice for Scrapping or Resale 19
Cybersecurity Support Service Update or Termination Notice 18

D

Delivery Inspection Certificate 7
Door Lock Switch 73
Door Mechanical Switch 73
Door Open Warning (DOW) System 138
Driving Information Interface 25
Driving on Road Covered with Ice and Snow 17

E

Effective Range 69
Electric A/C 85
Electric Parking Brake System (EPB) 114
Electric Power Steering System (EPS) (If Equipped) 113
Emergency Contact and Road Rescue 150
Emergency Towing Vehicle 162
Engine 193
Engine Number 189
ENGINE START STOP Switch ... 106
Extended Function 124
Exterior Lighting 38

F

"Face to face" Consultative Service Card 3
First Maintenance Card 178
Fluid Capacity and Specification 196
Fogging Instructions for Light 42
Follow Me Home Function 41
Foot Brake 118
Front Seat 45
Fuel System 192
Fuse Box 163

G

Gasoline Particulate Filter (GPF) (If Equipped) 110

H

Hazard Light 150
Head Restraint 44
Hill Descent Control (HDC) System (If Equipped) 136
Horn 31
How to Read This Manual 2
How to Save Fuel and Extend Life of Vehicle 9

I

If Battery is Depleted 158
If Engine Coolant Temperature is High 157
If You Have a Flat Tire While Driving 152
If Your Vehicle Cannot Start Normally 160
Immobilizer System 72
Index 2
Inside Rear View Mirror 33
Installing Child Restraint System 57
Installing Towing Eyelet 163
Instrument Cluster Overview 22
Intelligent High Beam Assist (If Equipped) 42
Interior Lighting 41

J

Jetour authorized service station provides service for you 168

K

Keyless Entry 70

M

Maintenance Schedule 180
Measurement Range of Vehicle Overall Size Excluding Following Components 197
Microwave Window 189
Moon Roof Jam Protection Function 80

N

Never Drive Through Flooded Water 15
New Vehicle Break-in 8
New Vehicle Inspection 7
Normal Maintenance 168
Normal Starting and Turning Off 107

O

Off-road Driving 14
Opening/Closing Hood 99
Operation/Malfunction Indicator 27
Outside Rear View Mirror 34

P

Panoramic Moon Roof 79
Panoramic View Monitor System (If Equipped) 143
Parking on Slope 12
Parking Operations 11
Parking Radar System 146
Parking View Monitor System 141
Phone-link (If Equipped) 84
Pictorial Index 2
Polling Function (If Equipped) 70
Power Back Door (If Equipped) 99
Power Windows 75

R

Rear Collision Warning (RCW) System(If Equipped) 139

Rear Cross Traffic Alert (RCTA) System 138
Reflective Vest 151
Repair and Maintenance 168
Replacing Fuse 165
Replacing Wiper Blade 37

S

Safety Check 10
Safety Protection System Record 185
Seat Belt 48
Seat Belt Pretensioner (If Equipped) 53
Second Row Seat 46
Setting Interface 25
Smart Key 66
Spare Tools 152
Starting and Turning off in Emergency 108
Steering System 194
Steering Wheel Buttons 31
Storage Space 94
Suspension System 194
Symbols in the Manual 2

T

Table of Contents 2
Third Row Seat 48
Tire Chains 17
Tire Pressure Monitoring System (TPMS) 139
Tire Rotation 175
Towing Vehicle 161
Transmission 194

U

Unlocking Doors with Inside Handle 73
USB Port 97

V

Vacuum Booster 118
Vehicle Arming 71
Vehicle Body Dynamic Electronic Stability Program System 122
Vehicle Dimensions 190
Vehicle Identification Number (VIN) 188
Vehicle Performance 192
Vehicle Product Label 189
Vehicle Type 191
Voice Assistant 83

W

Warning Triangle 151
Wheel Alignment 195
Wheel and Tire 195
When Driving 11
When Driving on Slippery Road Surfaces 15
Window Jam Protection Function . 77
Window Remote Control Function 76
Winter Driving Tips 16
Wiper Operation 35
Wireless Charging (If Equipped) ... 93